



# Nikon Coolpix S4000 Battery Replacement

This guide will help you in replacing the battery for your Nikon Coolpix S4000 camera.

Written By: Matina Newsom



## INTRODUCTION

When having problems with the camera's power, replacing the battery is a good first step to follow. If you are not sure if you need to replace the battery or not we suggest taking a look at our [battery troubleshooting](#) page first.

Always remove the battery before moving onto replacing any other part of the camera.

## Step 1 — Battery



- Slide the battery door open with a finger or thumb and release it so the door opens.

## Step 2



- Push the orange tab back and the battery will pop out.

To reassemble your device, follow these instructions in reverse order.