



Garmin vívofit 2 Batteries Replacement

This guide demonstrates how to replace the batteries for a Garmin vívofit 2.

Written By: James Hickey



INTRODUCTION

This guide will explain how to replace the batteries of the Garmin vívofit 2 device. A Phillips #00 screwdriver and two replacement CR1632 Batteries will be needed. The process is straightforward and there are no hazards involved.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)



PARTS:


- [CR1632 Battery](#) (2)

Step 1 — Wristband



- Carefully peel back the wristband so the bottom of the device is facing you. Then, pull out the device from one side (on the short edge) and take the device out of the wrist band.

Step 2 — Batteries

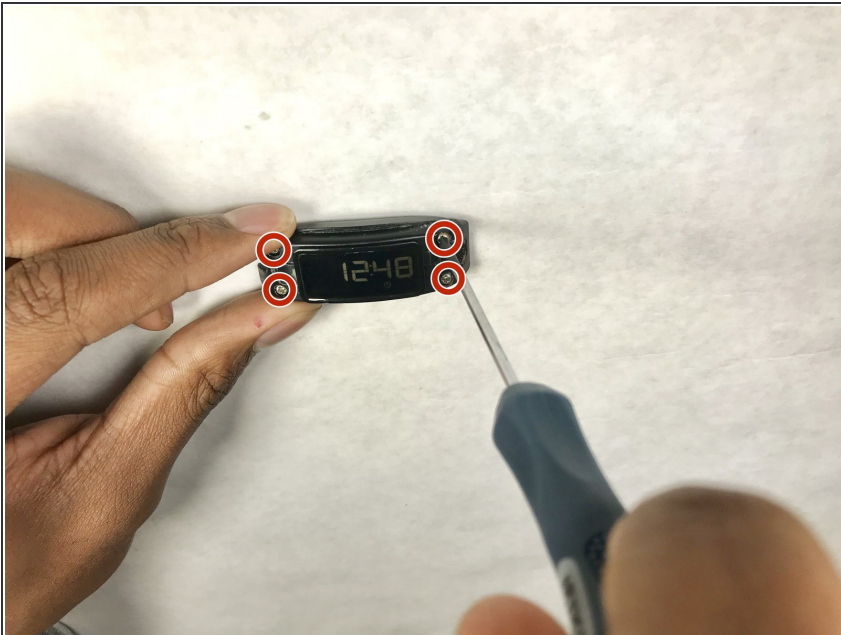

- Remove the four 3.8mm Phillips #00 screws holding the device together.

Step 3



- With the screws removed from the device, take the cover off the top of the device, revealing the batteries inside.

Step 4



- With the cover removed, take out the two batteries currently in the device. Take note of which side of the battery is facing which way in the device. Battery removal can usually be accomplished with your fingers. If not, carefully use a nylon spudger to pull up one edge of the battery, allowing you to remove that battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-11 11:03:43 AM.