



Kodak PixPro AZ251 Batteries Replacement

This guide provides instruction on how to remove the batteries from your Kodak PixPro AZ251.

Written By: Deborah Oliveira



INTRODUCTION

In this guide, you will learn how to remove and replace the batteries of your Kodak PixPro AZ251. Removing the batteries is the first step before completing other replacement guides.

Step 1 — Batteries



- Slide switch to open lock position.

Step 2



- Press down on the battery cover and slide outwards to open.

Step 3



- Remove the batteries.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-19 12:01:03 PM.