



Sony Cyber-Shot DSC-H1 Shutter Button Replacement

The shutter button is the button you press to take a photo. If the button needs replacement, here are the steps how.

Written By: Charlie Pugeda



INTRODUCTION

Use this guide to replace the shutter button of your camera. All you need is a plastic opening tool to remove the shutter button from your device.

TOOLS:

- [Spudger](#) (1)
-

Step 1 — Shutter Button



- Use a spudger to get a grip on the shutter button and twist clockwise.
- ⓘ When the new shutter button is laying flat over the hole, twist it counterclockwise to lock the button in.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 09:09:26 PM.