



Dell Inspiron 17-5748 RAM Replacement

Locate and replace RAM in a Dell Inspiron 17-5748

Written By: Skylar Cruz




INTRODUCTION

This guide will show how to access and replace RAM in this laptop. A couple of screws need to be removed but it is otherwise very simple.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — RAM

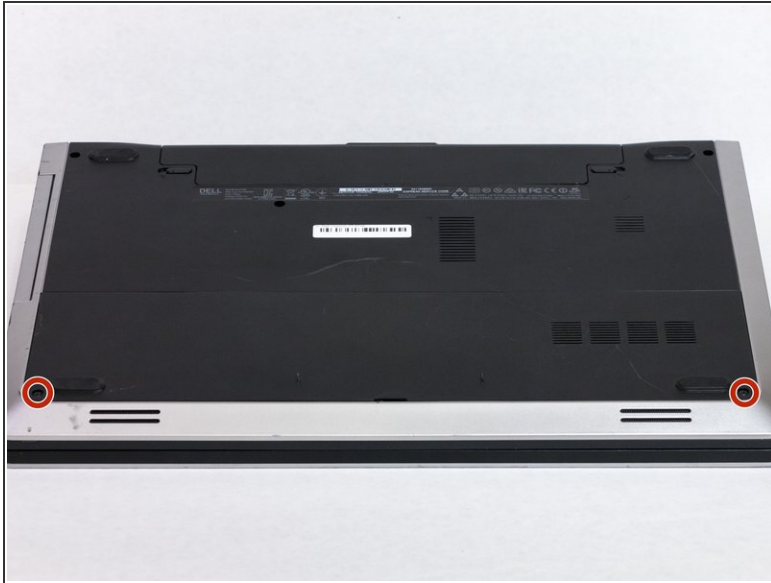

- Flip the laptop upside down.
- Remove the two 4.5 mm Phillips #0 screws on the access panel door.

Step 2



- Using the plastic opening tool, loosen the panel access door, starting at the center.
- Remove the panel.

Step 3



- Locate the RAM.
- Locate the clips securing the RAM.
- Slide the holding clips outward.

Step 4



- With the holding clips unfastened, lift the RAM from its socket.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-25 06:02:19 PM.