




Lenovo X200 Memory Replacement

How to upgrade or replace memory in the Lenovo X200.

Written By: James Finch

Note: Loosen the screws **1**, but do not remove them.

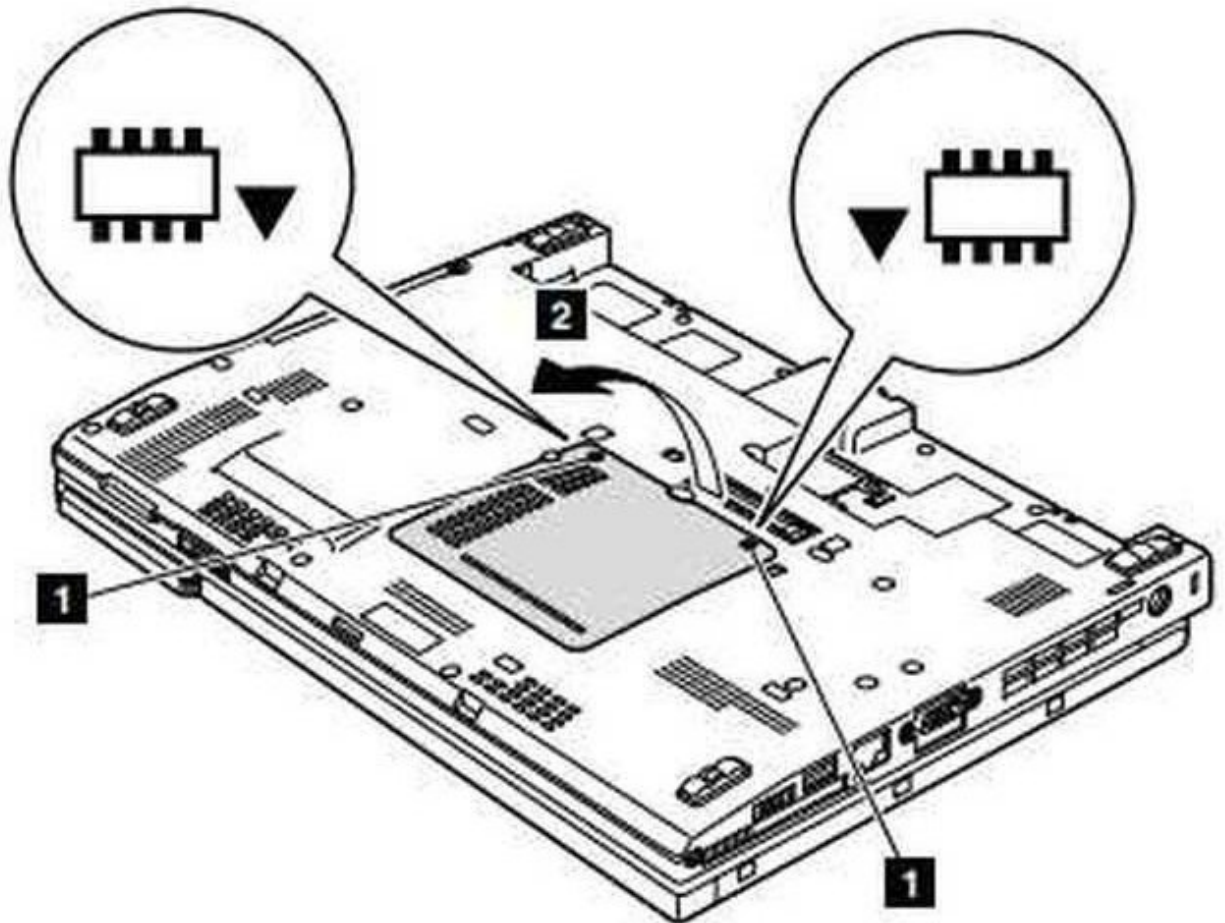

INTRODUCTION

This guide will document the process of upgrading or replacing memory in a Lenovo X200 laptop or tablet.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)

PARTS:

- [PC3-8500 DIMM RAM CHIP](#) (1)
-

Step 1 — Memory


Note: Loosen the screws **1**, but do not remove them.

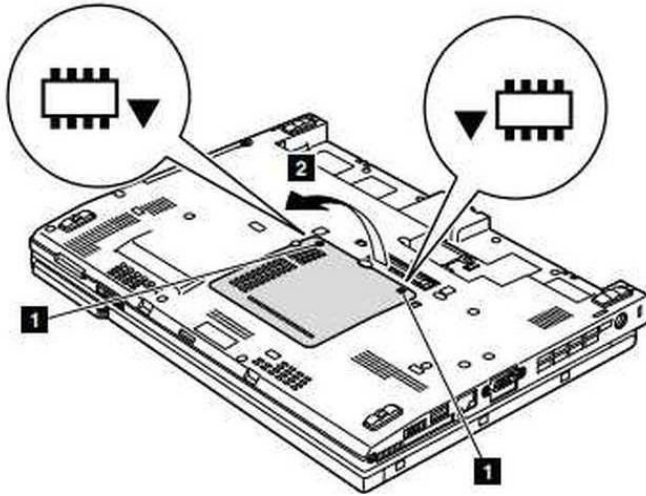

- 1. Unscrew the two phillips #1 size screws that hold the panel to access the two memory modules.


Step 2

Note: Loosen the screws **1**, but do not remove them.

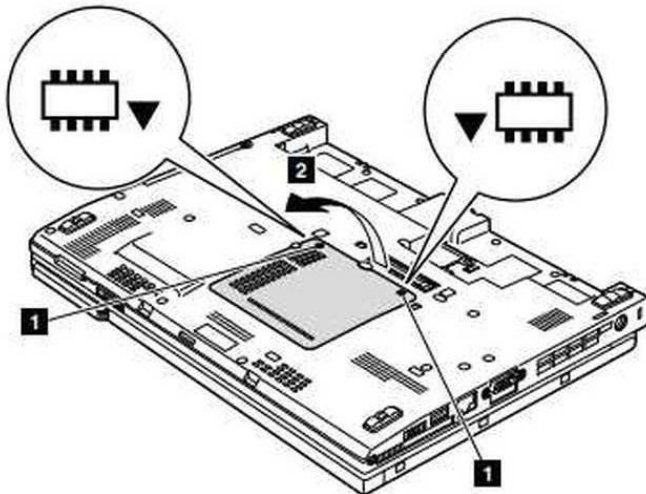

- 2. Remove the panel to access the memory modules.

Step 3

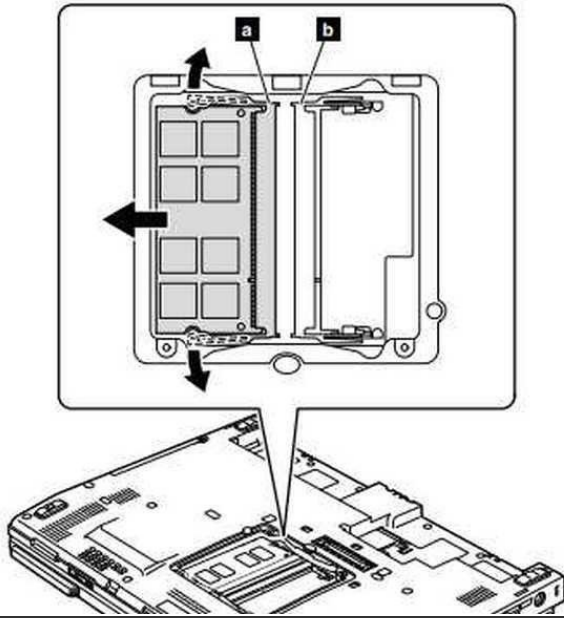

- Note: If only one DIMM is used on the computer, the card must be installed in SLOT-0 (**a**), not in SLOT-1 (**b**).
- Remove DIMM by gently spreading the socket connectors up and down as shown in the direction of the arrows and pull the DIMM out.
- Insert the notched end of the DIMM into the socket.
- Press the DIMM firmly, and pivot it until it snaps into the place.
- Make sure that it is firmly fixed in the slot and does not move easily.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-11 09:37:58 AM.