



Sony Cyber-shot DSC-H300 Batteries Replacement

This guide will show how to remove and place new batteries into the Sony Cyber-shot DSC-H300.

Written By: Zachary Meyer



INTRODUCTION

This is a step by step guide showing exactly how to replace the batteries located inside the camera. This guide is relatively easy and shouldn't take very much time. If the camera is displaying incorrect battery percentages or dies unexpectedly please check out the [troubleshooting guide](#) for assistance.

Step 1 — Batteries



- Flip the camera over to look at the bottom side.

Step 2



- Place thumb on battery cover and slide outward until it springs open.

Step 3



- Remove the batteries.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-23 03:27:24 AM.