




Dell Alienware M18x Memory Modules Replacement

Written By: Teren Wallace

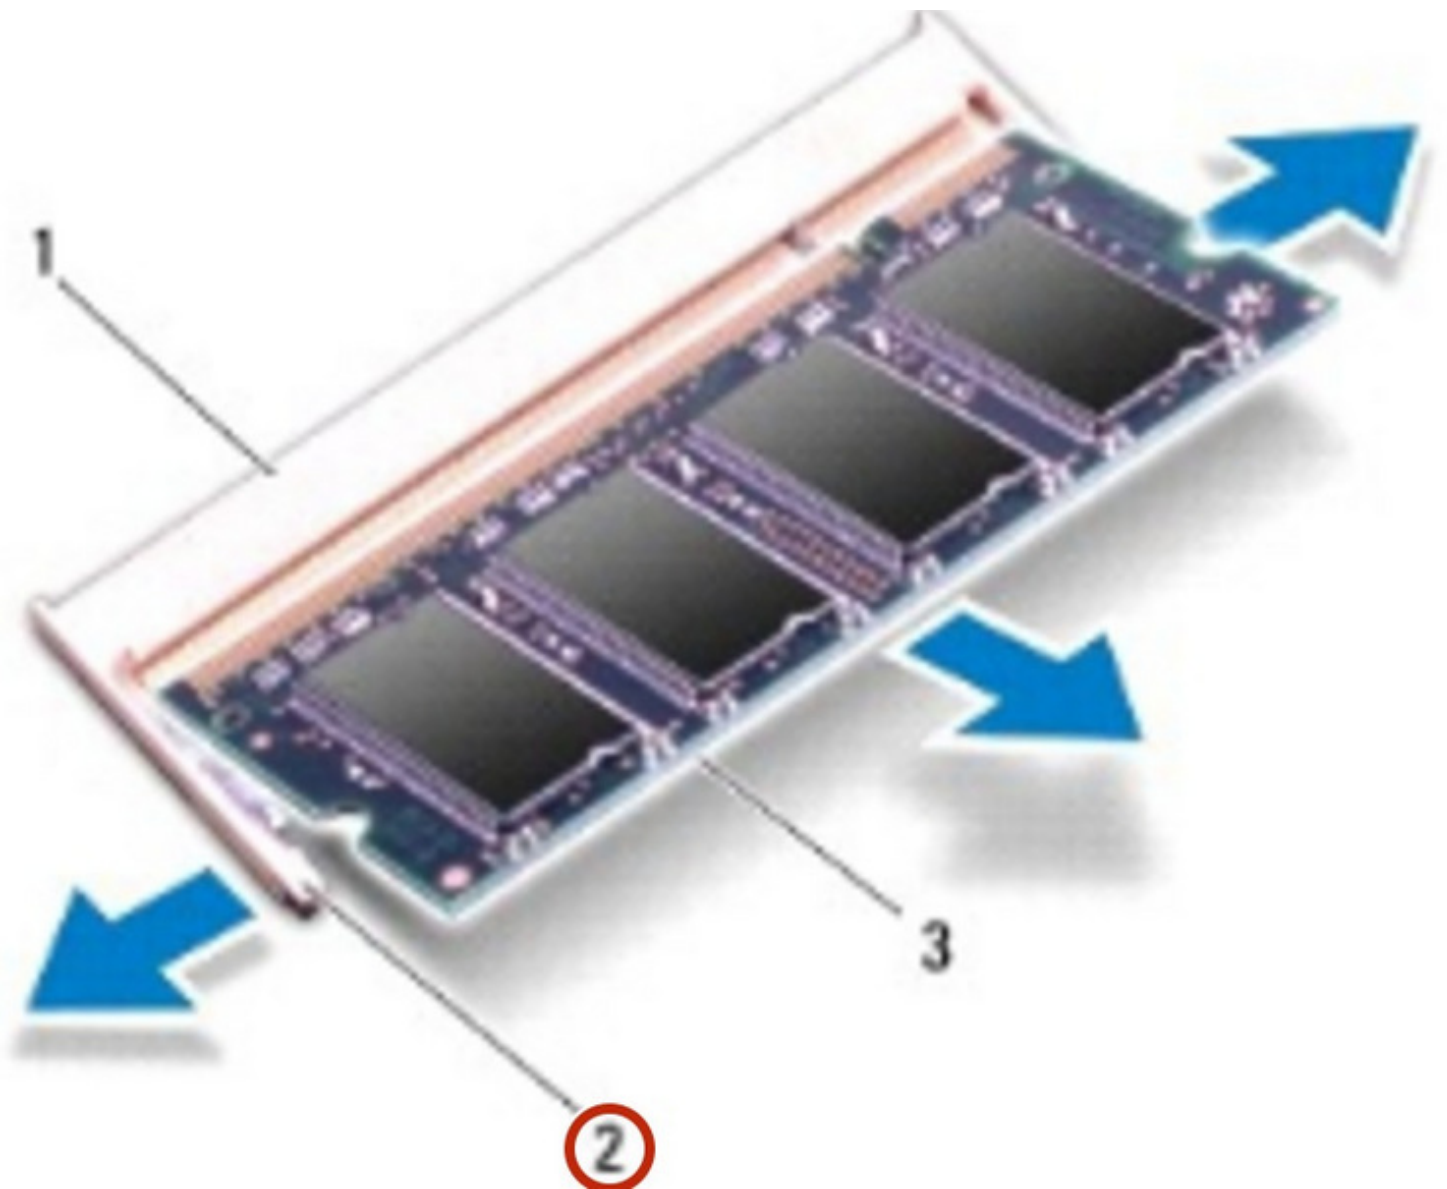


INTRODUCTION

In this guide, we will show you how to remove and replace the Memory Modules.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Popping up the Memory Module

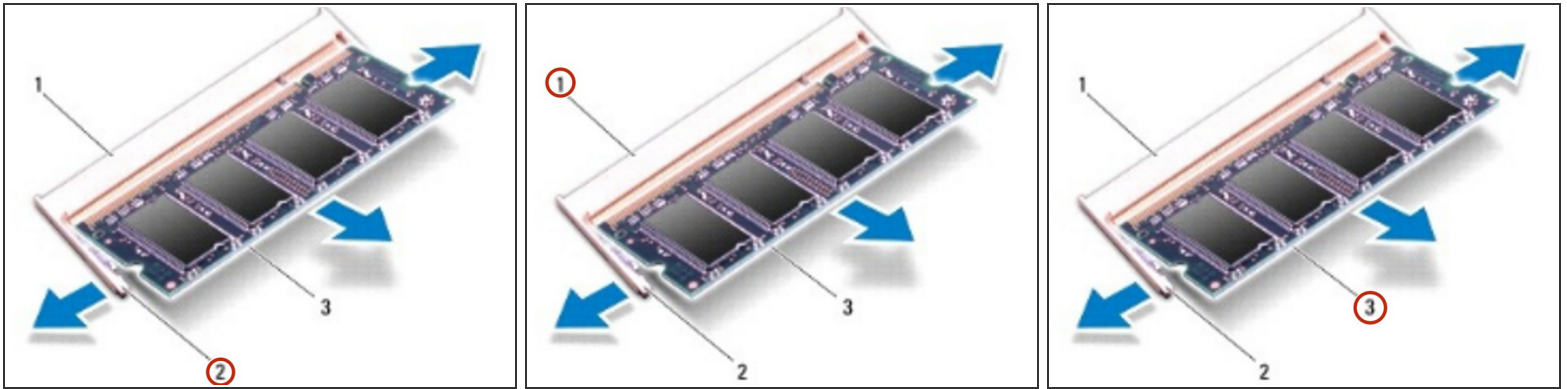


i Follow the instructions in [Before You Begin](#).

! **CAUTION:** To prevent damage to the memory-module connector, do not use tools to spread the memory module securing clips.


- Using your fingertips, spread apart the securing clips on each end of the memory-module connector until the memory module pops up.

Step 2 — Align the Notch

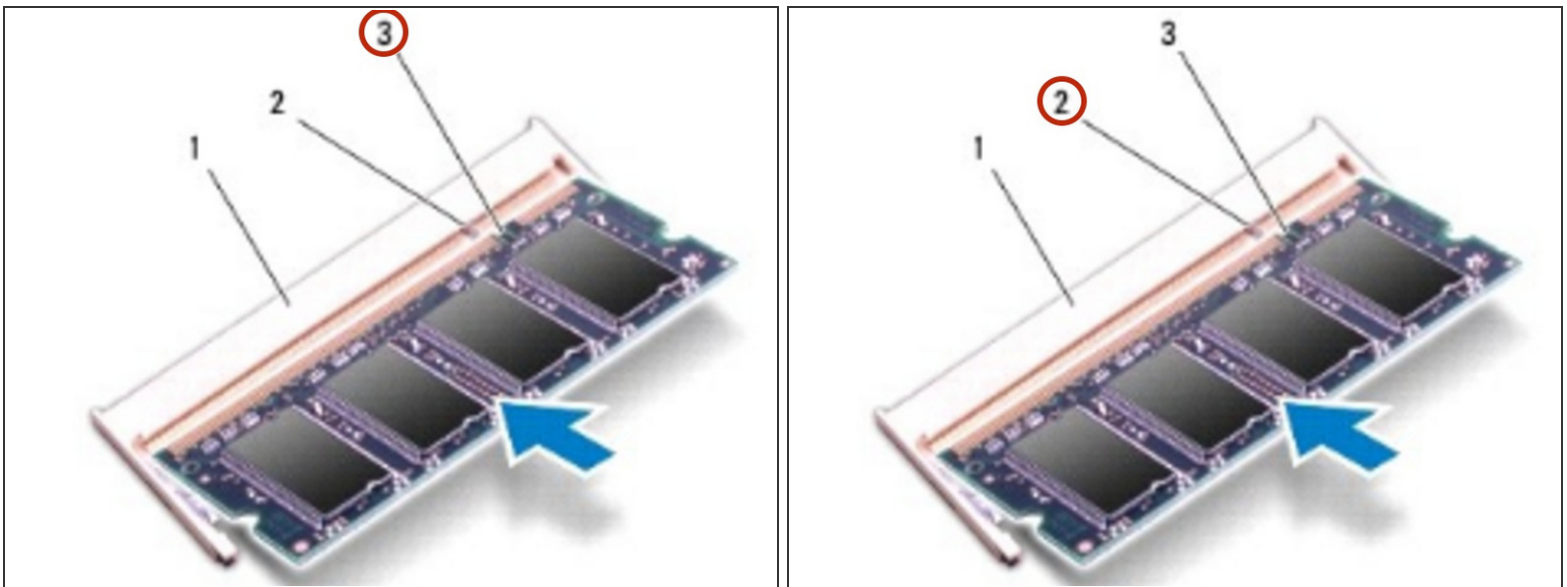

- Align the notch in the **NEW** memory module with the tab in the memory-module connector.

Step 3 — Sliding the Memory Module

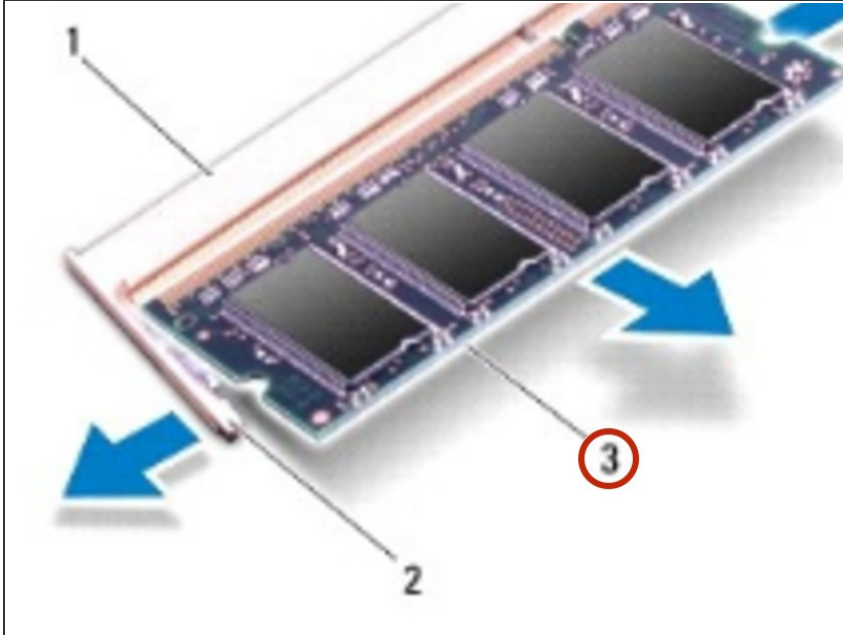

- Slide the memory module into the connector at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.

ⓘ NOTE: If the memory module is not installed properly, the computer may not boot.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-23 03:27:41 AM.