




# Dell Alienware M18x R2 Battery Pack Replacement


Written By: Terrence15

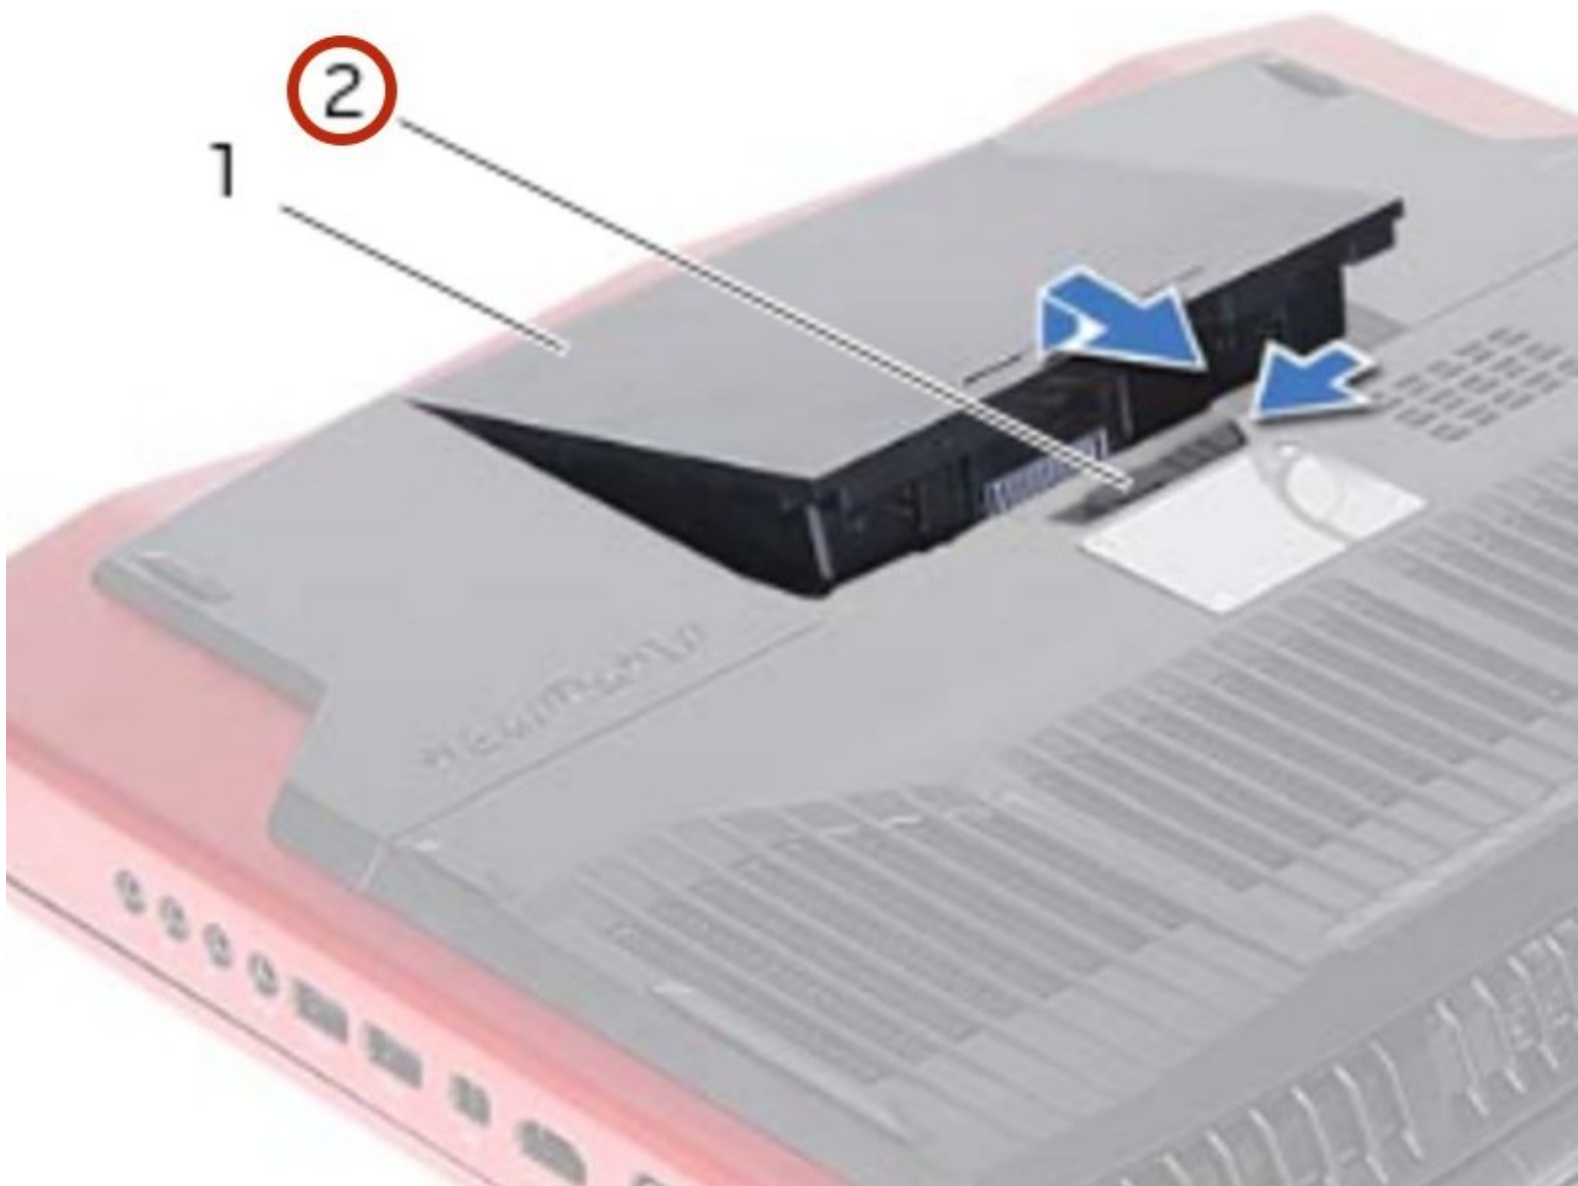

## INTRODUCTION

In this guide, we will show you how to remove and replace the Battery Pack.


## Step 1 — Sliding the Battery Latch

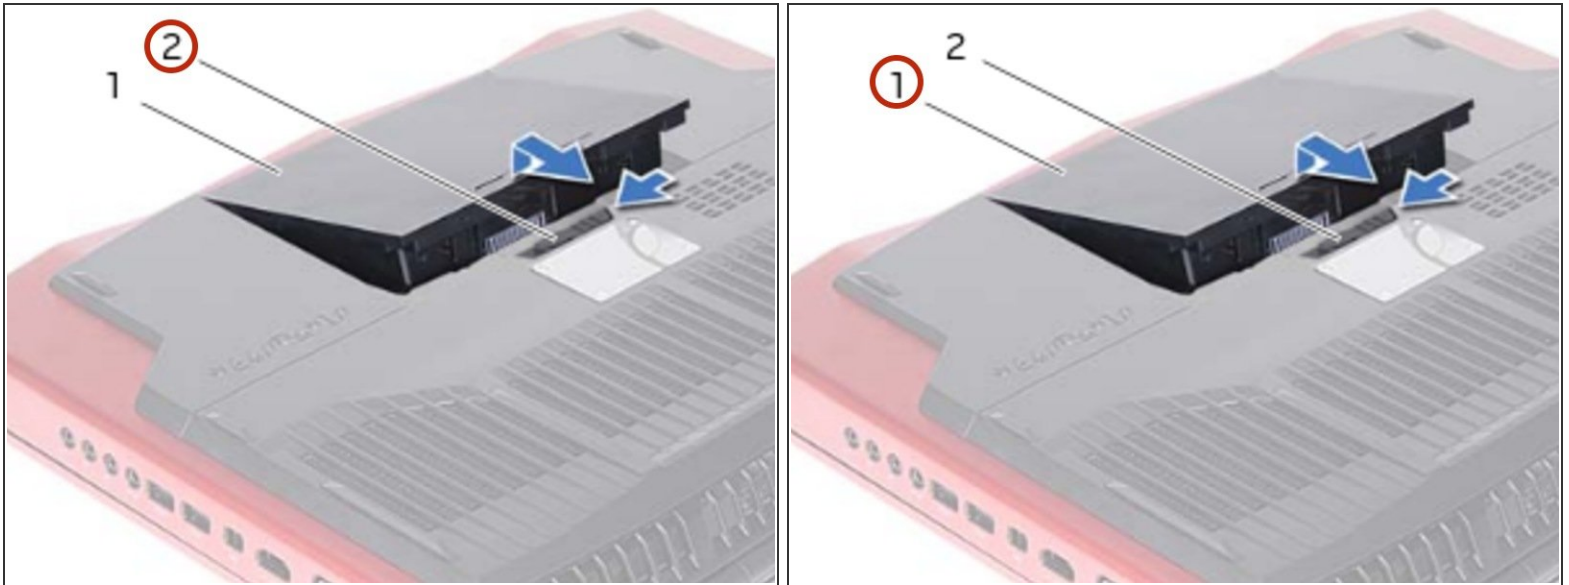

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before You Begin](#).

- Slide the battery latch to the unlock position. The battery pack pops up.

## Step 2 — Sliding the Battery Pack

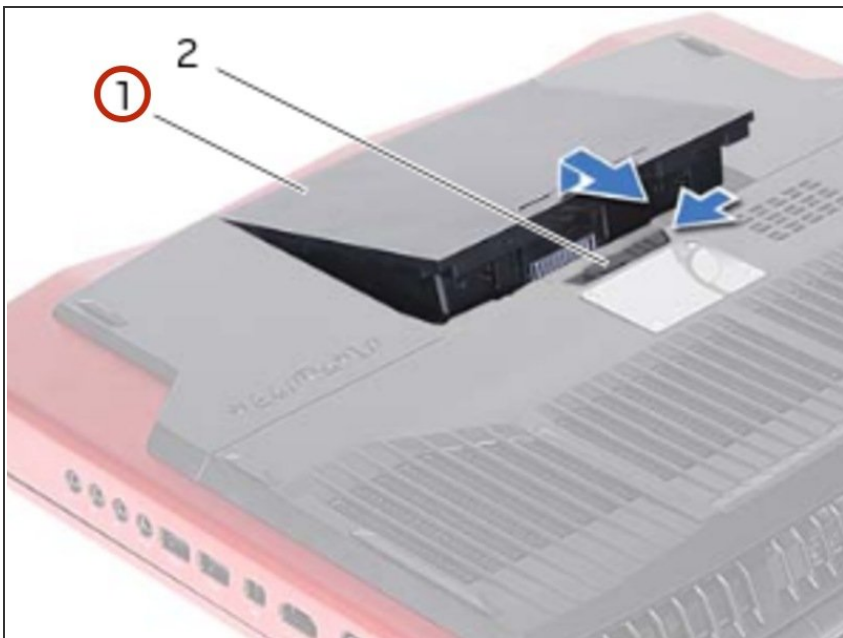

- Lift and slide the battery pack away from the battery bay.

### Step 3 — Align the Tabs



**⚠ CAUTION:** To avoid damage to the computer, use only the battery designed for this particular Alienware computer.

- Align the tabs on the **NEW** battery with the slots on the battery bay and snap the battery into place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-25 07:36:39 PM.