



nikon s3700 LCD Display Screen Replacement

Step by step guide for replacing your damaged Nikon S3700 LCD Display Screen

Written By: Sales Cameraparts4you



INTRODUCTION

Step by step guide for replacing your damaged LCD Display.

TOOLS:

- - [Size Ph000 Phillips head screwdriver](#) (1)
 - [Latex or nitrile gloves](#) (1)
 - [Essential Electronics Toolkit](#) (1)
-

Step 1 — Removing the Screws



- group screws according to color code.
- Remove exterior screws

Step 2 — Replace LCD



- Remove Rear casing.
 - Flip over rear options panel to expose LCD ZIF clamp.
 - Flip open the clamp of the ZIF connector and slide the ribbon cable out.
- ⚠ The ZIF clamp is very fragile so please use caution when releasing the ZIF clamp. It breaks easily.
- Remove the LCD.

To reassemble your device, follow these instructions in reverse order.

