



# Lenovo ThinkPad T410s DVD Drive Replacement

This guide will show you how to remove the DVD drive from your ThinkPad so you can clean or replace it.


Written By: Jared Quintana



## INTRODUCTION

Is your ThinkPad not able to read DVD's? Or maybe the drive itself won't open. Here is a [guide](#) to diagnose any of these problems. Usually, the problem is either the drive tray or the motor. In order to fix those, you will need to use this guide to remove the DVD drive.

## Step 1 — Battery

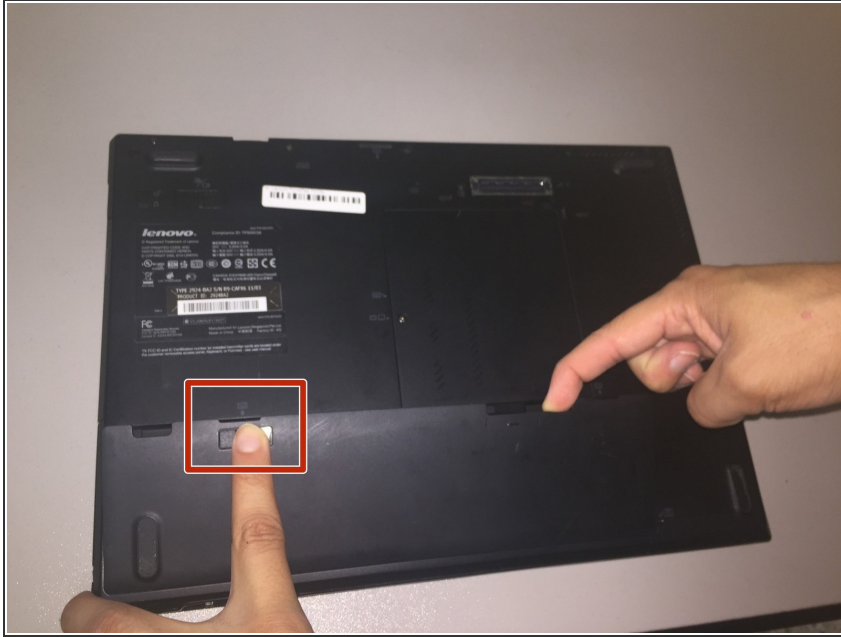

- Flip the laptop over.
- Push and hold the locking switch to the left.
- Pull the battery out with your other hand.

## Step 2 — DVD Drive



- Push the lock switch up.
- Slide the switch to the left to eject the drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-20 07:37:10 AM.