



Dell XPS M1730 Battery Replacement

Replace the battery in your Dell XPS M1730 in order to restore power to your device.

Written By: Ashley Hoffman



INTRODUCTION

Before you begin the battery replacement process, be sure to ground yourself. Grounding yourself prevents short circuiting the device, and/or shocking yourself. An easy way to do so would be to remove one of your shoes.

TOOLS:

- [2 Hands](#) (1)
-

Step 1 — Battery



- Push the sliding button near the battery compartment.

Step 2



- Slide the button next to the battery and lift up on the lip of the battery edge.

Step 3



- Lift and remove the battery.

To reassemble your device, follow these instructions in reverse order.