



CyberPowerPC Fangbook MS-1763 Battery Replacement

This guide will instruct you on how to remove and replace the battery in a CyberPower Fangbook MS-1763

Written By: Dorcas Oduntan




Step 1 — Battery



- ❗ Save all of your work and turn off the laptop before beginning.
- Close the laptop and flip it so that the bottom side is facing up.
- Locate the battery compartment.

Step 2

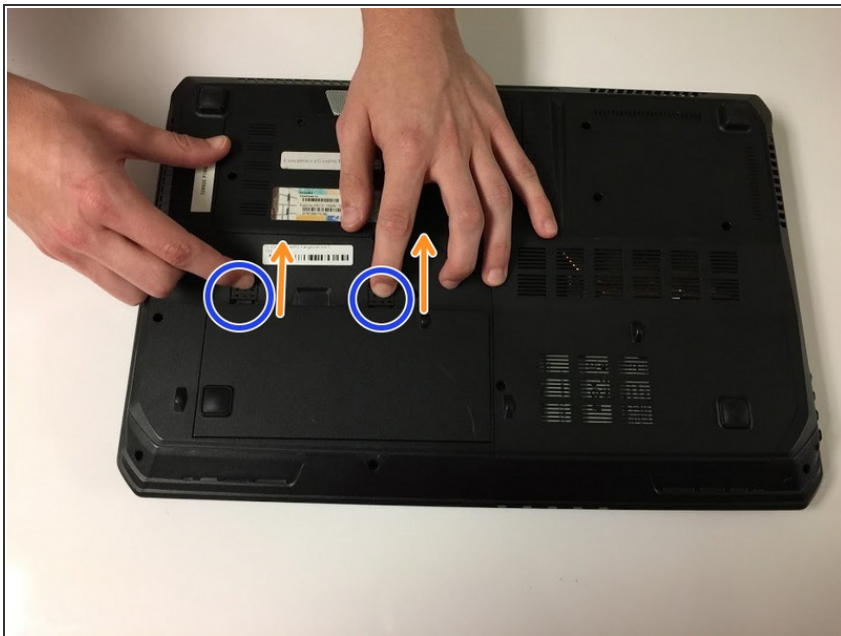

- Find the two latches at the top of the battery compartment.
- Pull the latches away from the battery compartment as shown by the orange arrows. The lid of the compartment should pop out of place.

Step 3



- Tilt the lid so that it leans away from the laptop and exposes the battery below.
- Remove the battery from the newly opened compartment.

Insert a new battery and close the compartment lid to complete.

This document was last generated on 2018-10-19 09:18:20 AM.