




# Dell Inspiron 10z 1120 Battery Replacement

Written By: Terrence15

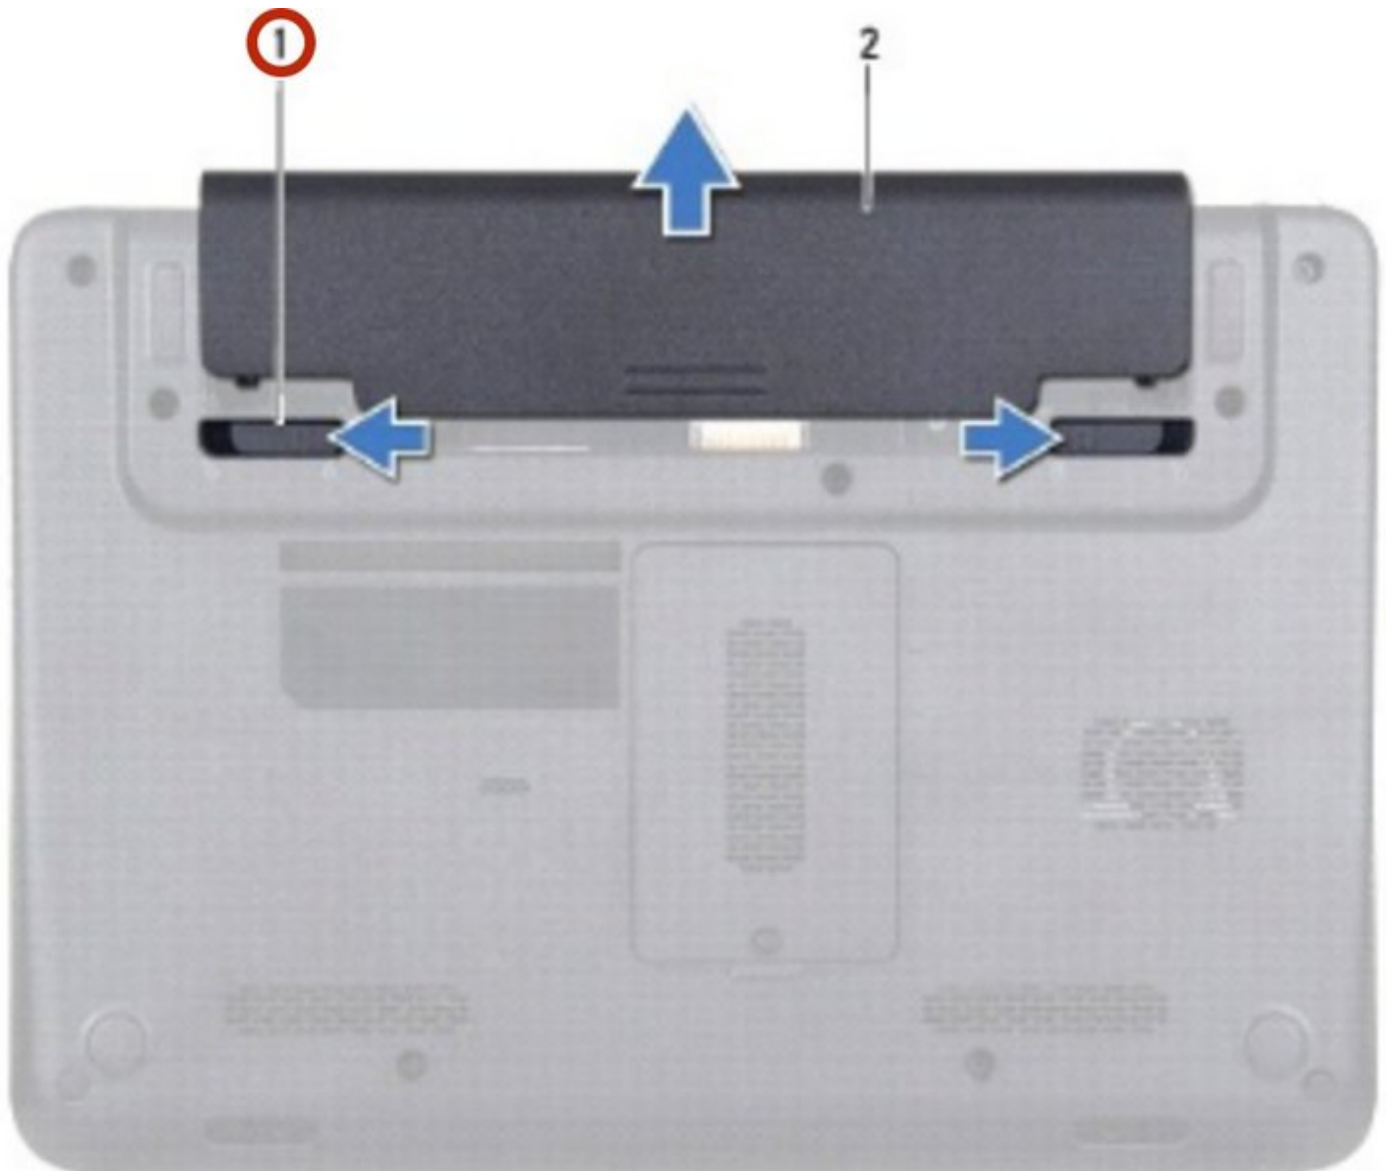

---

## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.


---



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Slidign the Battery Latches

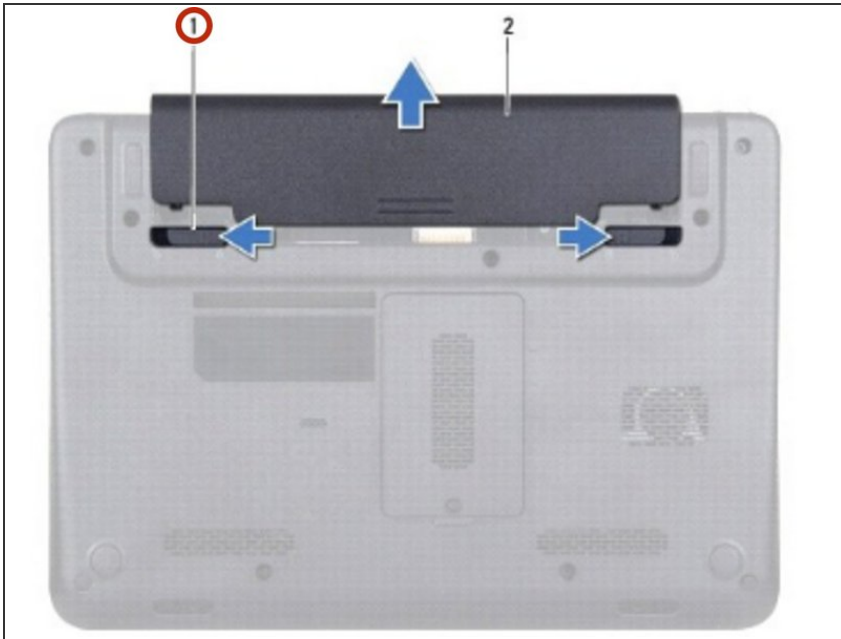

- ⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer.
- ⚠ CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).
- Slide the battery release latches to the unlock position.

## Step 2 — Sliding the Battery

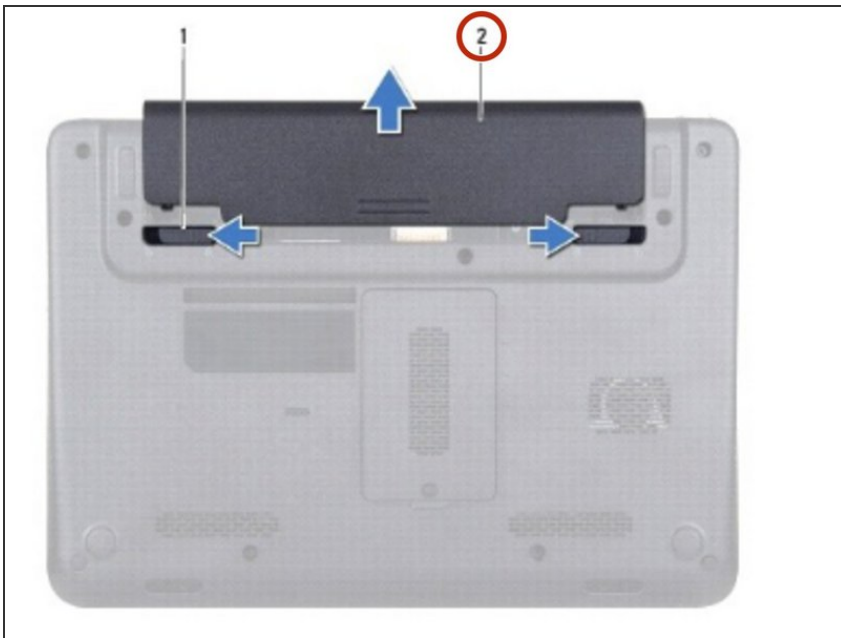

- Slide the battery out of the battery bay.

### Step 3 — Sliding the Battery



- Slide the **NEW** battery into the battery bay, until it clicks into place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-12 06:46:44 AM.