



Opening the Case

How to open the case of a Nikon Coolpix 4100

Written By: Travis Buck



 **TOOLS:**

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Opening the Case



- Tool on left - PH000 screwdriver
- Tool on right - iPod fix-it tool
- Soldering Iron

Step 2



- Locate the 3 black screws on the bottom of the camera and the 2 gray screws on each side of the camera. Remove them with a PH000 screwdriver.

Step 3



- Locate the gray band that you removed the screws from; this holds the two halves of the camera together. Use an iPod fix-it tool to pry the gray band loose and remove it.

Step 4



- Use the iPod fix-it tool to separate the back panel from the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-21 08:42:23 AM.