




# Dell Inspiron 11-3138 Battery Replacement

Written By: Terrence15

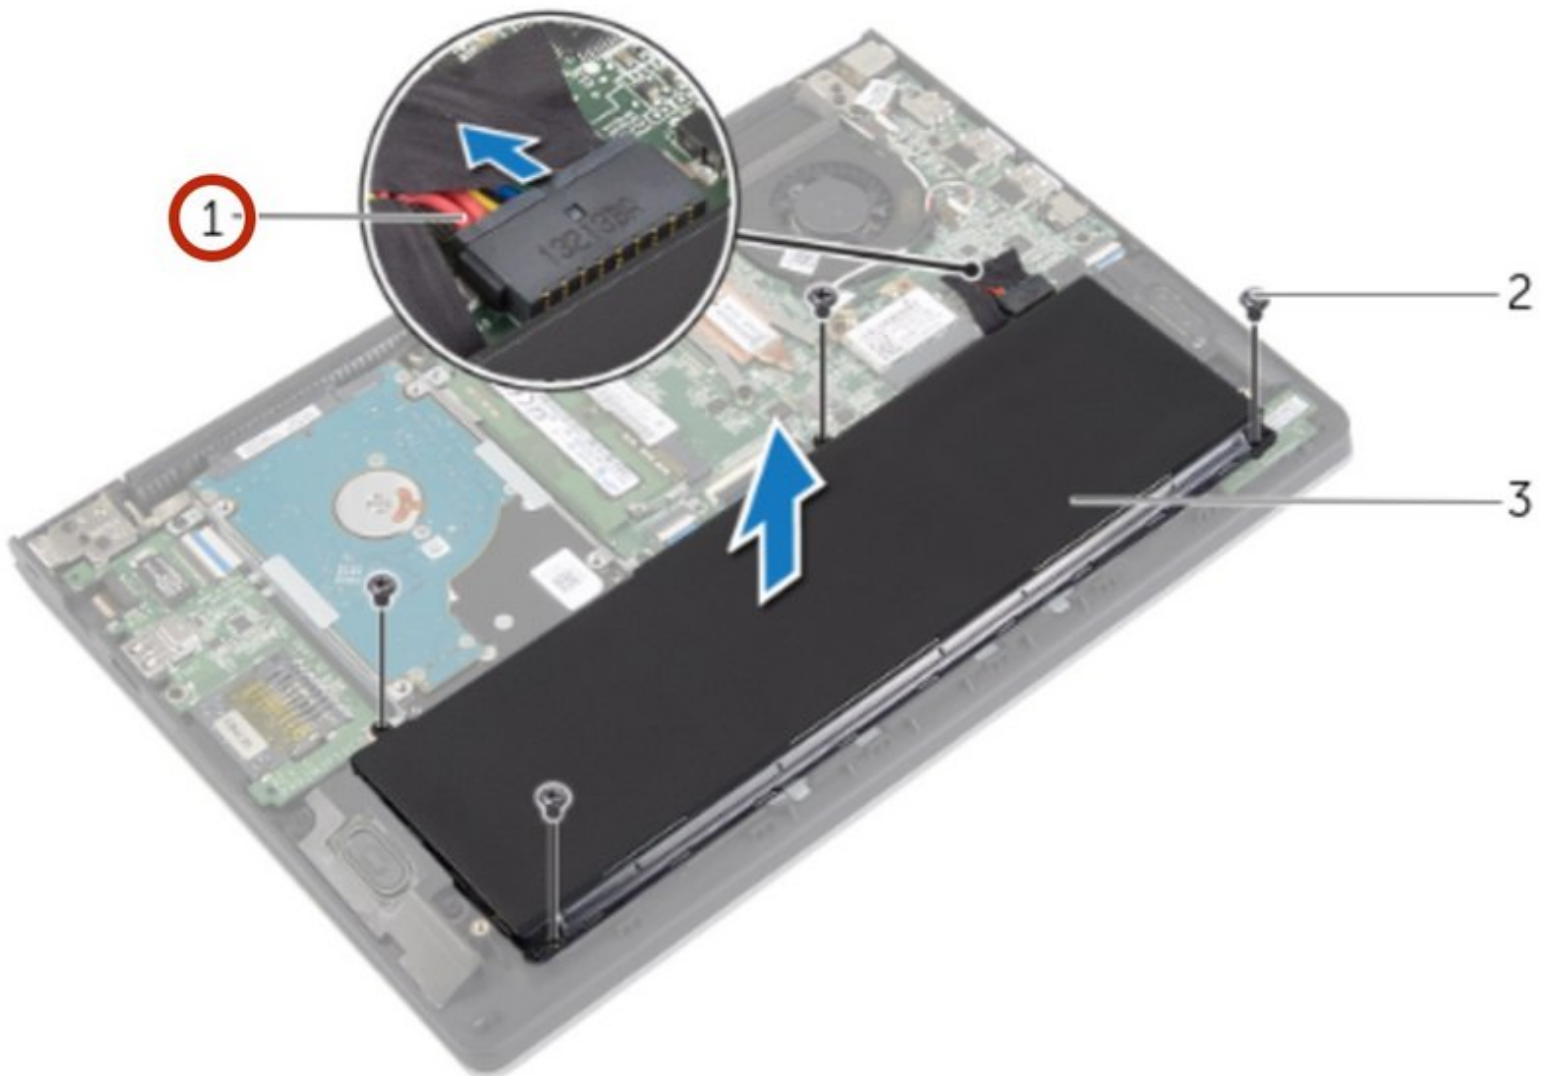

---

## INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.


---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


## Step 1 — Disconnect the Battery Cable

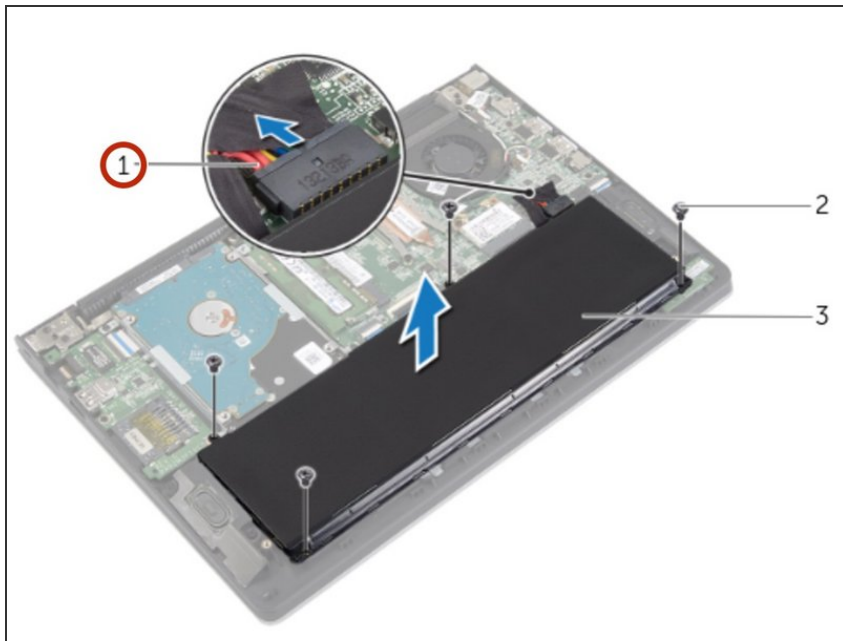

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before Working Inside Your Computer"](#). After working inside your computer, follow the instructions in ["After Working Inside Your Computer"](#).


- Disconnect the battery cable from the system board.

## Step 2 — Remove the Screws

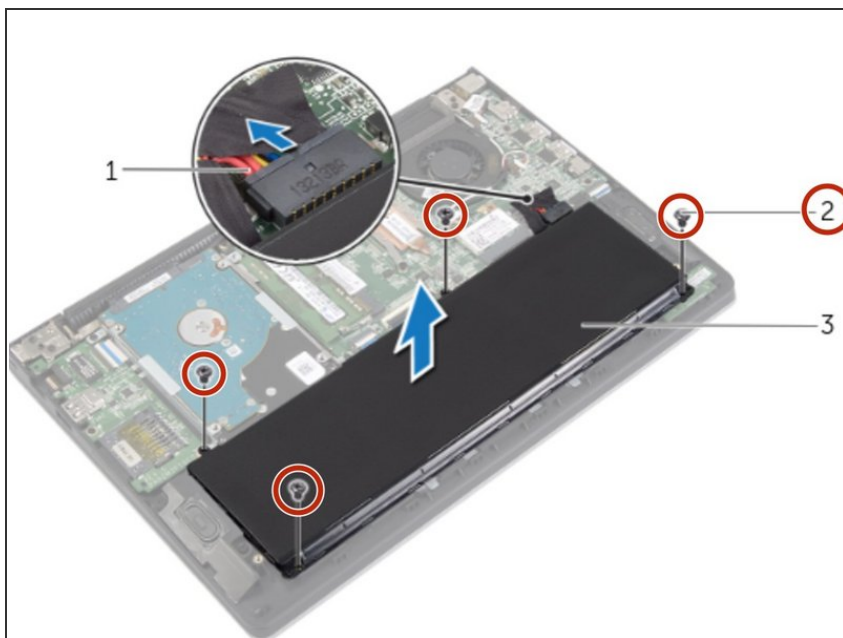


- Remove the screws that secure the battery to the palm-rest assembly.

### Step 3 — Lifting the Battery

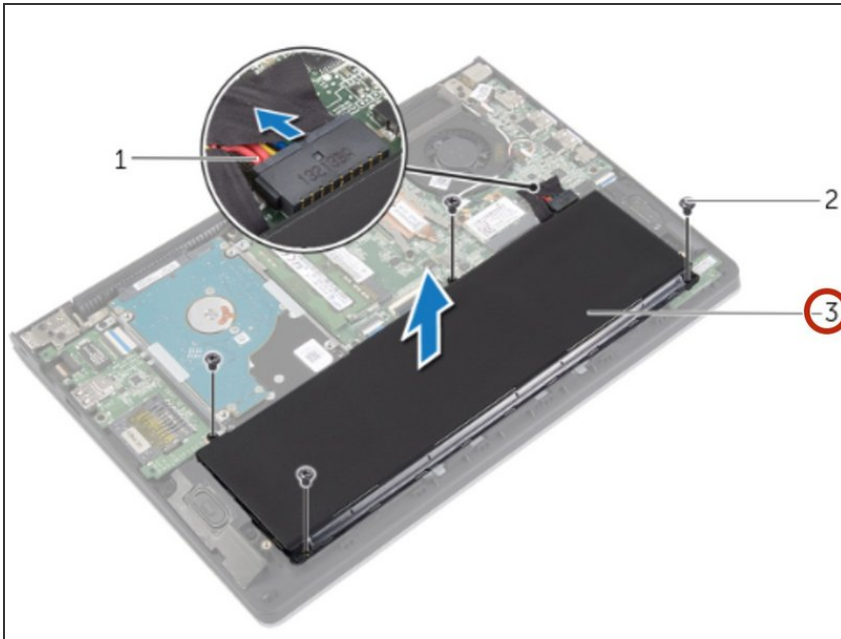


- Lift the battery, along with its cable, off the palm-rest assembly.

### Step 4 — Grounding the System Board

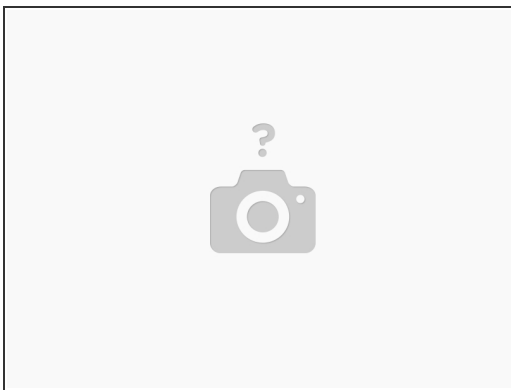


- Turn the computer over, open the display, and press the power button for about five seconds to ground the system board.

## Step 5 — Align the Screw Holes

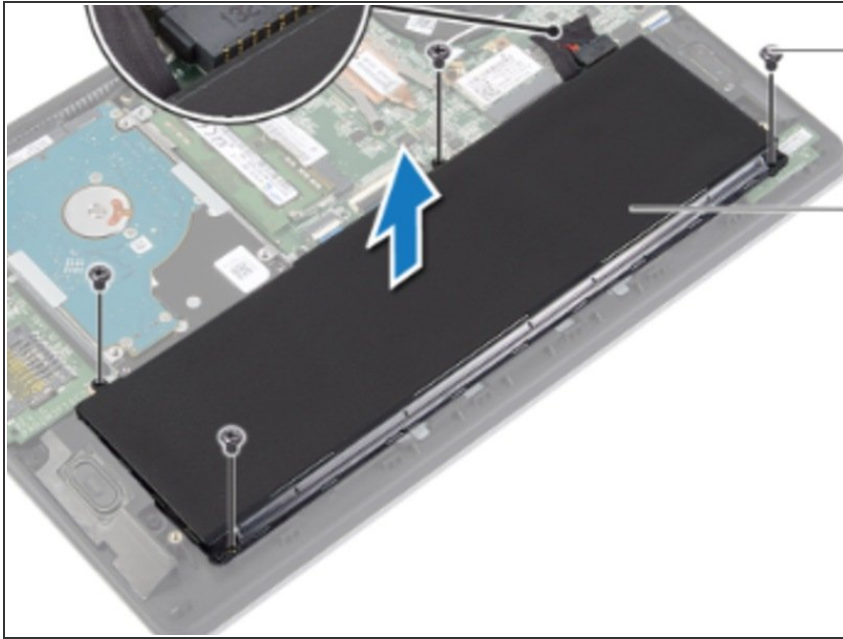


- Align the screw holes on the battery with the screw holes on the palm-rest assembly and place the battery on the palm-rest assembly.

## Step 6 — Replace the Screws

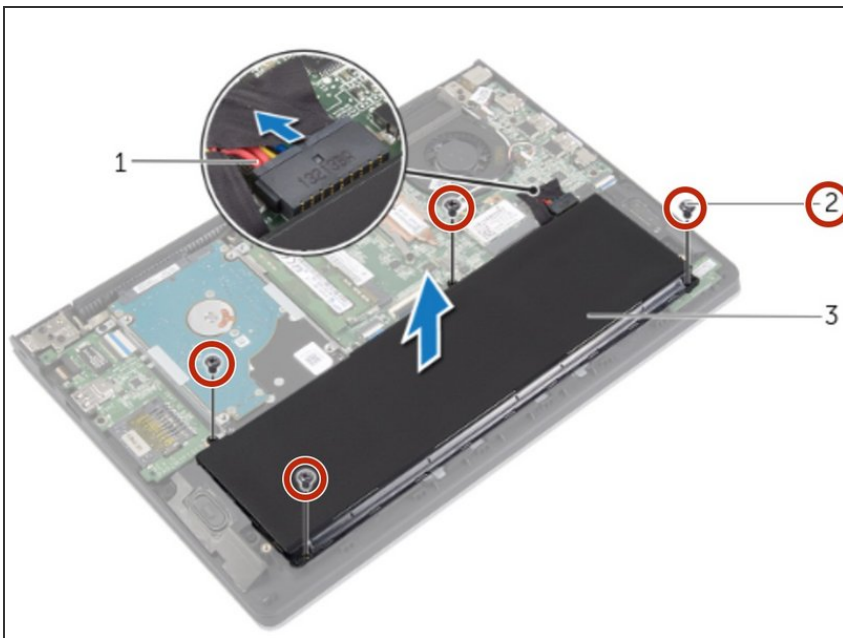

- Replace the screws that secure the battery to the palm-rest assembly.

## Step 7 — Connecting the Battery Cable

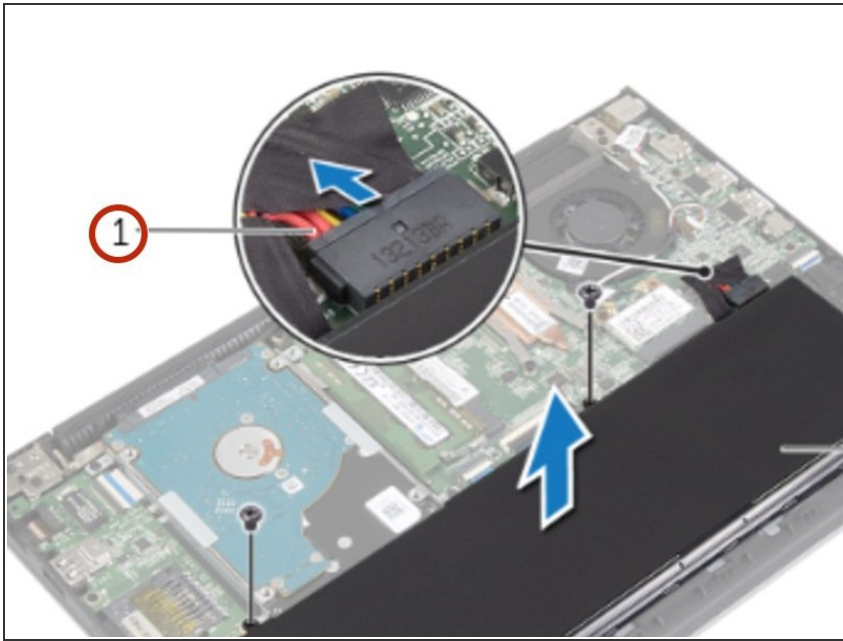

- Connect the battery cable to the system board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-22 09:25:38 AM.