



# Sony Cyber-shot DSC-WX220 Outer Case Replacement

These steps show how to remove the outer case.

Written By: Kate Glazer



---

## INTRODUCTION

This guide shows how to replace the outer case if damaged.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- Slide the gray switch from lock to open position.

## Step 2




- Pull down on the blue tab to release the battery.

### Step 3 — Outer Case



- Use a PH00 screwdriver to remove the five 3.5 mm screws.
- Use a PH00 screwdriver to remove the two 2.5 mm screws.

### Step 4

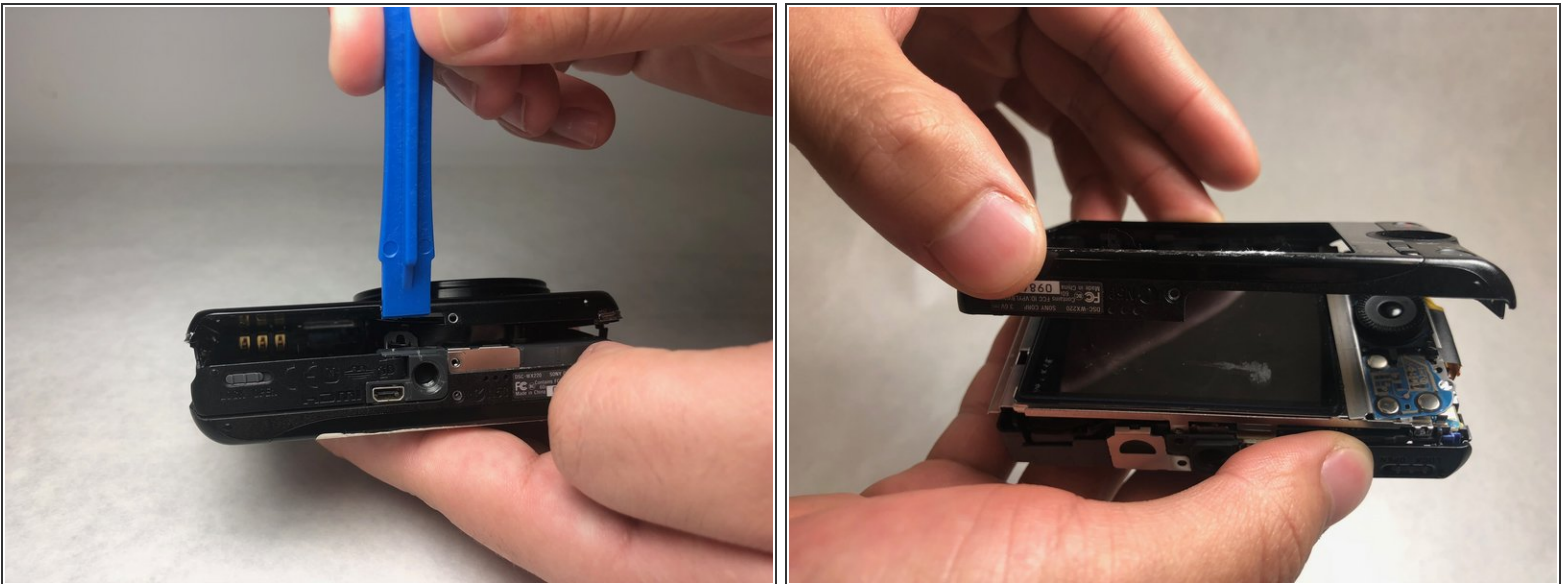

- Pry apart the case gently using a plastic opening tool.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-22 03:12:24 AM.