



Archos Jukebox Recorder 20 Button Panel Replacement

In this guide we will demonstrate how to replace the front button panel.

Written By: Bryant Bucci



INTRODUCTION

This guide will show you how to replace the front button panel.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Remove the plastic cover over the batteries on both sides of the device.

Step 2

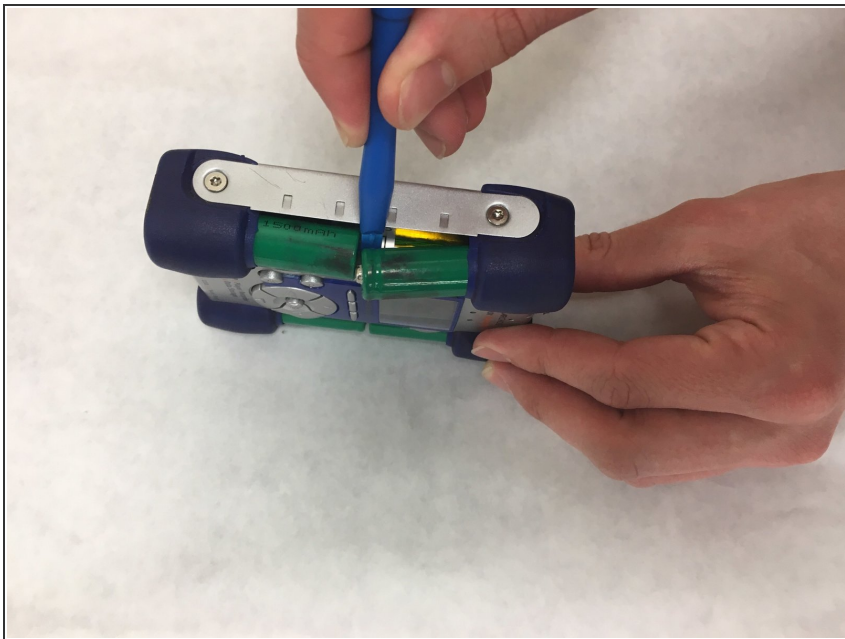


- Remove the batteries (may require a plastic opening tool or spudger to pop the batteries out).

Step 3 — Button Panel




- Using the Philips Screwdriver, remove the top 2 screws.
- ⓘ The screws are very small (2.5mm), put them somewhere you won't lose them.

Step 4

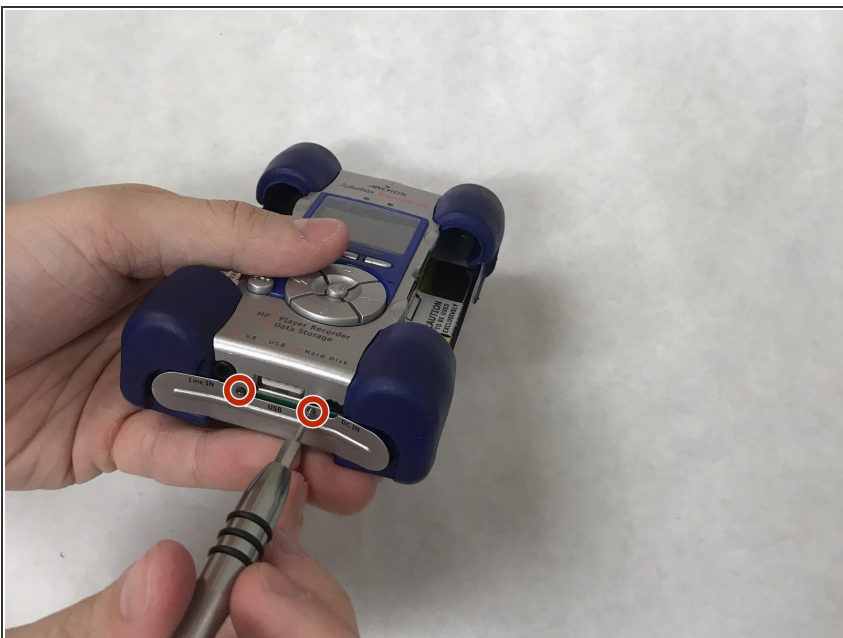

- Using the Philips screwdriver, remove the bottom 2 screws (2.5mm).

Step 5

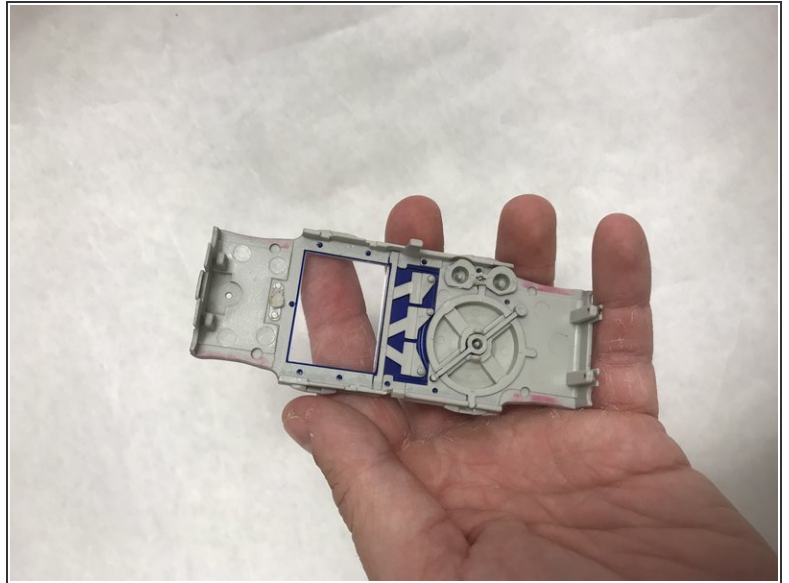

- Remove the face.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-17 01:32:20 AM.