



Memorex CD Alarm Clock Radio Disassembly

This guide will instruct you how to take apart your Memorex CD Alarm Clock Radio


Written By: Shawn Vernon



 **TOOLS:**

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Memorex CD Alarm Clock Radio Disassembly

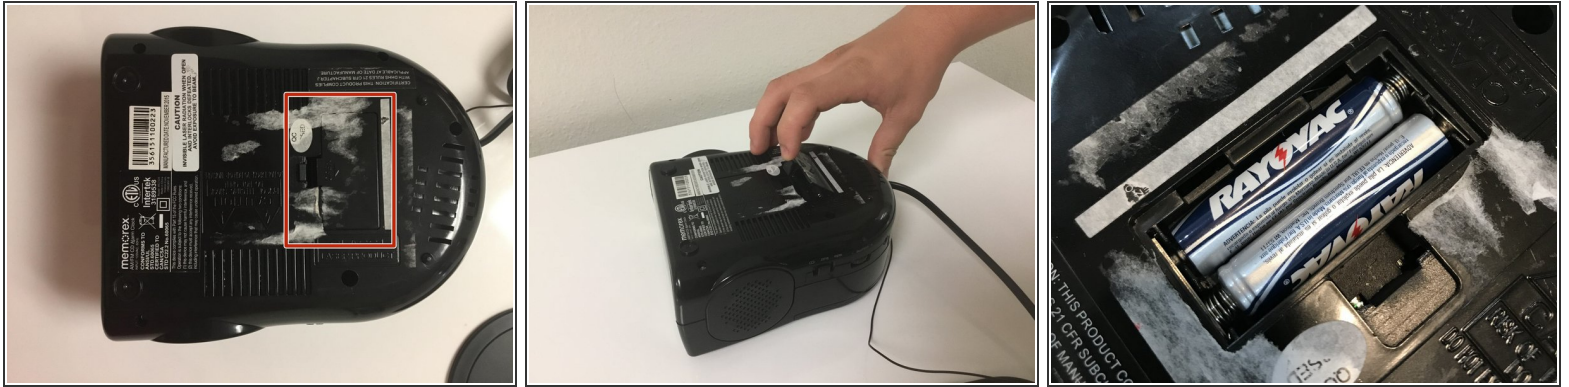

- Locate the 'OPEN' tab on the battery compartment.
- Pull the tab upwards and remove the cover using your finger.
- Remove the batteries.

Step 2



- Locate the screws on the bottom of the device that hold the upper and lower halves together.
- Remove the (5) 19mm screws.
- Grasp the top and bottom and gently pull apart.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-23 03:19:11 AM.