



Sony Vaio PCG-61411L Battery Replacement

How to remove a Sony Vaio PCG-61411L battery.

Written By: Sean Lyon




INTRODUCTION

After a year of use, the battery may start to malfunction. This replacement guide will instruct you how to remove and replace the battery in your device.

Step 1 — Battery



 Be sure to disconnect the device charger and power down the device before beginning.

- Turn the device over onto its back, where the battery is at the top of the device. Slide the "lock" switch to the right.

Step 2



- Slide the "release" switch to the left and gently lift the battery up to remove it.
- Completely remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.