




HP Pavilion g4-1117dx L-Shaped Back Panel Replacement

How to remove the HP Pavilion g4-1117dx L-shaped back panel.

Written By: Robert Hamilton

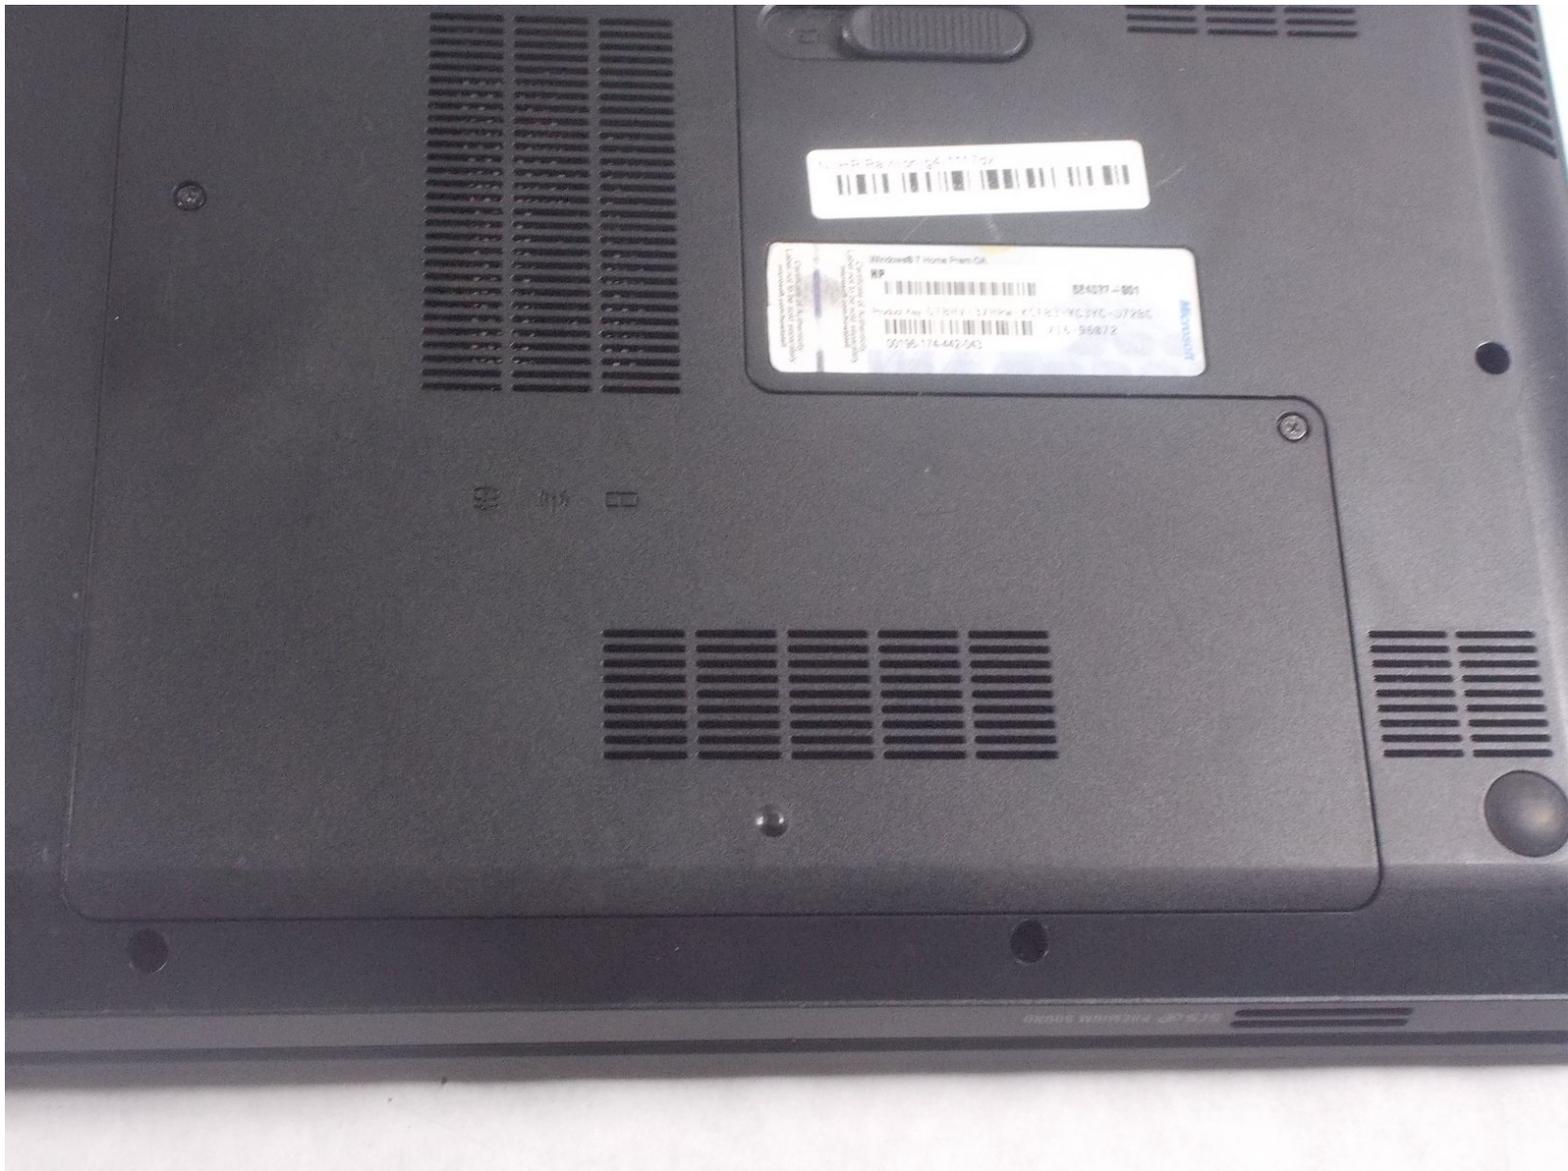

INTRODUCTION

The smaller L-shaped back panel is just the icing of the cake. It covers the HDD and some other small screws that help keep the entire back panel in tact. This part of your device is very simple to remove.

TOOLS:

- [JIS #0 Screwdriver](#) (1)

Step 1 — L-Shaped Back Panel



- Unscrew the two screws JIS #0 located on opposite sides of the panel.
- ⓘ Screws are attached to the panel and will not fully come out.

Step 2



- Carefully pry off the L-shaped panel.

To reassemble your device, follow these instructions in reverse order.