



Alcatel Pop 4 Plus Battery Replacement

Use this guide to help you replace the battery in your Alcatel Pop 4 Plus.

Written By: Christopher Marcello




INTRODUCTION

If your battery life doesn't last like it used to then this guide will show you how to take out your Alcatel Pop 4 Plus Battery for replacement with out damaging phone. It a simple process of removing the outside cover, secondary cover, and then swapping out the battery for a new one.

TOOLS:


- [Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery

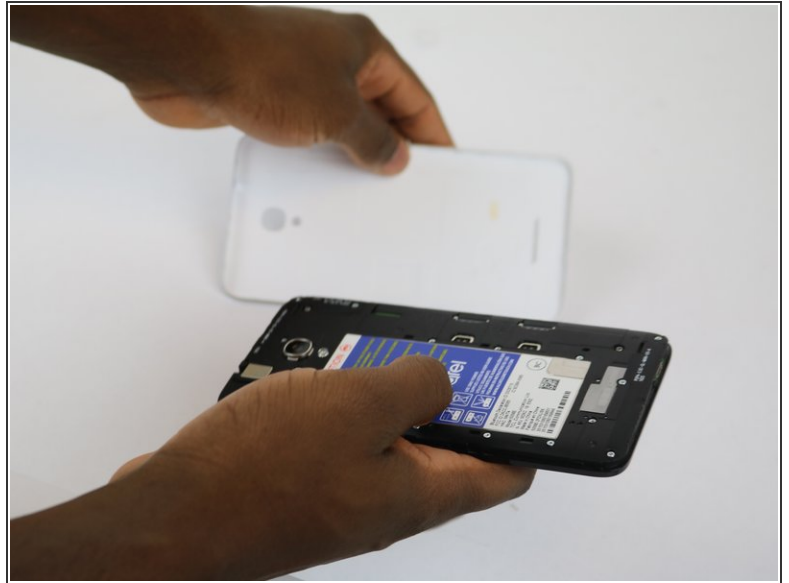


- Remove the back cover by sliding your fingernail in the groove around the edge of the phone and prying it off.

Step 2

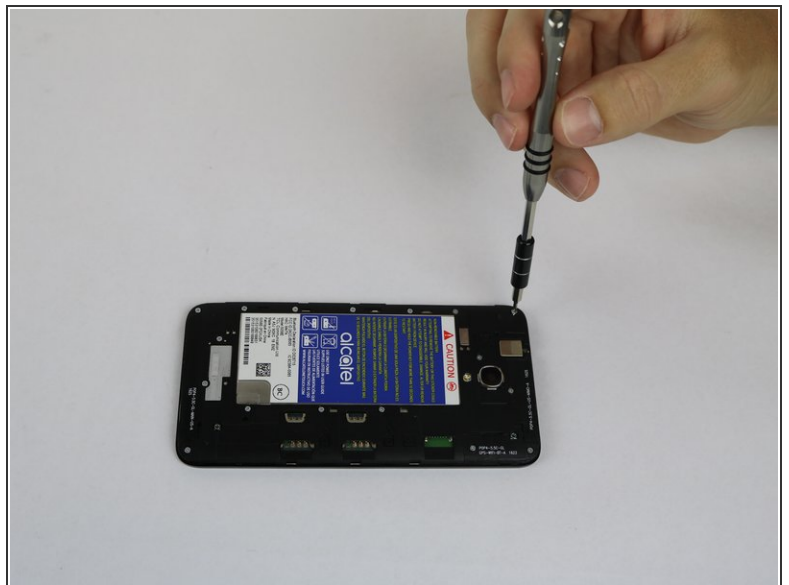

- Remove seventeen 3mm Phillips #000 screws from the mid-frame.

Step 3

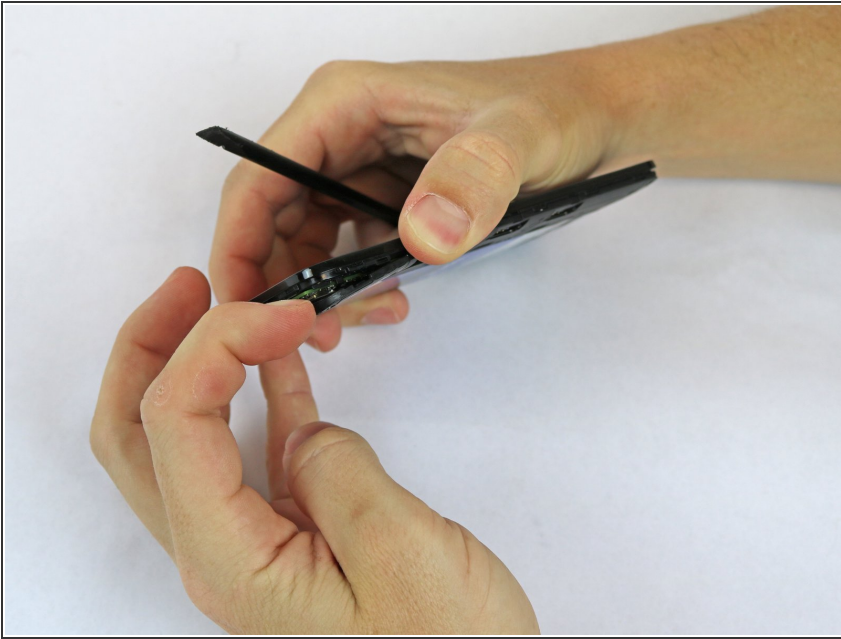

- Use the flat end of the spudger, or your fingernail, to pry off the mid-frame.

Step 4



- Use the flat end of the spudger to disconnect the battery from the motherboard.
- Use the flat end of the spudger tool to pry out the battery.

To reassemble your device, follow these instructions in reverse order.