



# Lenovo IdeaPad N580 Battery Replacement

This guide will demonstrate how to replace the battery in a Lenovo IdeaPad N580 device.

Written By: Alex Amorim



## INTRODUCTION

If the device isn't powering on, then the issue may be due to the battery. Follow these steps to replace the battery.

## Step 1 — Battery



- Turn over the device so that the bottom is facing up. Make sure the hinged side is facing you.

## Step 2



- Move the right switch towards the right until it clicks in place. You should then see the color red reveal from where the switch was originally.

### Step 3



- Now take your left hand and slide the left switch to the left.
- ⓘ This switch will not click in place like the other switch, so make sure to keep your left hand on the switch.

### Step 4



- Take your free hand and place it on the battery. Gently slide it away from its slot.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-19 07:07:53 AM.