


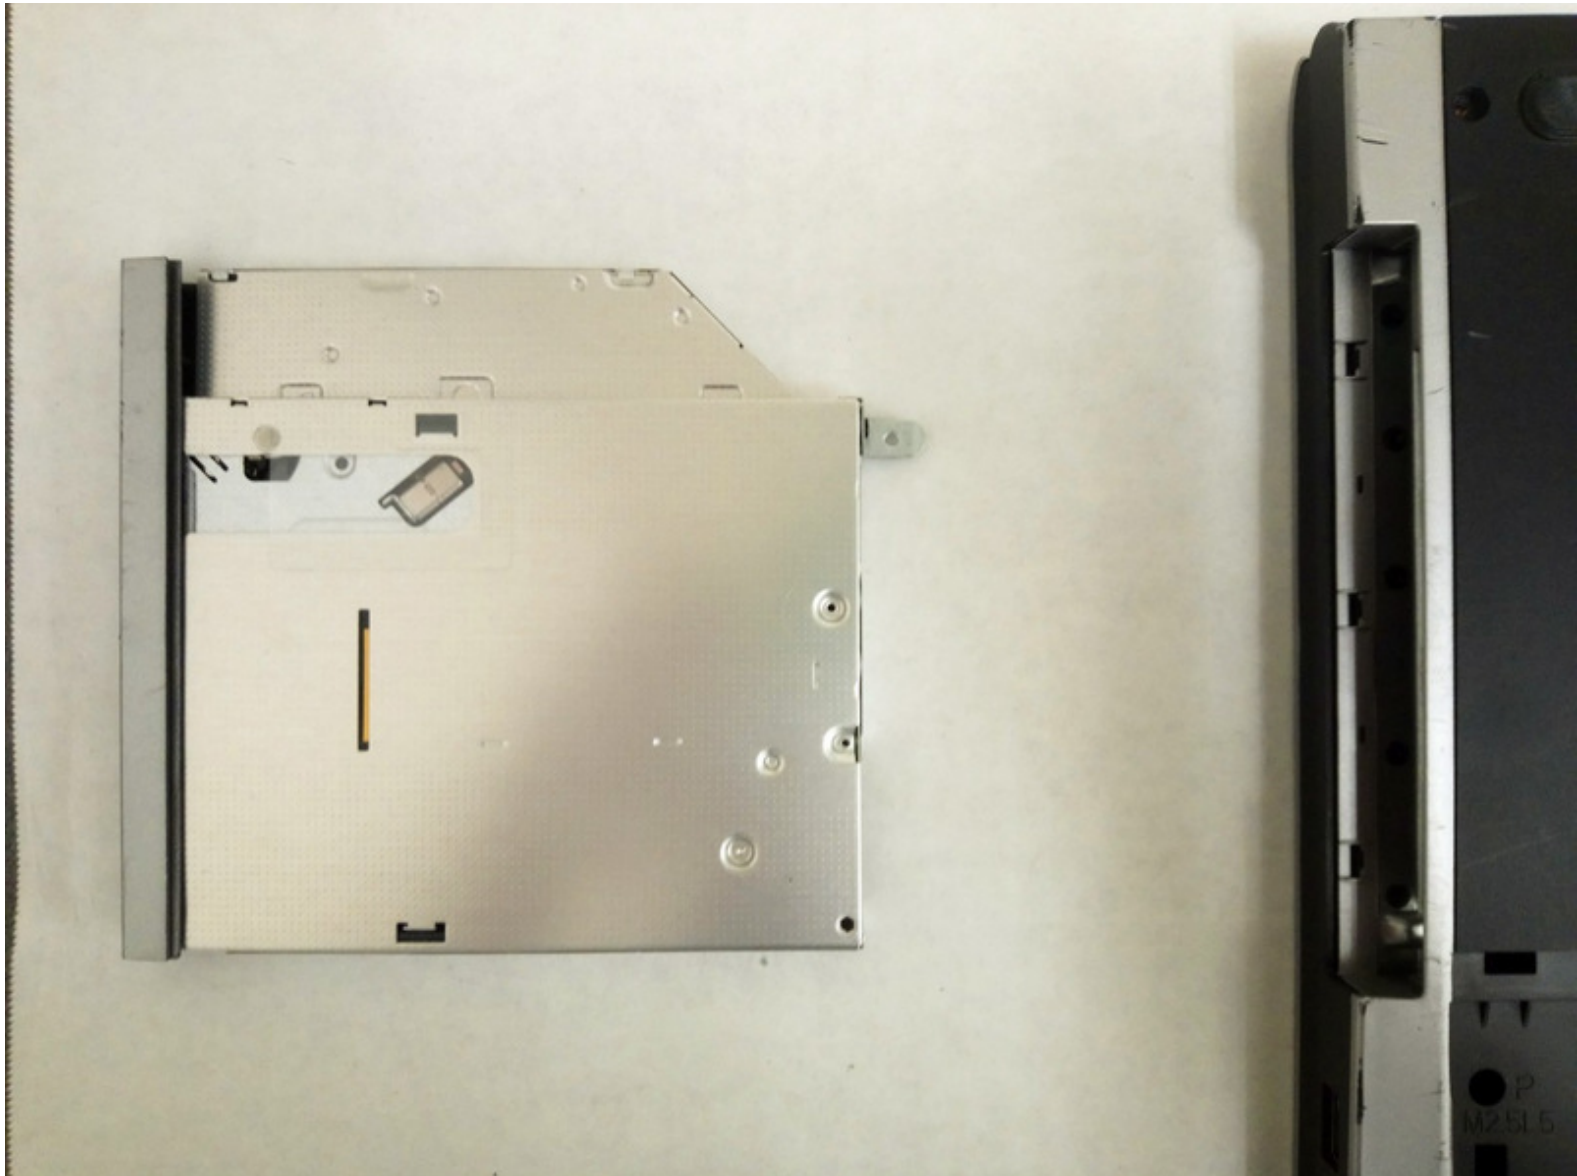

Dell Inspiron 17-5749 Optical Drive Replacement

This guide will instruct users on how to remove/replace a Dell Inspiron 17-5749 Optical Drive.


Written By: Christopher Tran



 **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

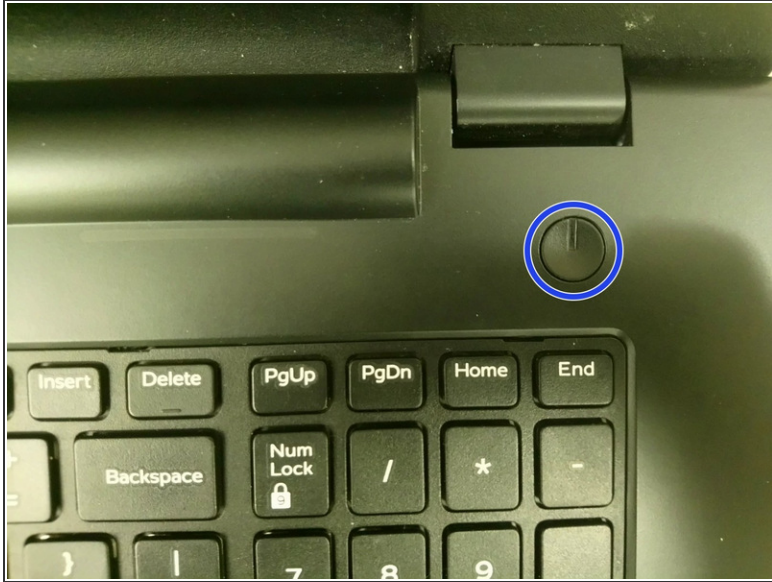


- Turn off power to laptop.
- Unplug charging cable from laptop.
 - ⚠ Failure to unplug the charging cable could result in damaging the computer or seriously injuring yourself.
- ⓘ Wear the anti-static wrist strap to prevent any electrical shock to the components. Shocks may damage the components.

Step 2




- Carefully turn the laptop over.
- Switch each of the battery latches to the "unlocked" position.
- Pull battery upwards by the tab to remove from the laptop.

Step 3 — Optical Drive

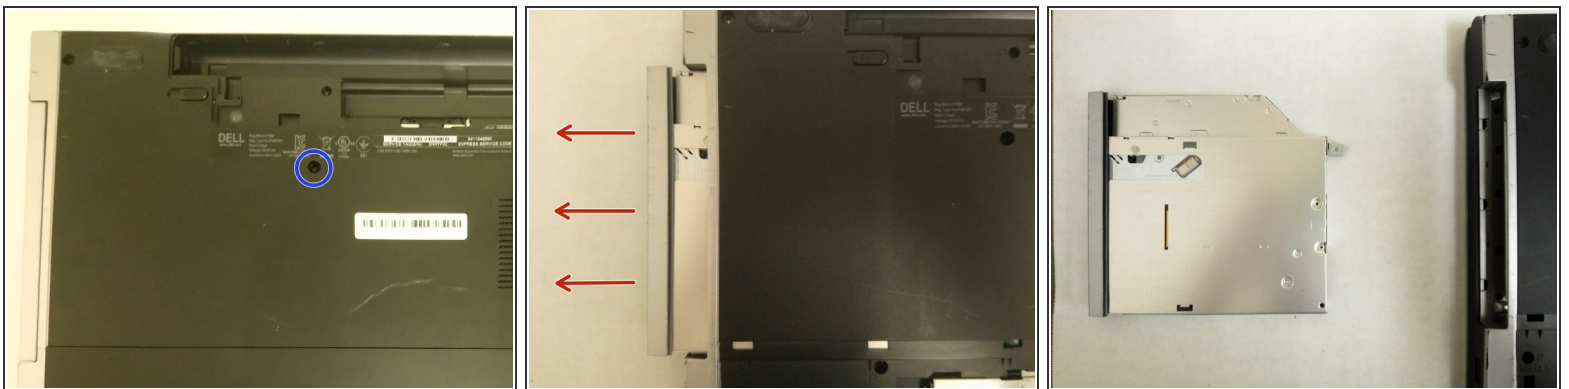

- Remove the 5.5mm screw that secures the optical-drive assembly to the computer base
- Using your fingertips, slide the optical-drive assembly out of the optical drive bay.

Step 4

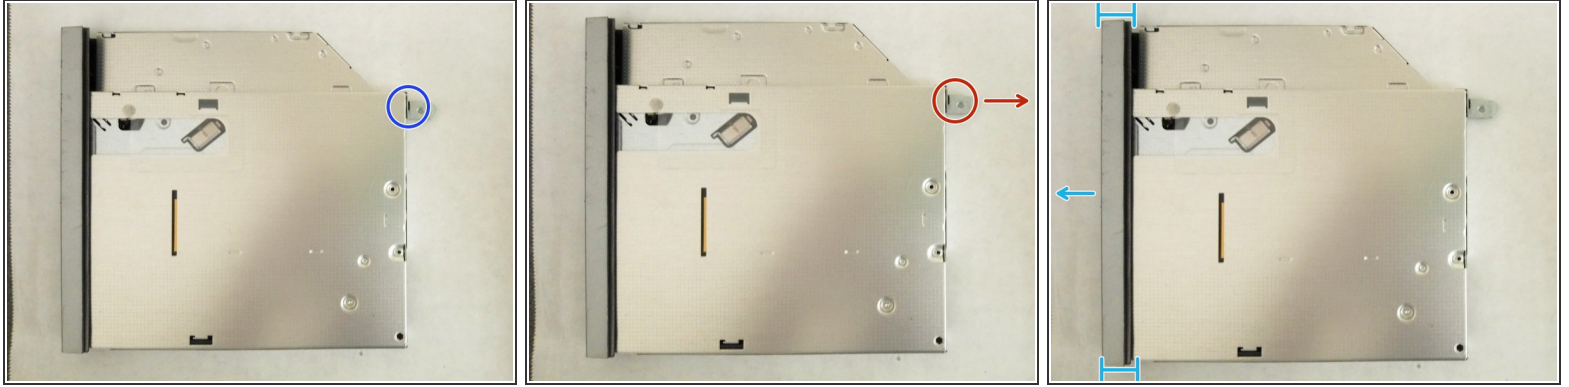

i This step is only needed if replacing the optical drive.

- Remove the 2.5mm screw that secures the optical-drive bracket to the optical drive assembly.
- Remove the optical-drive bracket from the optical-drive assembly.
- Carefully pull the optical-drive bezel and remove it from the optical drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-25 06:27:01 PM.