




# Dell Inspiron 1501 RAM Replacement

How to replace Dell Inspiron 1501 RAM.

Written By: Ravon Williams

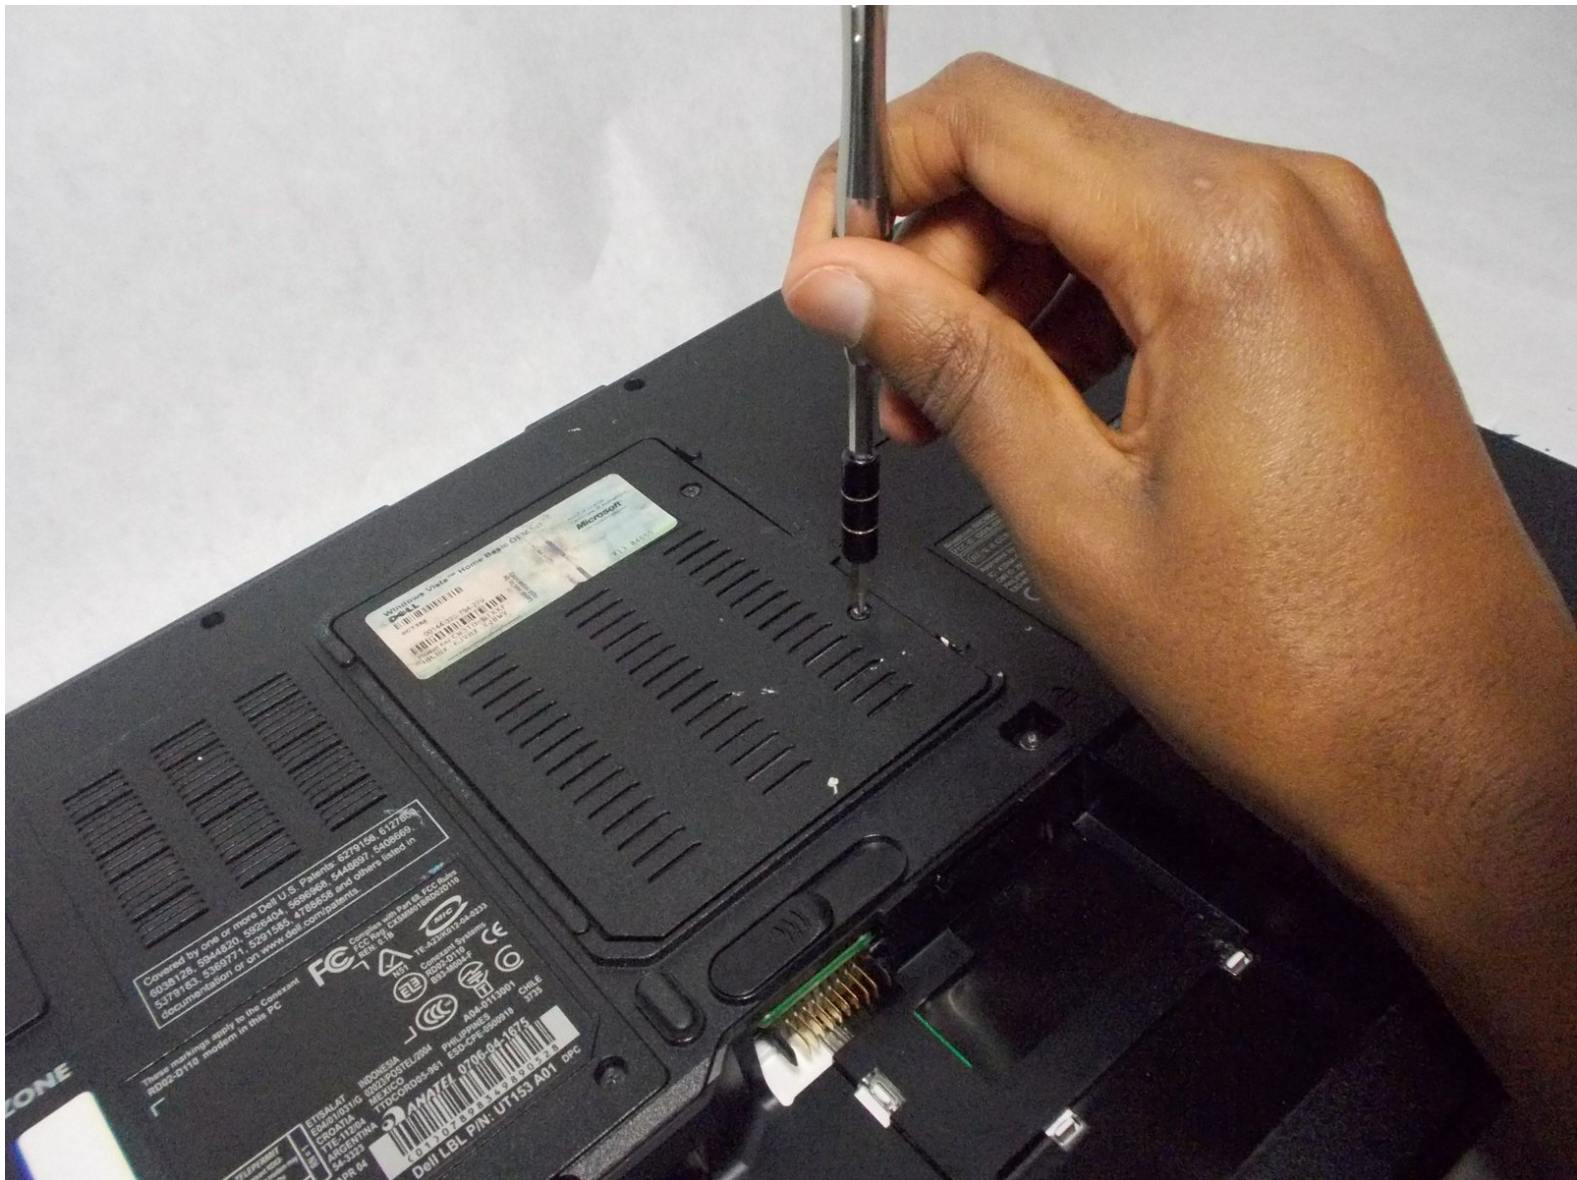

---

## INTRODUCTION



This guide will show you how to remove the memory from your device.

---

### TOOLS:




- [JIS #1](#) (1)
-

## Step 1 — Battery

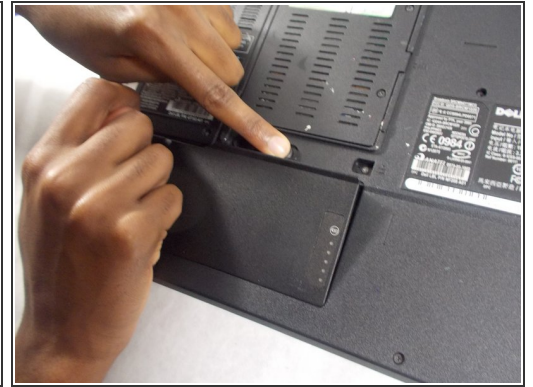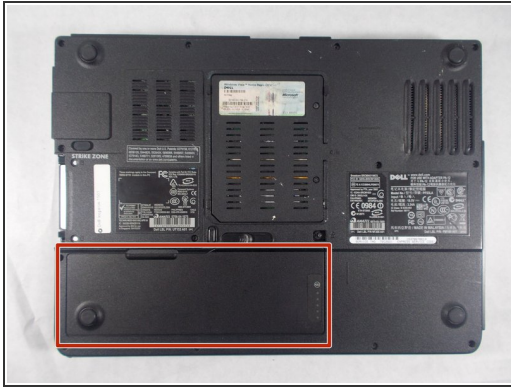



- Place the laptop facedown with the battery facing you.
- Push the switch above the battery to the right and hold it in that position.
- Lift the battery using the grip on the top and remove it from its socket.

## Step 2 — RAM

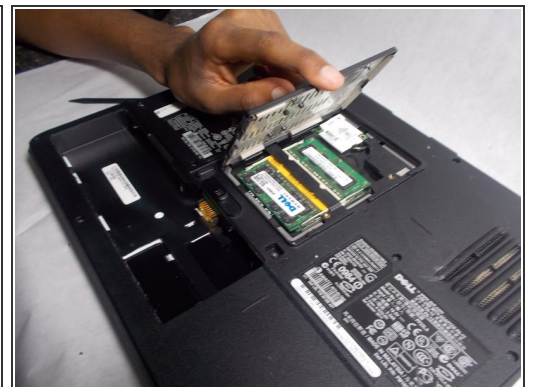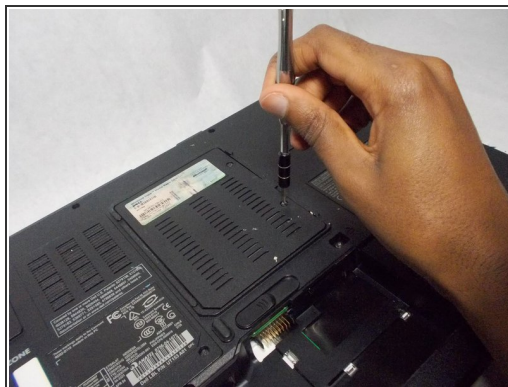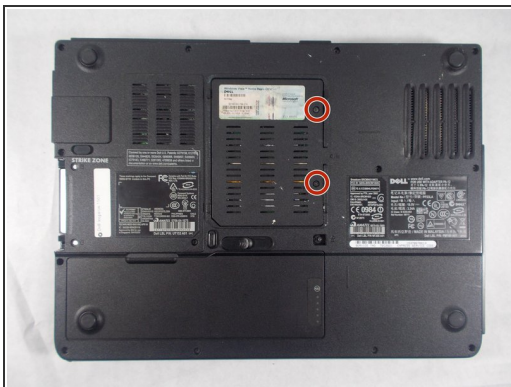

- Loosen the two JIS #1 8mm screws on the cover.
- Lift and remove the cover.

### Step 3

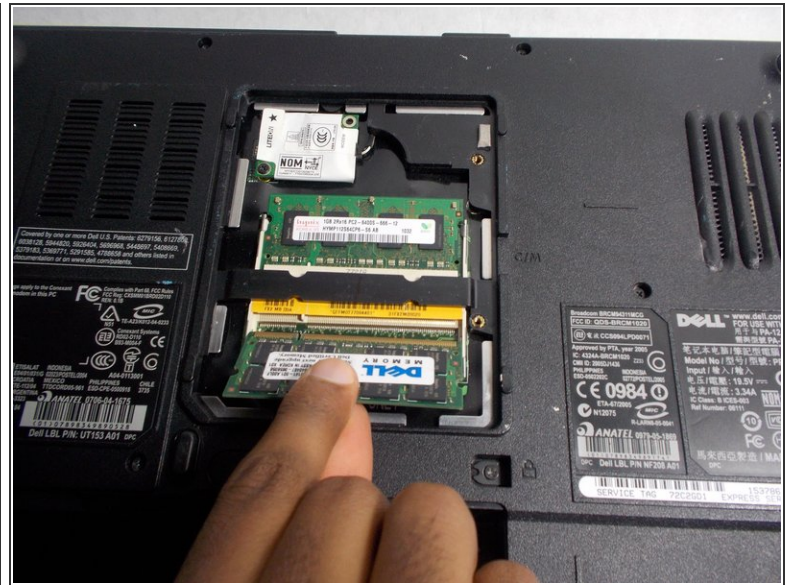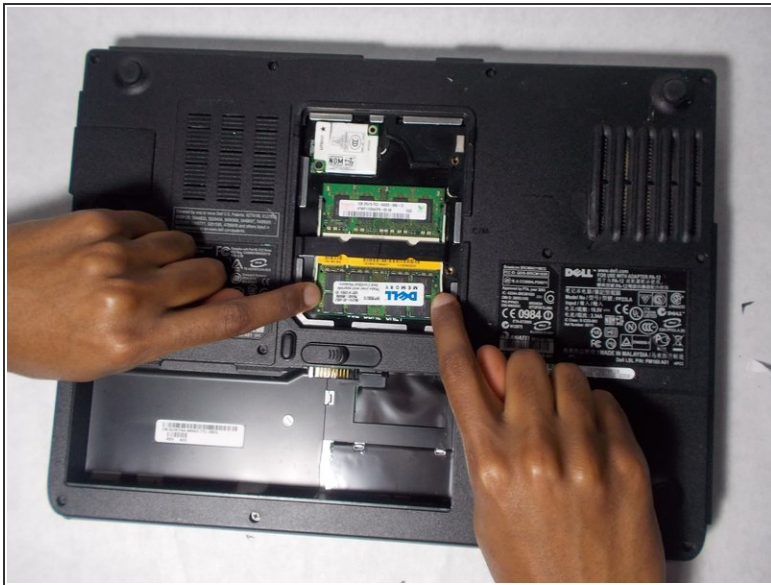

- Pull the two metal clips holding down the card apart.
- Lift and pull out the card.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 03:34:49 PM.