




Dell Inspiron 11z 1110 Battery Replacement

Written By: Terrence15

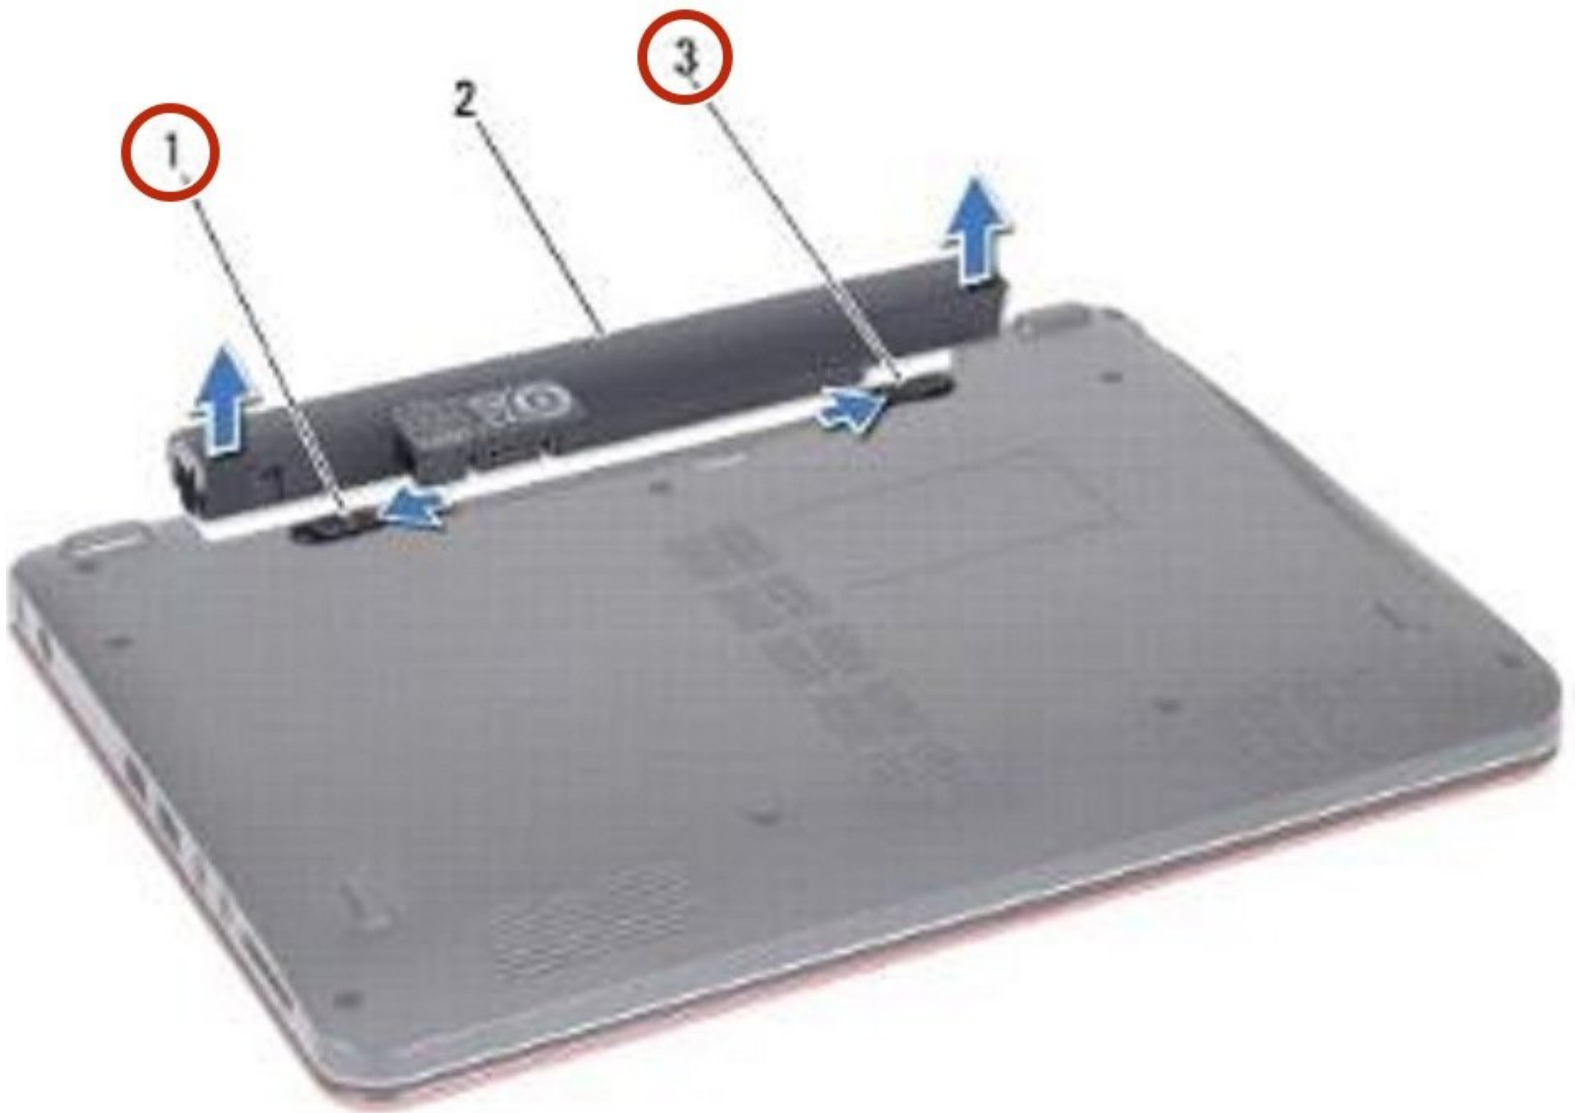


INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Sliding the Battery Lock

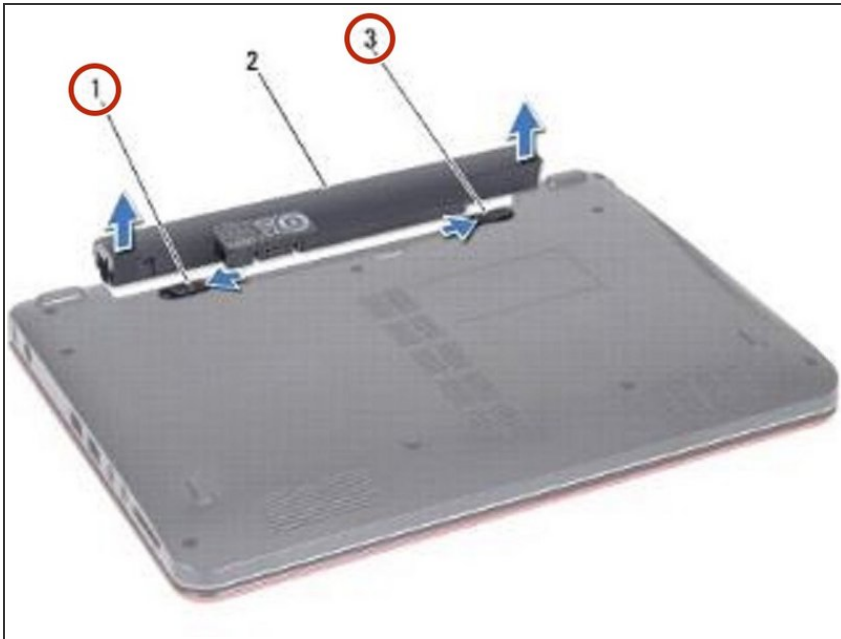

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in [Before You Begin](#).


- Turn the computer over.
- Slide the battery lock latch and the battery release latch to the unlock position.

Step 2 — Pulling the Battery Up

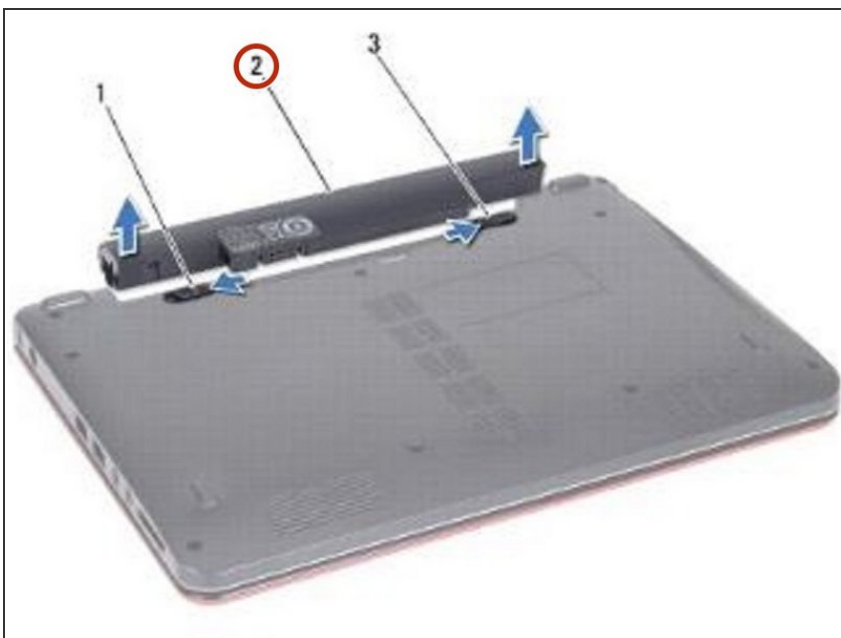

- Pull the battery up and out of the battery bay.

Step 3 — Align the Slots

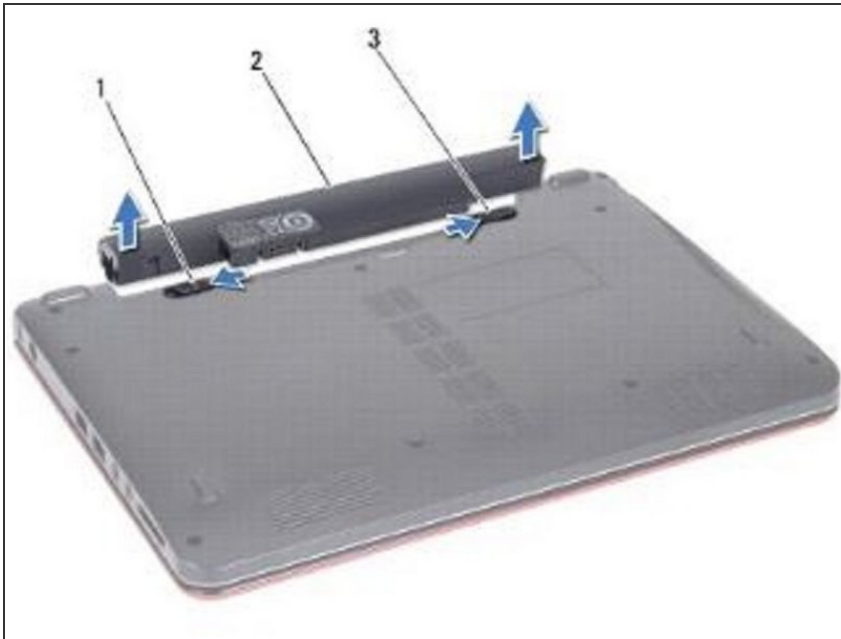

⚠ CAUTION: To avoid damage to the computer, use only the battery designed for this particular Dell computer. Do not use batteries designed for other Dell computers.


- Align the slots on the battery with the tabs in the battery bay.

Step 4 — Push the Battery in Place



- Push the battery in place till it snaps into place.

Step 5 — Sliding the Battery

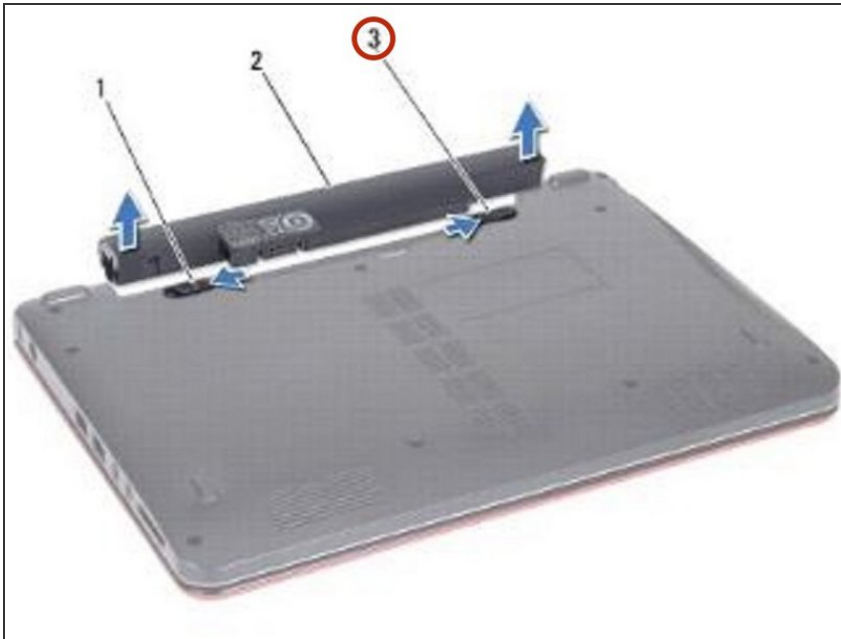

- Slide the battery lock latch to the lock position.

To reassemble your device, follow these instructions in reverse order.