




# Dell Inspiron 11z 1110 Battery Replacement

Written By: Teren Wallace

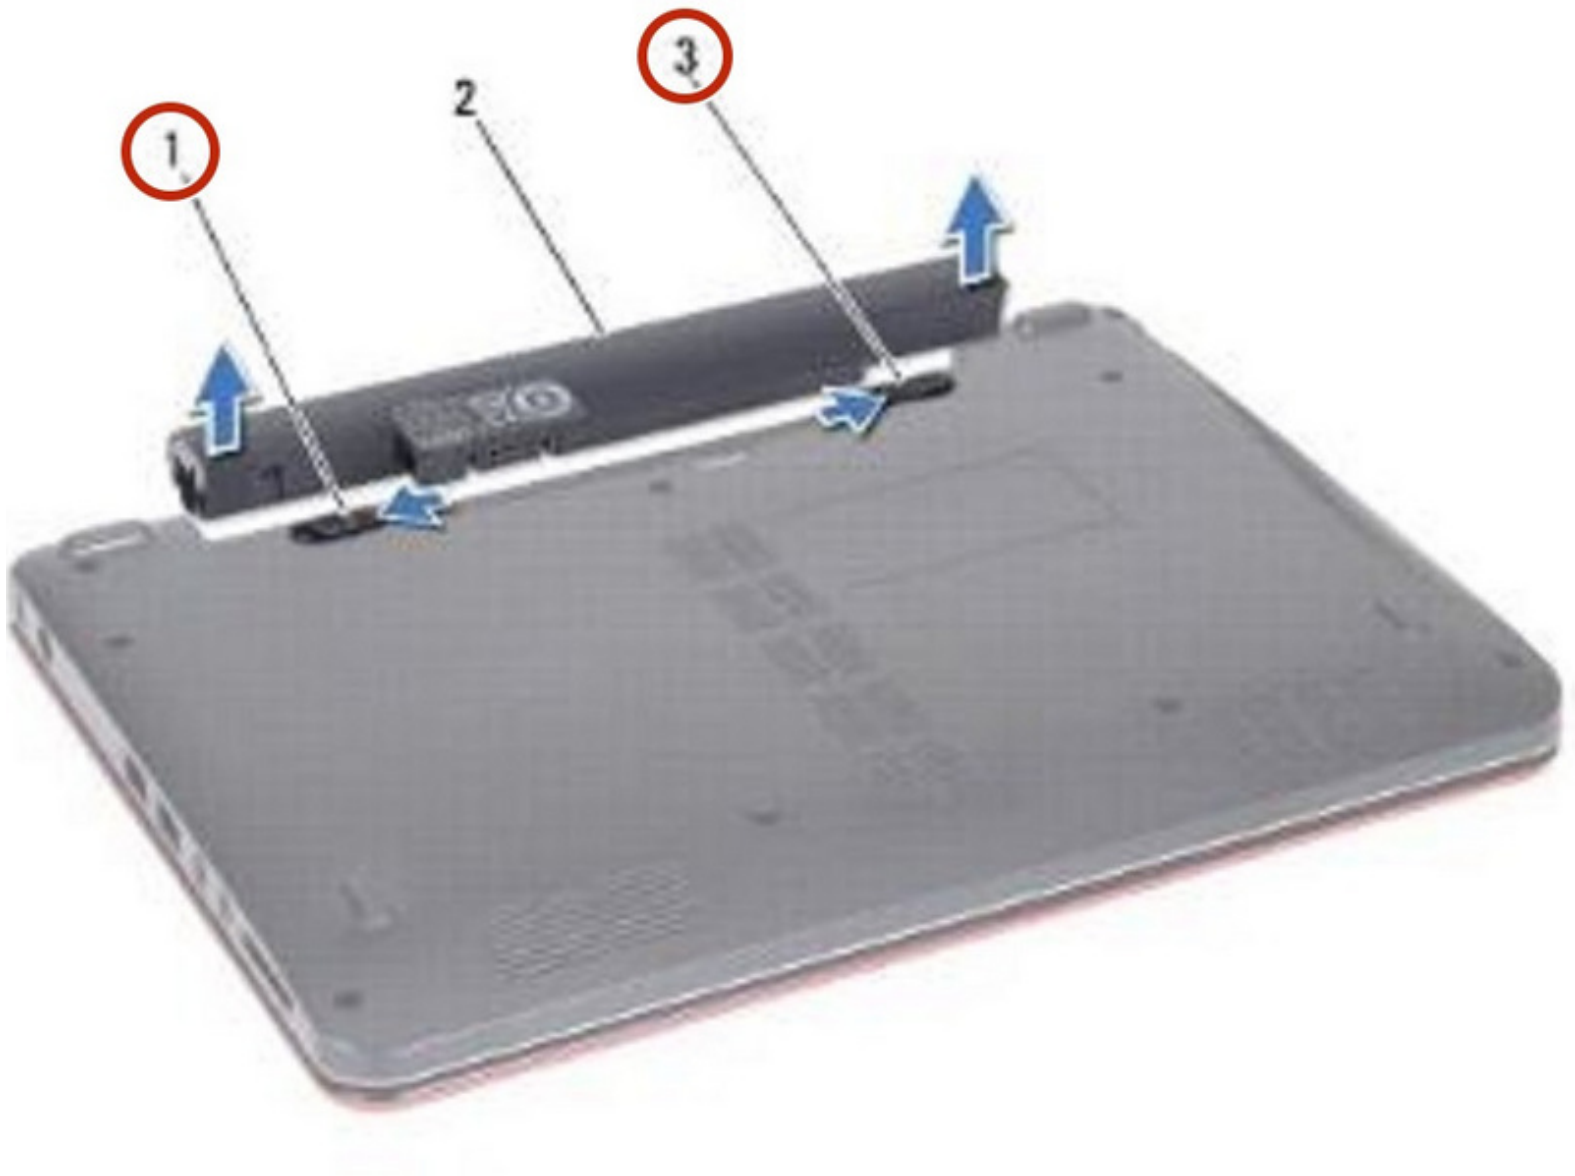

## INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.


---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


## Step 1 — Sliding the Battery Lock

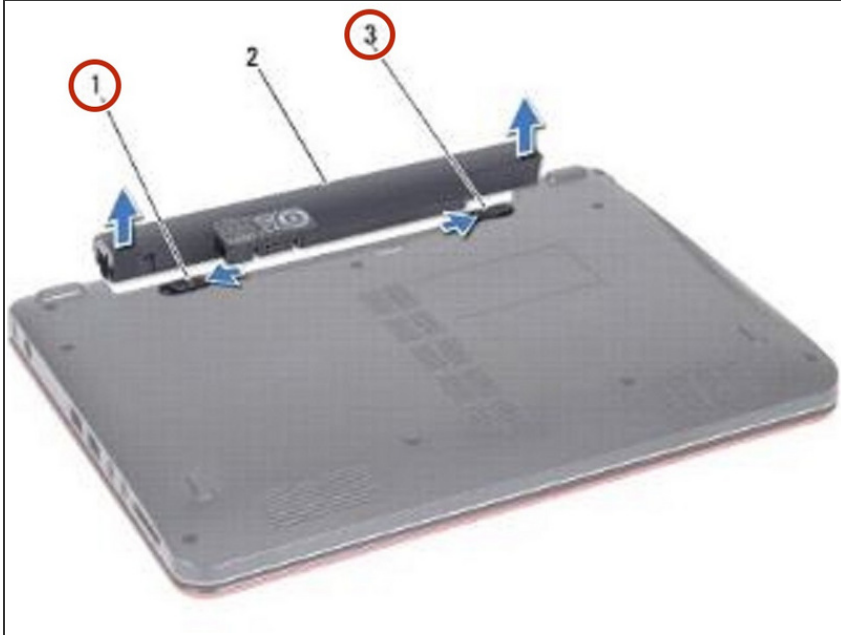

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in [Before You Begin](#).


- Turn the computer over.
- Slide the battery lock latch and the battery release latch to the unlock position.

## Step 2 — Pulling the Battery Up

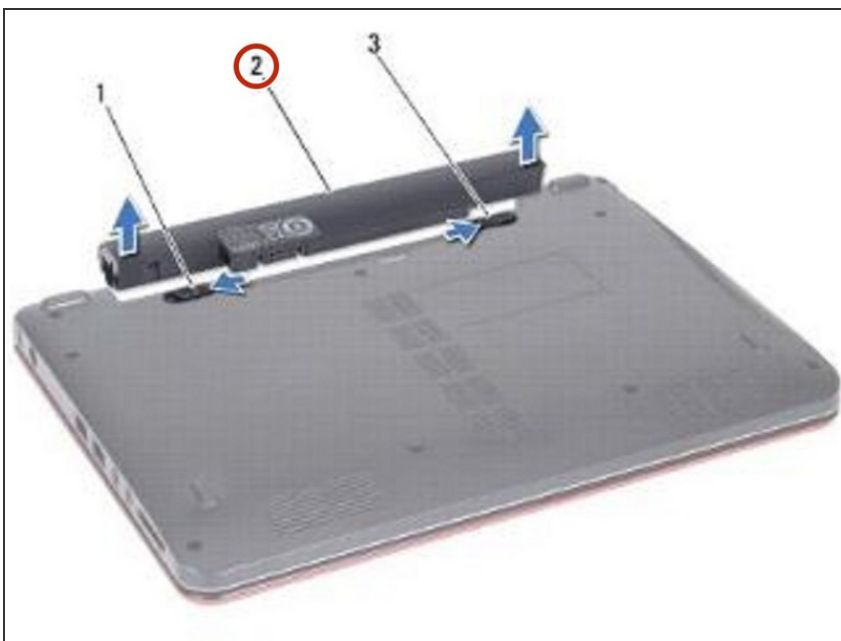

- Pull the battery up and out of the battery bay.


### Step 3 — Align the Slots

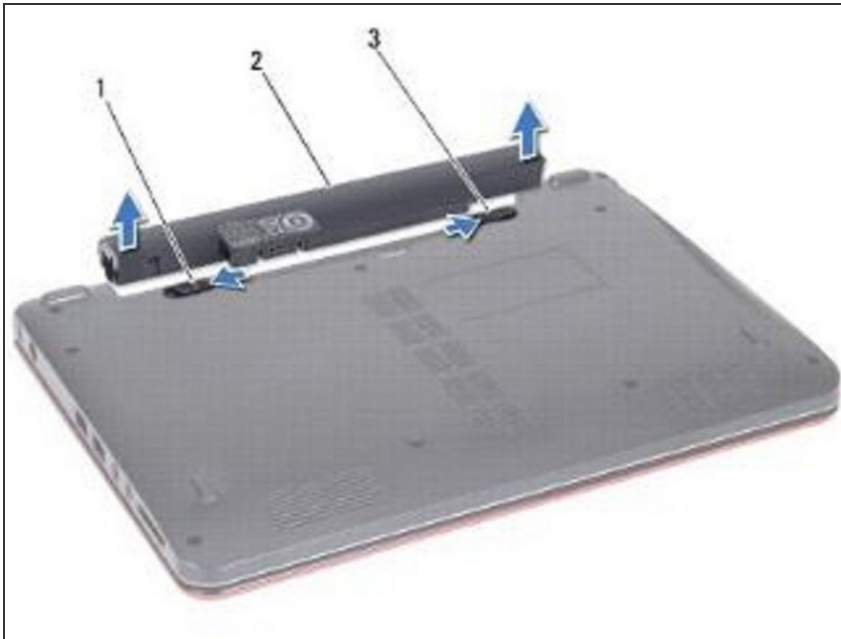

**⚠ CAUTION:** To avoid damage to the computer, use only the battery designed for this particular Dell computer. Do not use batteries designed for other Dell computers.


- Align the slots on the battery with the tabs in the battery bay.

### Step 4 — Push the Battery in Place

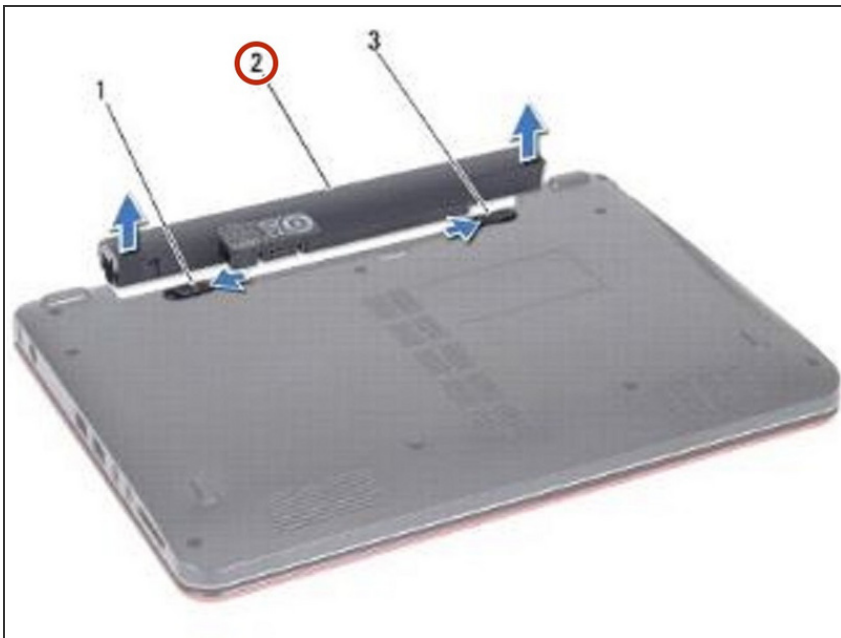

- Push the battery in place till it snaps into place.

## Step 5 — Sliding the Battery

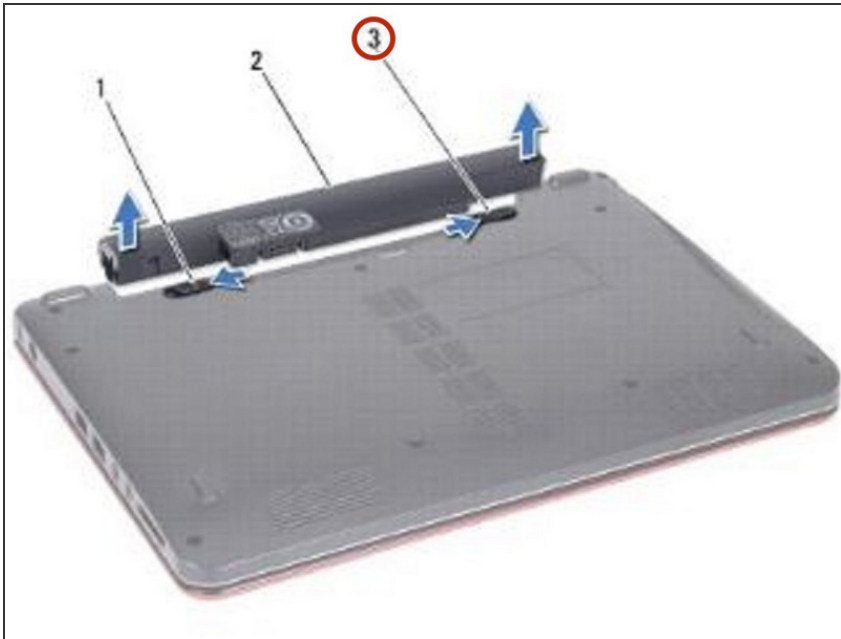

- Slide the battery lock latch to the lock position.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-23 03:33:03 AM.