




Dell Inspiron 11z 1120 Battery Replacement


Written By: Teren Wallace

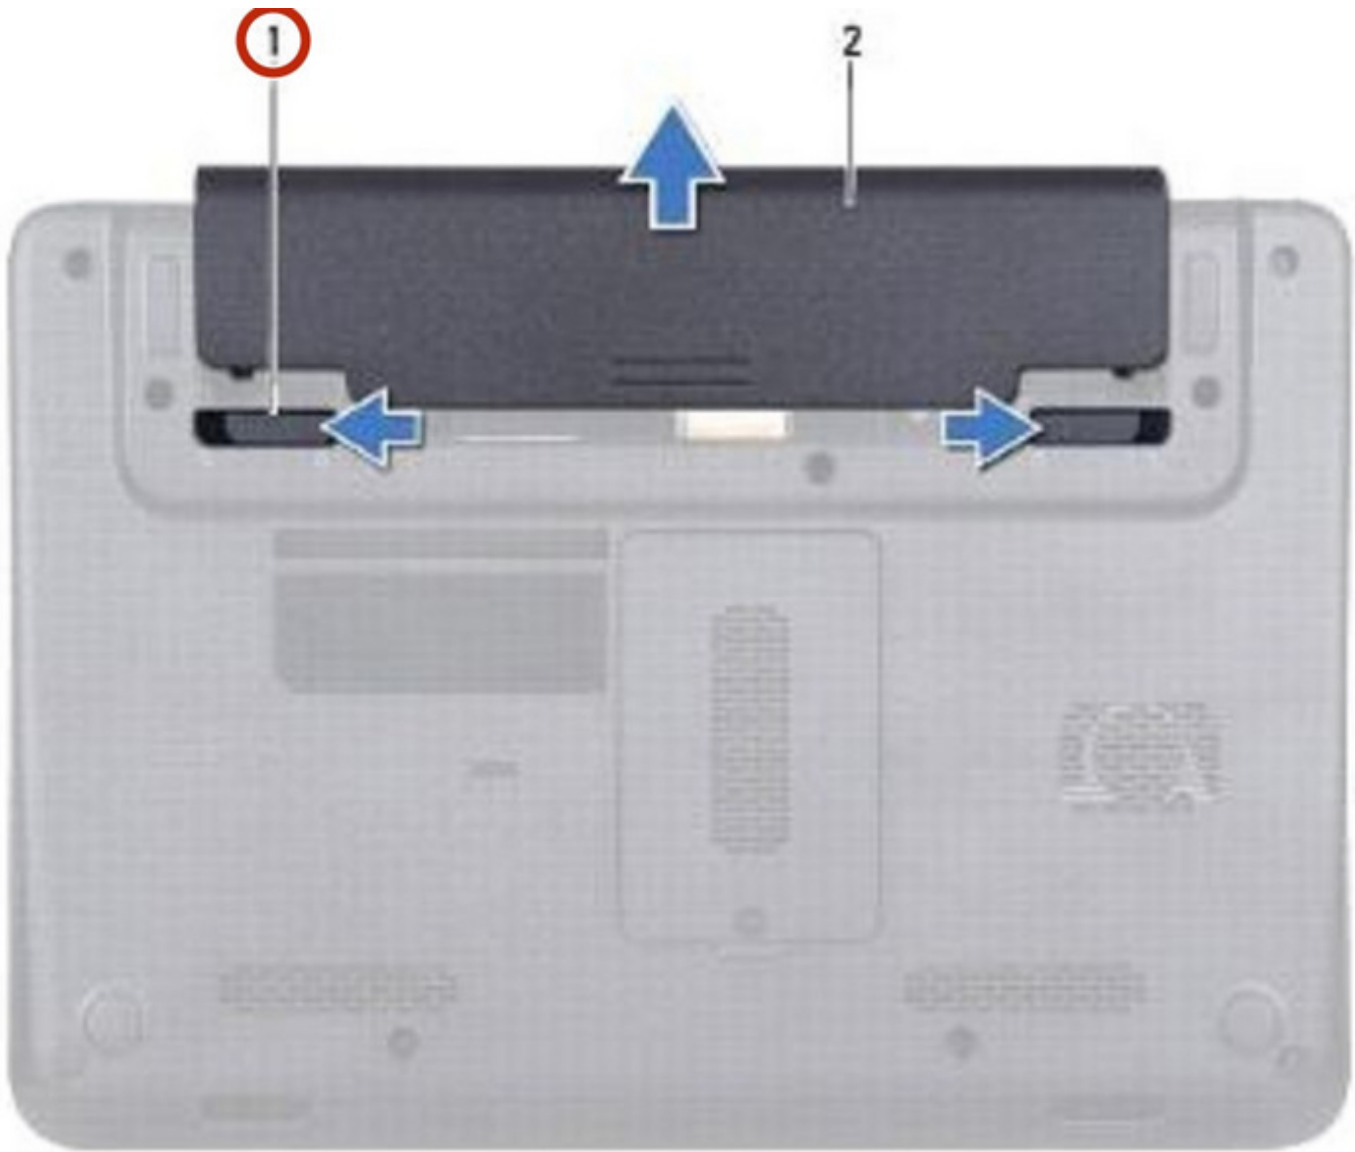

INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.


Step 1 — Sliding the Battery Latches

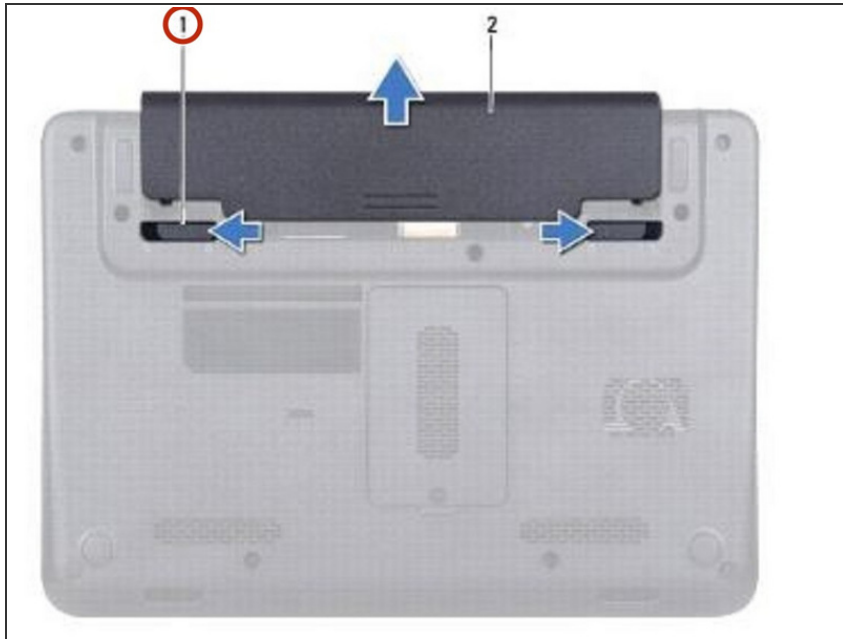

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin](#).


- Slide the battery release latches to the unlock position.

Step 2 — Sliding the Battery

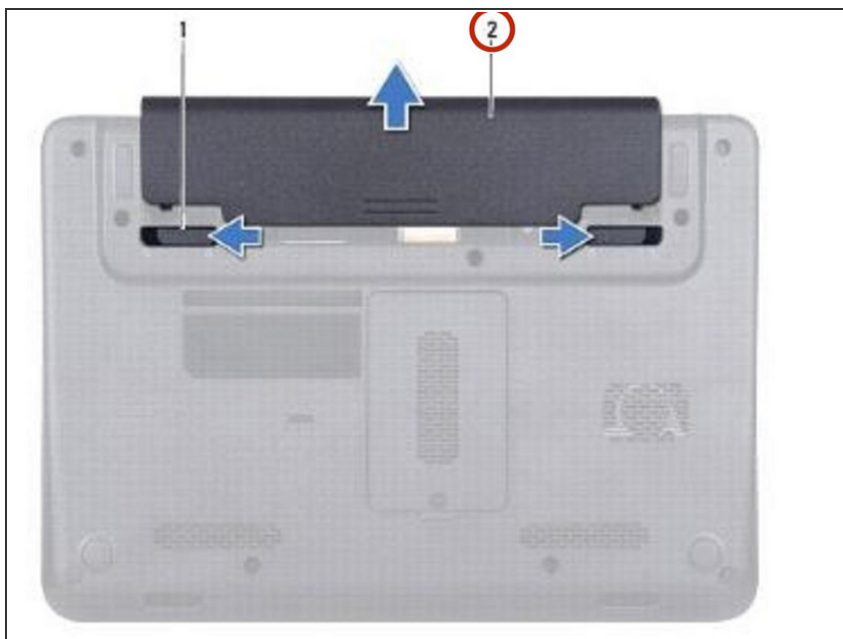

- Slide the battery out of the battery bay.

Step 3 — Sliding the Battery

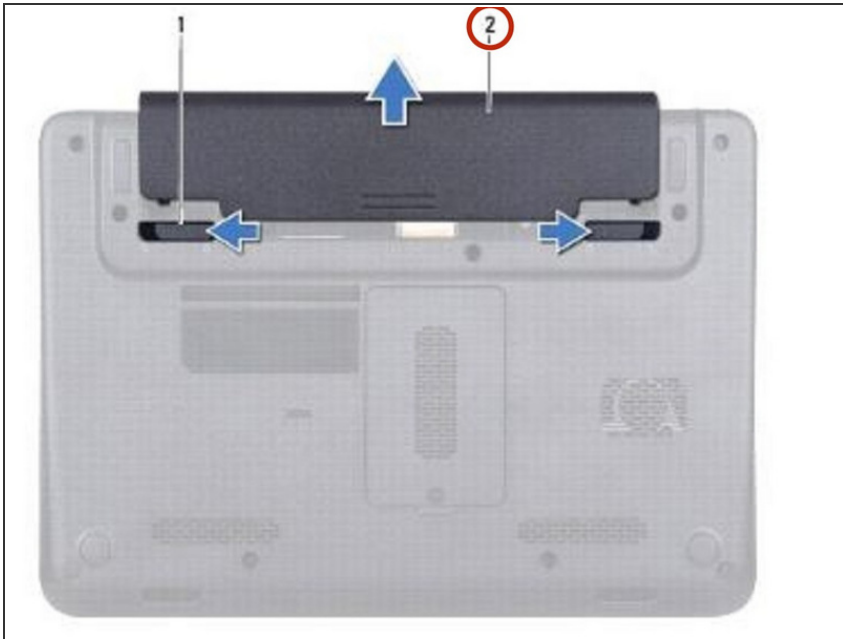

- Slide the **NEW** battery into the battery bay, until it clicks into place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-23 03:33:03 AM.