



# HP Mobile Thin Client mt41 Optical Disc Drive Replacement

When the optical disc drive is broken, it won't open or read the discs.



Written By: Hassan Almunasif



 **TOOLS:**

- [Essential Electronics Toolkit \(1\)](#)
-


## Step 1 — Optical Disc Drive

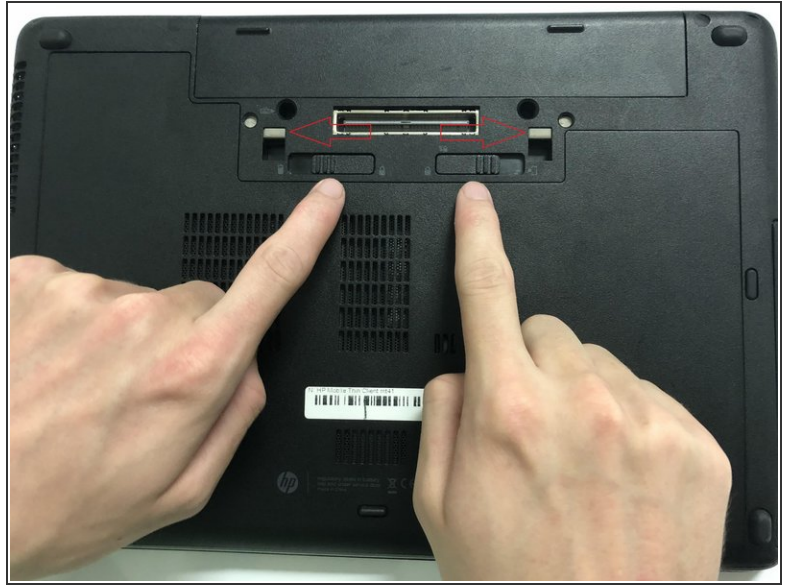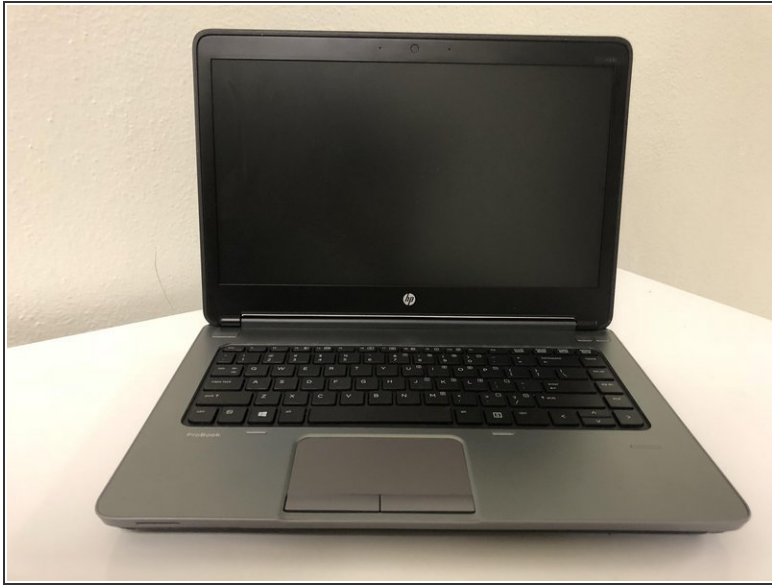

**!** Turn off and unplug your laptop. Also, make sure to disconnect all the external devices.

- After that, slide the two switches to the indicated directions in order to remove the battery and the back cover.

## Step 2

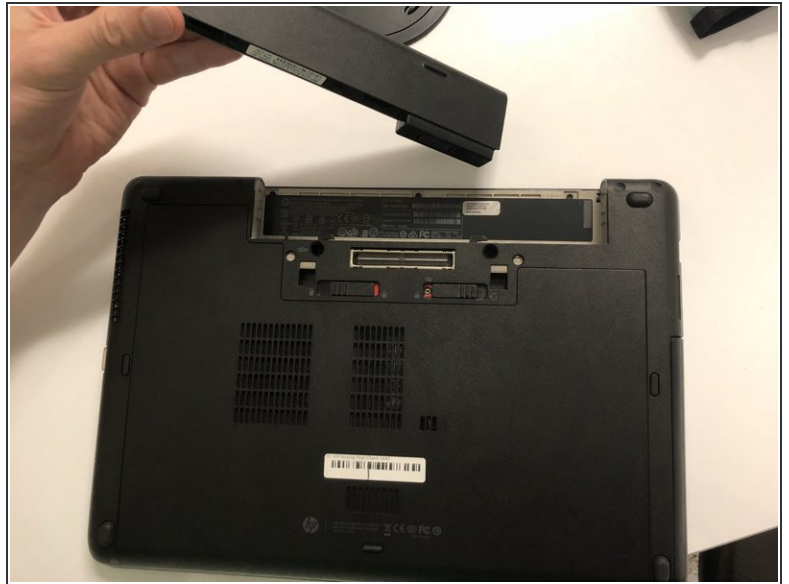

**i** Now you're able to remove the battery and the service cover.


- Slide the battery upward to remove it.

### Step 3



- Slide the service cover downward.
- After that, lift the back cover to remove it.

### Step 4

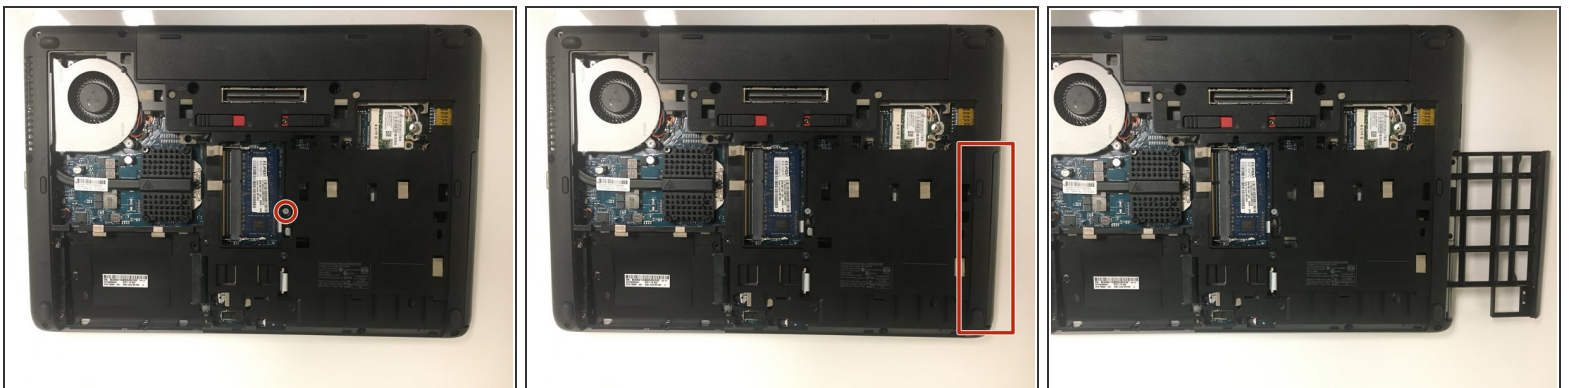

- Unlock the indicated screw in order to remove the optical drive.
- Slide the optical drive to completely remove it from the laptop.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-05-18 09:28:24 AM.