




# Dell Inspiron 14 3462 Battery Replacement


Written By: Teren Wallace

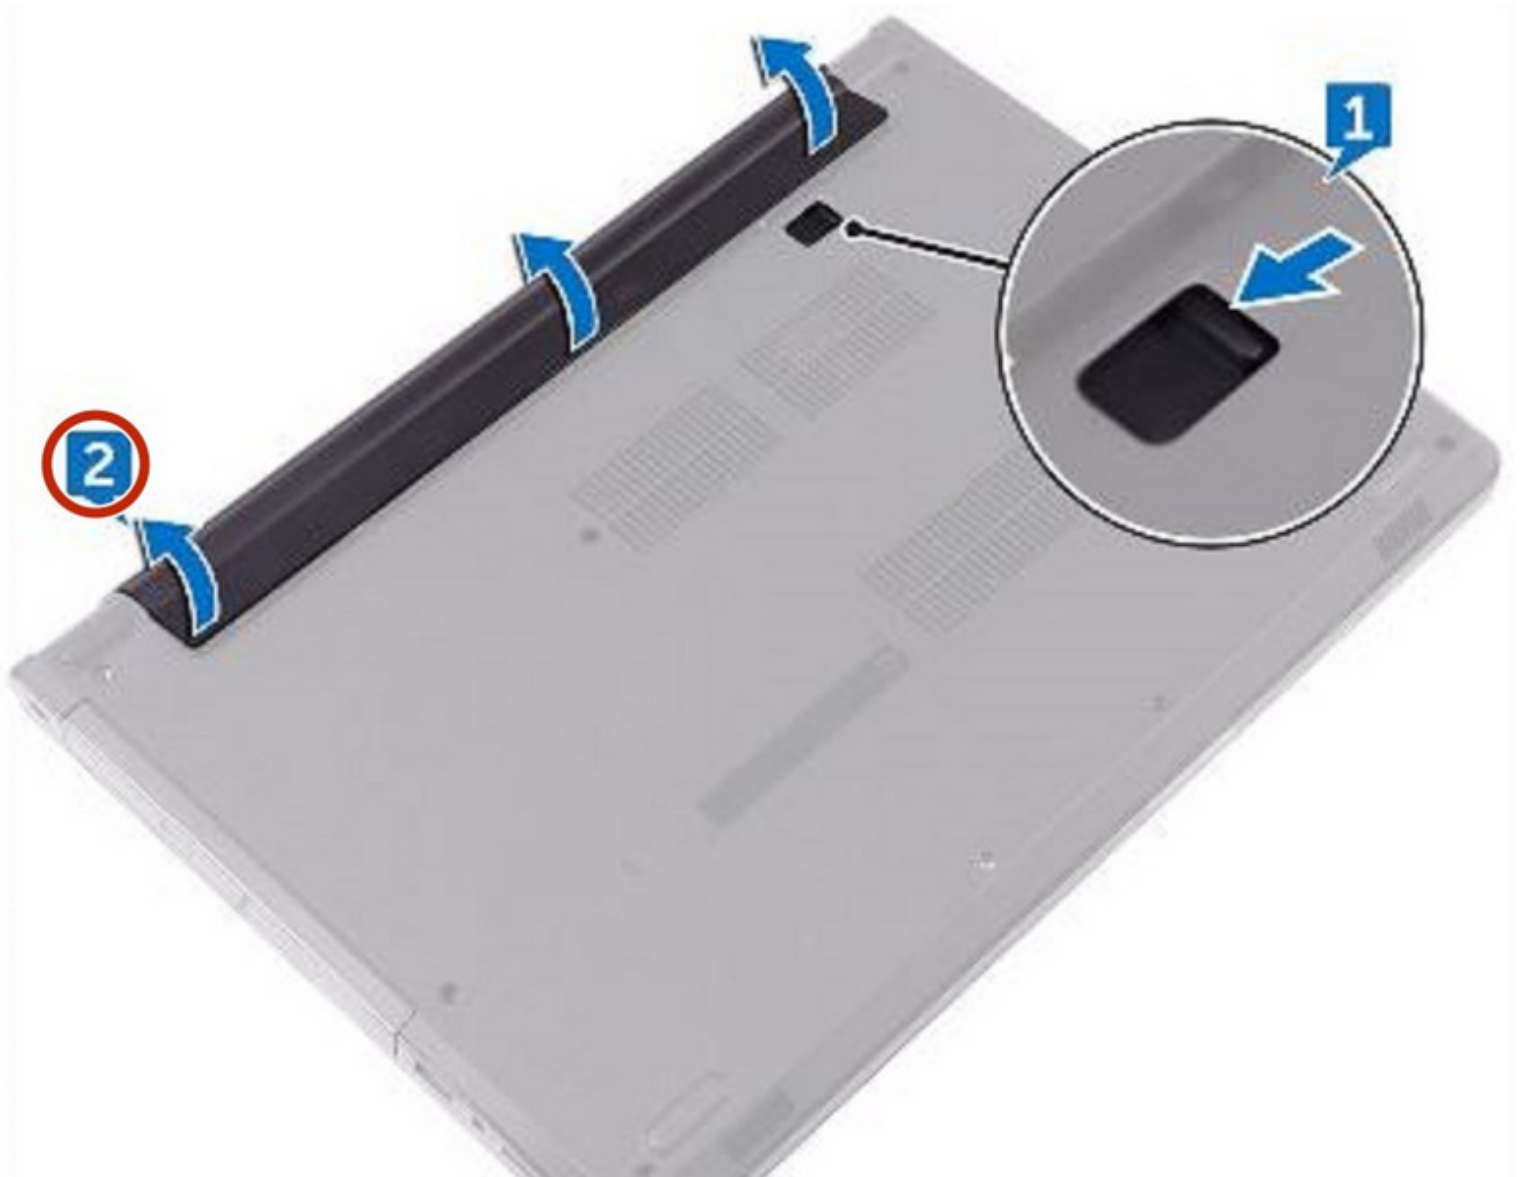

## **INTRODUCTION**

In this guide, we will be showing you how to remove and replace the Battery.


## Step 1 — Unlocking the Battery

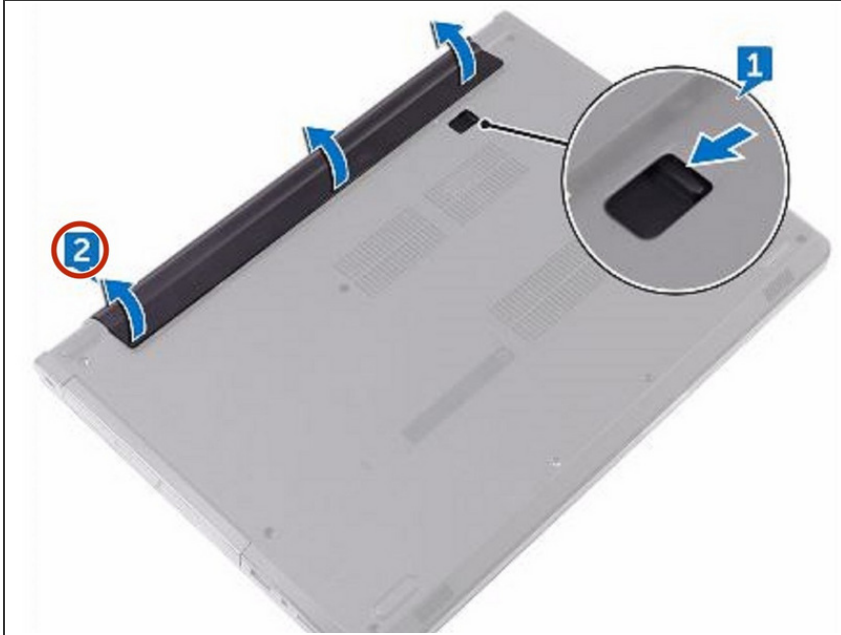

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Turn the computer over and slide the battery latch to the unlock position. You can hear a click sound when the battery is unlocked.

## Step 2 — Lift the Battery

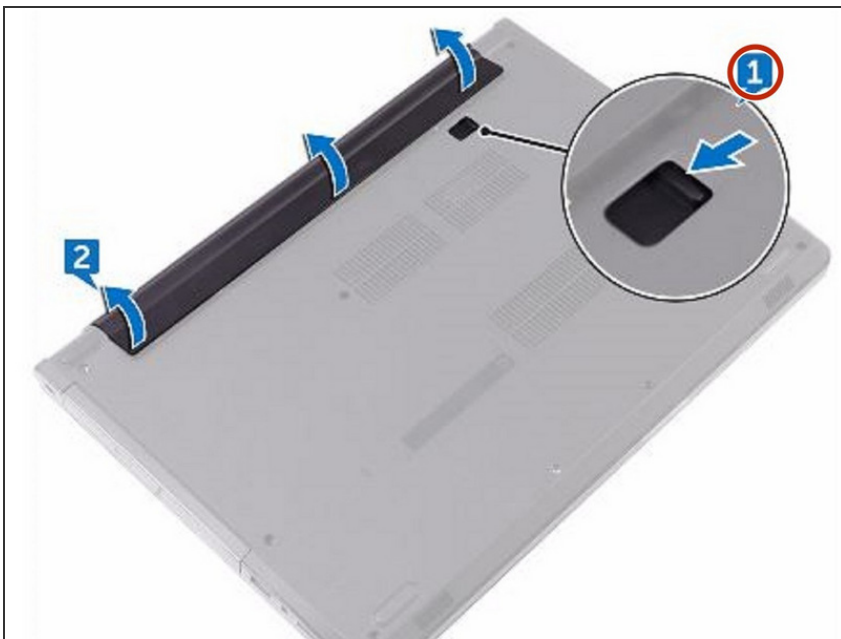


- Using your fingertips, lift the battery at an angle and remove the battery off the computer base.

### Step 3 — Grounding the System Board

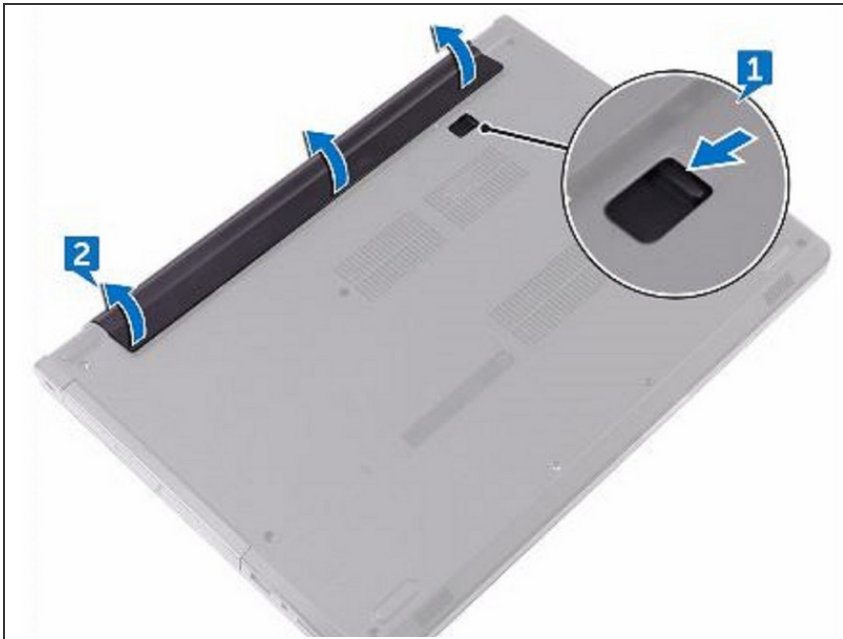

- Turn the computer over, open the display, and press the power button for five seconds to ground the system board.

### Step 4 — Installing the new Battery

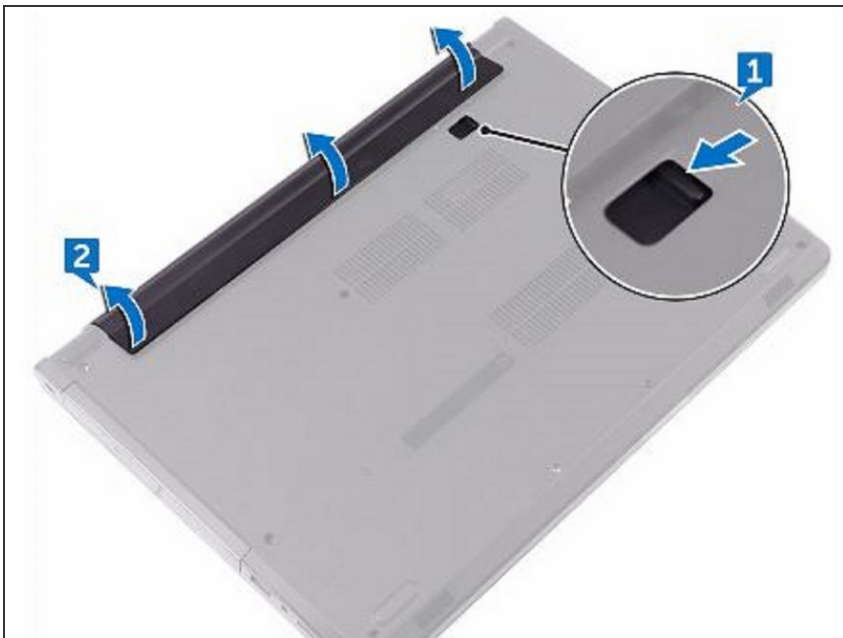

- Slide the tabs on the **NEW** battery into the slots on the battery bay and snap the battery into place.