


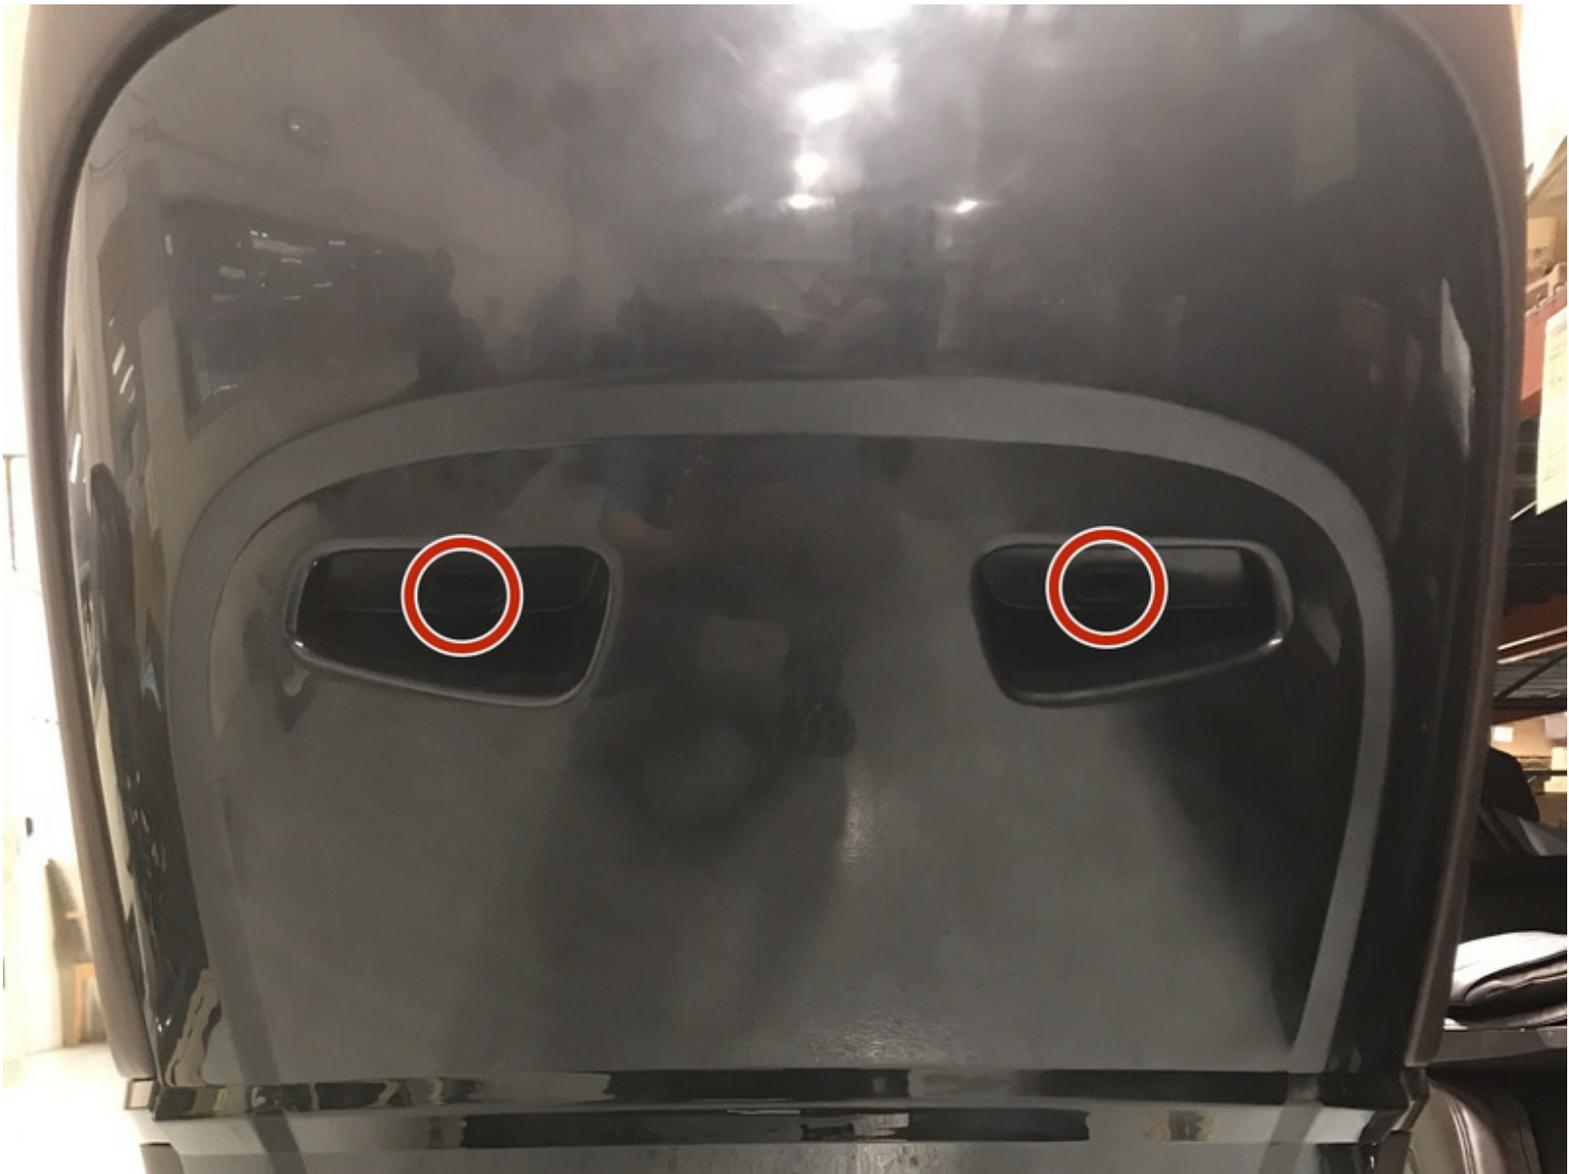

Presidential Air valve

This guide will show you how to install or replace an air hose Clamp on the massage mechanism.

Written By: Nick





TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [Large Needle Nose Pliers](#) (1)



PARTS:

- [Hose Clamp](#) (1)
-


Step 1 — Air valve hose clamp



- Remove the 2 screws

⚠ This cover may require some wiggling to remove. DO NOT FORCE it, it has medium sized plastic clips along the edges that lock into metal slots . When forced it will cause these tabs to break.

Step 2


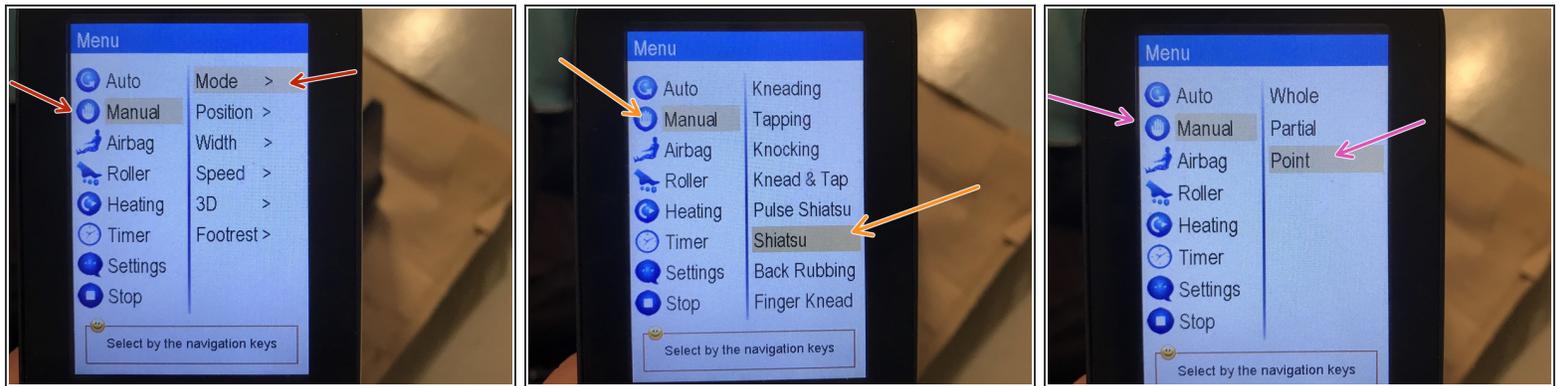


i To Begin we need to put the chair into manual Shiatsu to move the mechanism to the middle of the track

- Select Manual and then Mode
- Select Shiatsu by kitting the "ok" button
- Lastly select Manual , Position and point

i From here using the UP and DOWN arrows in the middle of the remote HOLD the DOWN arrow and the mechanism should move down until you release the button. Make sure you stop the mechanism in area on the track where you can access the top of the mechanism .

Step 3

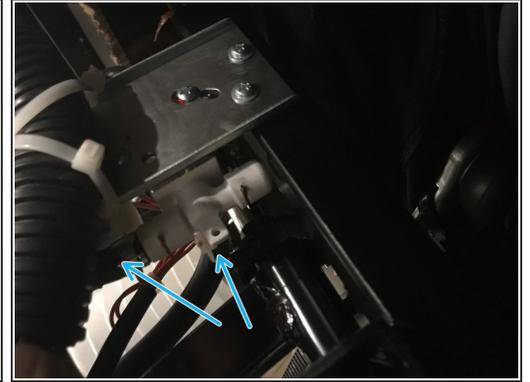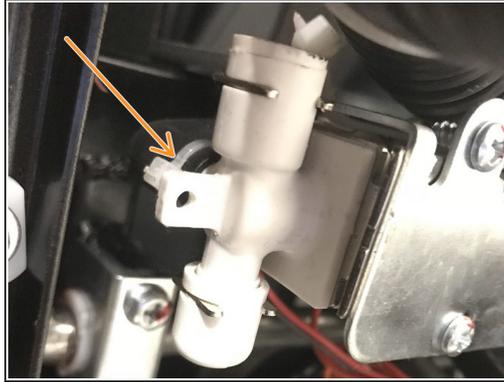

- air valve is located here
- one hose should be located to the left of the valve
- other 2 hoses will be located on the right side

 DO NOT RE ZIP HOSES USE PROVIDED CLAMPS AS THIS WILL JUST REPEAT ITSELF UNTIL CLAMP IS INSTALLED

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-27 07:40:56 AM.