



# Garmin GPSmap 60CSx AA Batteries Replacement

A guide to remove and replace the Garmin GPSmap 60CSx AA batteries.

Written By: Thomas Humphrey



## INTRODUCTION

One possibility for your device not powering on or responding is old or corroded batteries. This is a guide to remove and replace the Garmin GPSmap 60CSx AA batteries.

---

### TOOLS:

- [Fingers](#) (1)

### PARTS:

- [AA Batteries](#) (2)
-

## Step 1 — Back Cover and AA Batteries



- Lift and twist the battery cover release 90 degrees counterclockwise on the back of the device.

## Step 2



- Lift battery release up to remove battery cover.

### Step 3



- Pull AA batteries out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-07-06 06:07:00 AM.