



4-Stroke Small Gas Engine Air Filter Replacement

This guide covers the removal and replacement of the air filter for a lawnmower engine.

Written By: Ethan Narad



INTRODUCTION

Air filters, as the name would imply, filter out debris and dust from the air so that the engine runs cleanly. Over time, this filter becomes clogged with said debris and dust and needs to be replaced. This is a quick, easy, no-tools required repair.

TOOLS:

- [Paper Towels](#) (1)
 - [Latex or nitrile gloves](#) (1)
-


Step 1 — Air Filter



⚠ Before starting, ensure that the engine is not running and is not hot.

- Pull the tab until the filter cover opens. Remove the filter cover.
- i** Note that the bottom of the cover is hinged.

Step 2

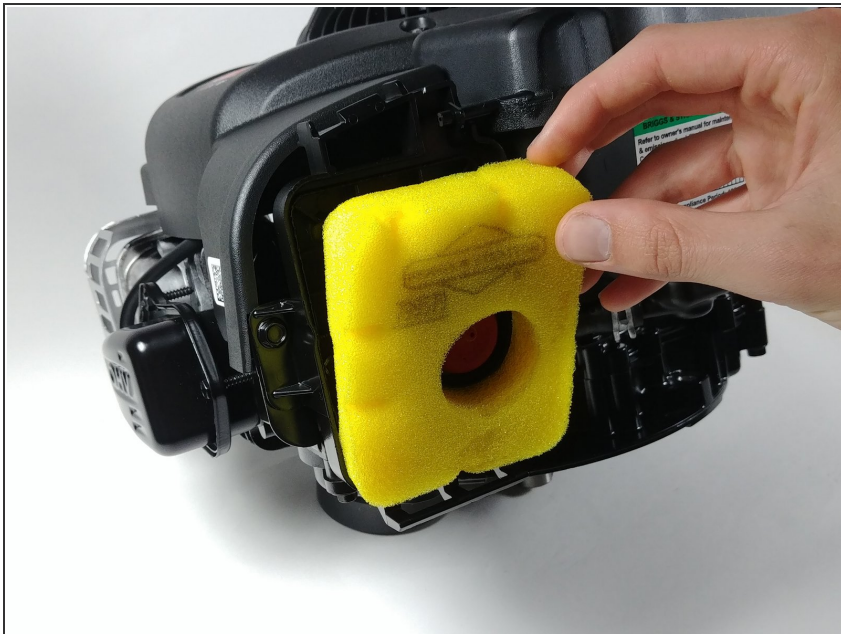

- Remove the air filter.
- The air filter will be either an oily sponge, or an accordion-folded fabric.
- i** Note that the air filter is saturated with oil. Wear gloves and use paper towels to avoid creating a mess.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-22 11:12:06 AM.