



Dell Inspiron 14 5468 Coin-Cell Battery Replacement

Written By: darrius



INTRODUCTION

How To Remove And Replace The Coin-Cell Battery

TOOLS:

- [Spudger](#) (1)
-

Step 1 — Prying The Coin Cell Battery



- Using a plastic spudger, gently pry the coin-cell battery out of the battery socket on the system board.

Step 2 — Snapping The New Coin-Cell Battery



⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [<http://> Before working inside your computer.]

- With the positive-side facing up, snap the **NEW** coin-cell battery into the battery socket on the system board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-05-26 04:07:19 PM.