



SEGA Genesis Flashback Controller Buttons Replacement

This guide will teach you how to replace the buttons on the SEGA Genesis Flashback Controller.

Written By: Viet Nguyen




INTRODUCTION

This guide will help you replace the buttons in your Sega Genesis Flashback controller. You'll need a Phillips #000 screwdriver to complete this guide.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
 - [54 Bit Driver Kit](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Controller Back Cover

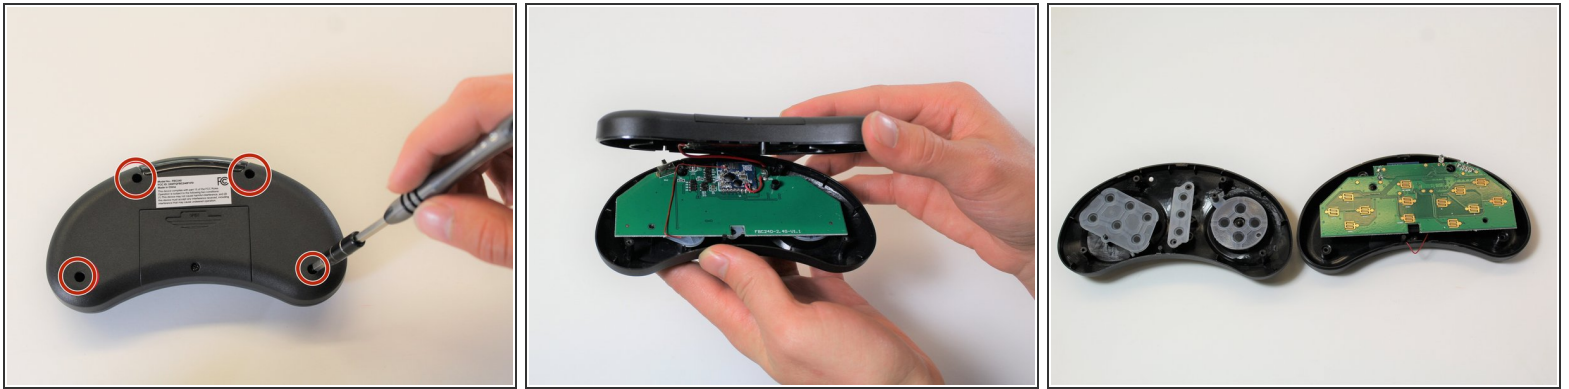

- Remove the screws on the back of the controller with the Phillips #000 screwdriver.
 - Hold the controller with the bottom plate facing up, gently remove the top plate that is connected to the motherboard of the controller. Set the top plate aside.
- ⚠** Be sure to separate the two plates with the bottom facing up, to keep the buttons from falling out.
- i** Place screws on magnetic project mat to avoid losing any screws.


Step 2 — Controller Buttons

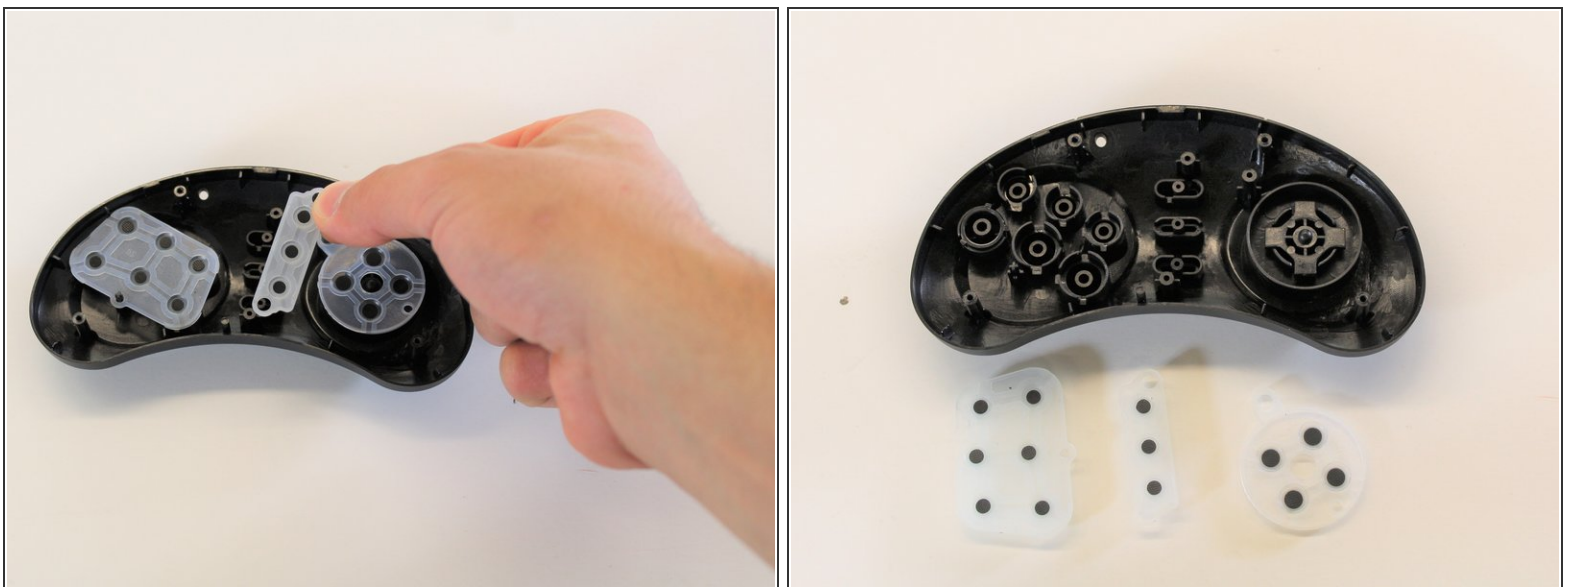

⚠ CAUTION: Pull gently on the rubber membranes to avoid tearing .

- Use two fingers to remove each rubber membrane that rests on top of the buttons.

Step 3

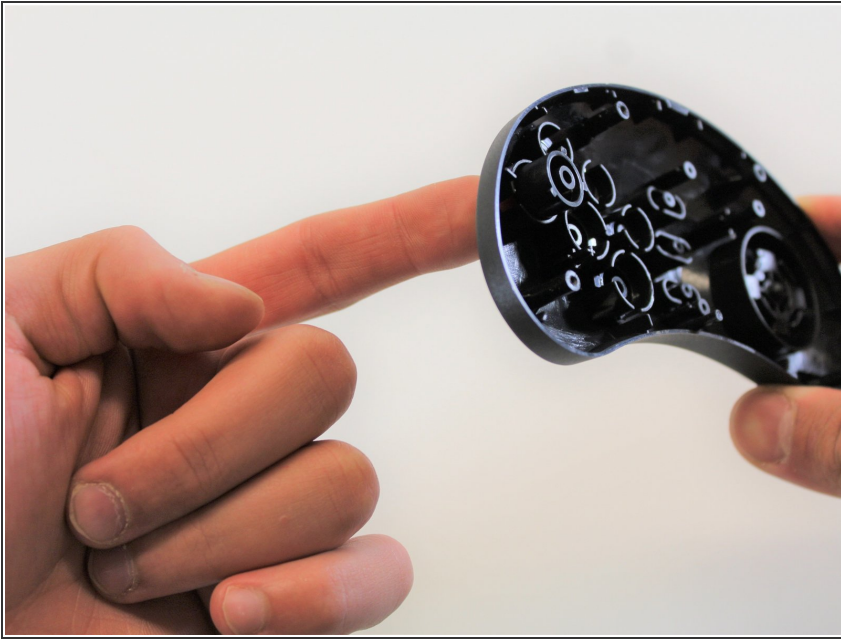

- Pop the button out from the front side of the controller.
 - Pull the button out from the backside using the other hand.
- ⓘ **Note:** All removable buttons can only be placed in their respective holes due to unique groove patterns on the buttons. Keep in mind where each button belongs to make re-assembly easier.
- ⓘ **Note:** All buttons can be removed except for the D-Pad.

Step 4



- Repeat Step 5 for the remaining buttons.

To reassemble your device, follow these instructions in reverse order.