



# Nook Tablet Back Cover Replacement

Back case removal guide.

Written By: Jacob Metzinger



---

## INTRODUCTION

This guide will show you how to remove the back cover revealing the battery. This will allow you to access the inside of the nook tablet and will act as prerequisite for most of the other guides

---

### TOOLS:


- [T5 Torx Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Back Cover



- Flip the Nook over.

## Step 2

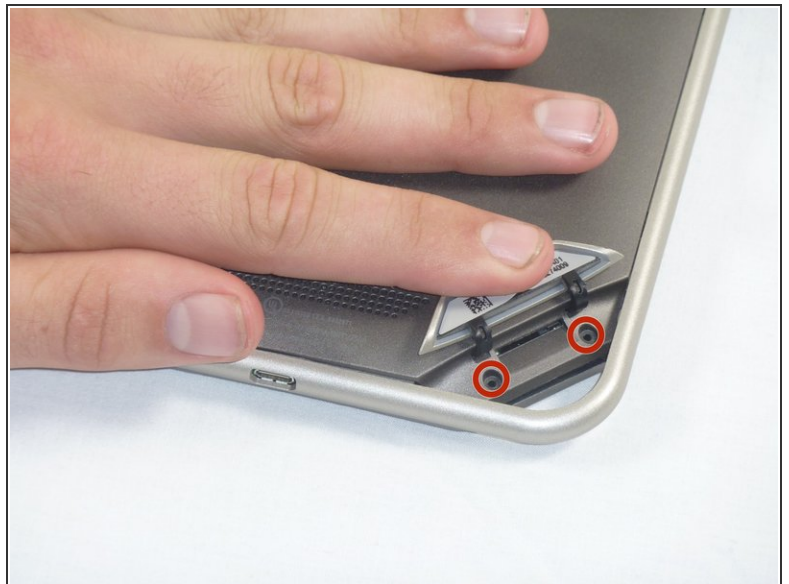

- Lift the flap that reads "Nook" to reveal the tape that is underneath. Remove the memory card if one is present.
- Remove the tape covering the round holes to reveal two T5 Torx screws.
- Remove the two T5 Torx screws securing the back cover.


This document was generated on 2019-09-18 07:01:37 PM (MST).

### Step 3



- Insert the flat end of a spudger between the front panel and the rear assembly.
  - ⓘ Though these photos show a screwdriver, use a spudger or plastic opening tool in order to prevent damage to the device.
- Use a spudger to lift the the back panel from the rest of the Nook.

### Step 4

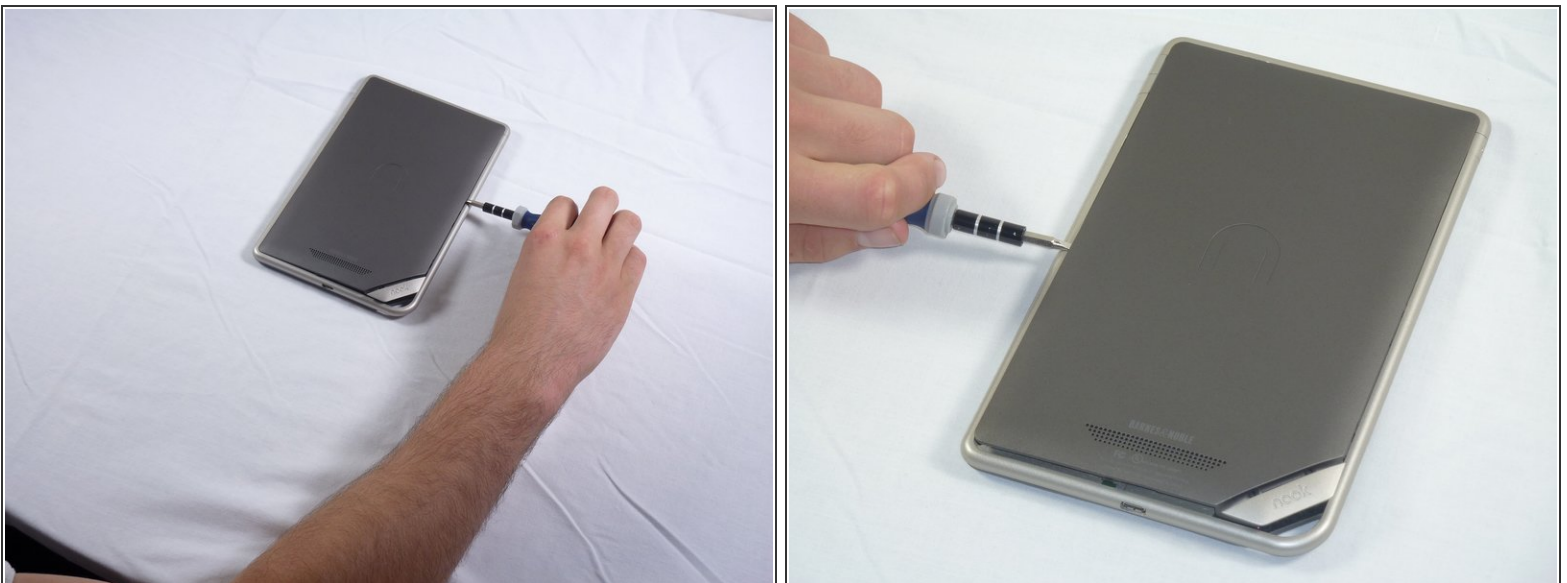

- Slide the spudger around the edges of the Nook to loosen the back panel.

This document was generated on 2019-09-18 07:01:37 PM (MST).

## Step 5



- Pull the back panel off the Nook.

To reassemble your device, line up the piece that was removed with how it was on before and then just firmly press down till it snaps into place.