



Sega Genesis Flashback Controller Batteries Replacement

This guide will teach you how to replace the SEGA Genesis Flashback controller batteries.

Written By: Omar Shorab



INTRODUCTION

This guide will help you remove the batteries in your controller. This is a relatively simple guide, and you'll only need a Phillips #000 screwdriver to complete the process.

TOOLS:

- [54 Bit Driver Kit](#) (1)
 - [Magnetic Project Mat](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Controller Batteries



- Using a Phillips #000 screwdriver, unscrew the single screw located on the battery cover. Remove the battery cover and set it aside.

ⓘ The screw does not detach from the battery cover, so do not attempt to separate them.

Step 2



- If batteries are in the battery slots and need to be replaced, then remove the old batteries by pressing them in and compressing the spring until there is enough space to take them out.
- Insert two fresh batteries into each one of the slots by pushing the indicated negative end of the battery against the spring.
- ⓘ All AAA batteries have “+” and “-” symbols on each end of the batteries to denote the positive and negative ends.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-06-20 09:50:59 AM.