



# Dell Inspiron 14 N4020 Battery Replacement


Written By: Teren Wallace



## **INTRODUCTION**

In this guide, we will show you how to remove and replace the Battery.

## Step 1 — Shut Down the Computer

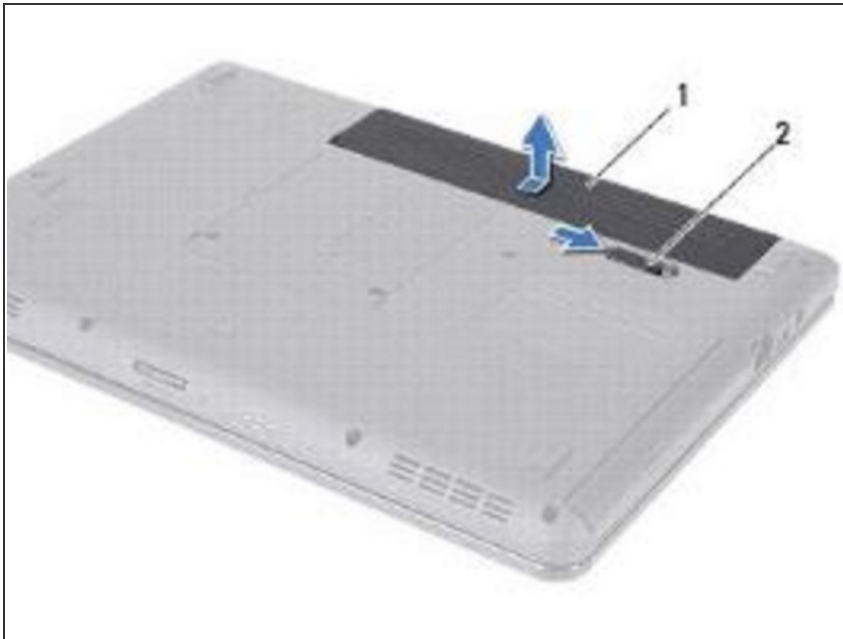


**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin](#).

**⚠ CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Shut down the computer and turn it over.

## Step 2 — Sliding the Battery

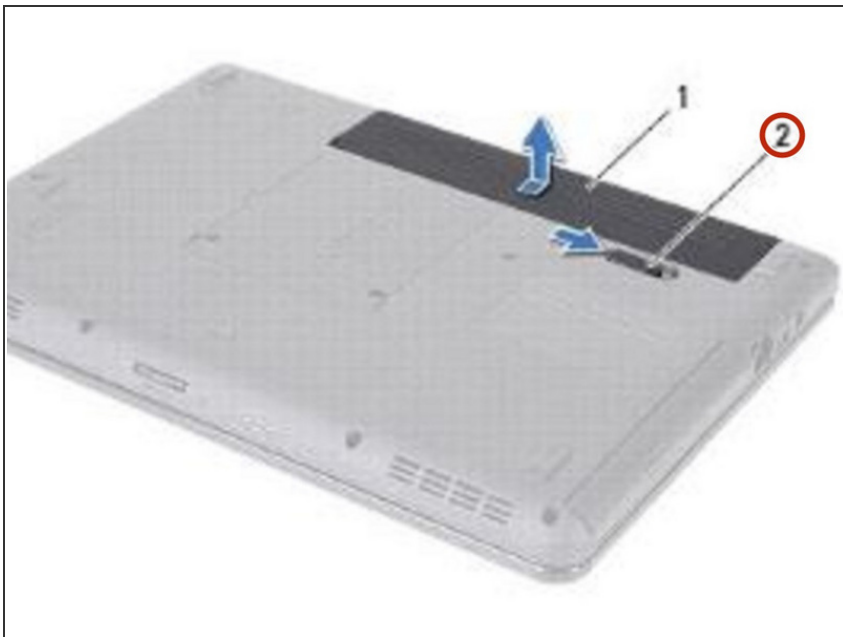


- Slide the battery release latch to the unlock position.

### Step 3 — Removing the Battery

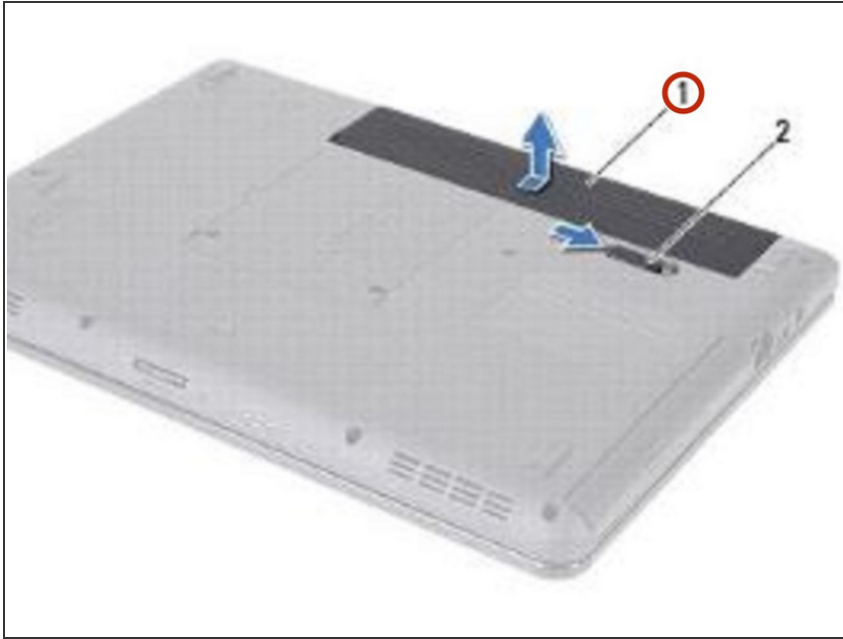


- Slide and lift the battery out of the battery bay.

### Step 4 — Align the Tabs

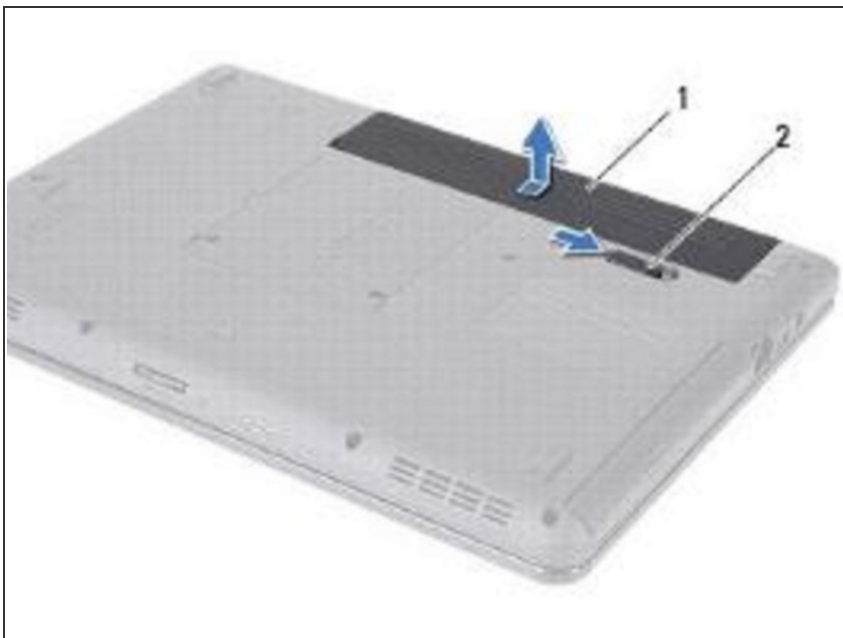

- Align the tabs on the battery with the slots on the battery bay.

## Step 5 — Sliding the Battery

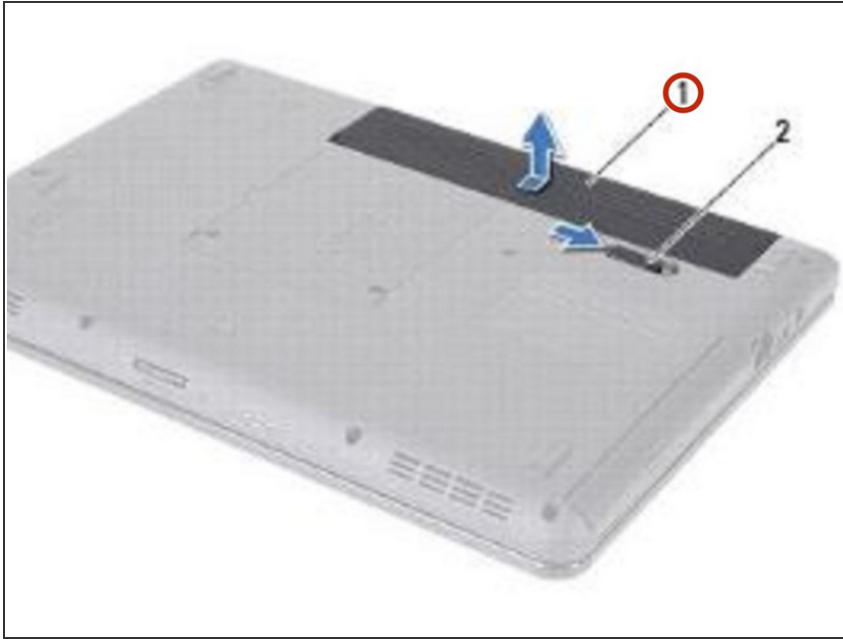

- Slide the battery into the battery bay until it clicks into place.

This document was last generated on 2018-07-23 08:38:26 PM.