




# Dell Inspiron 14R Battery Replacement


Written By: Teren Wallace

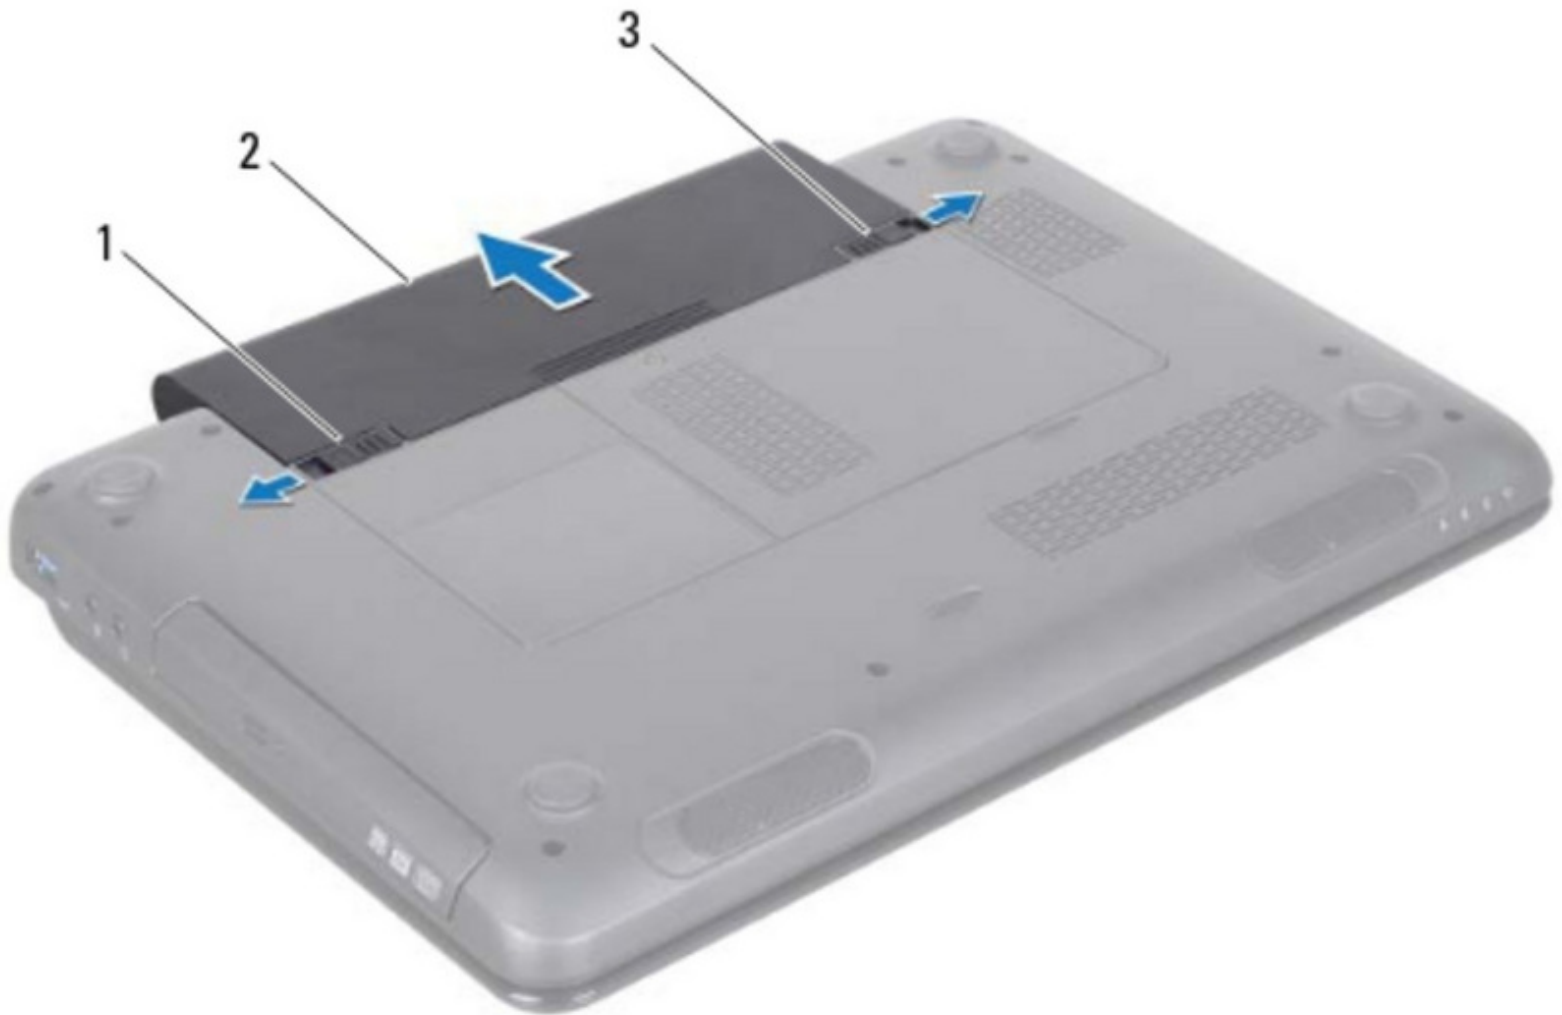

## **INTRODUCTION**

In this guide, we will be showing you how to remove and replace the Battery.

## Step 1 — Turn Over the Computer

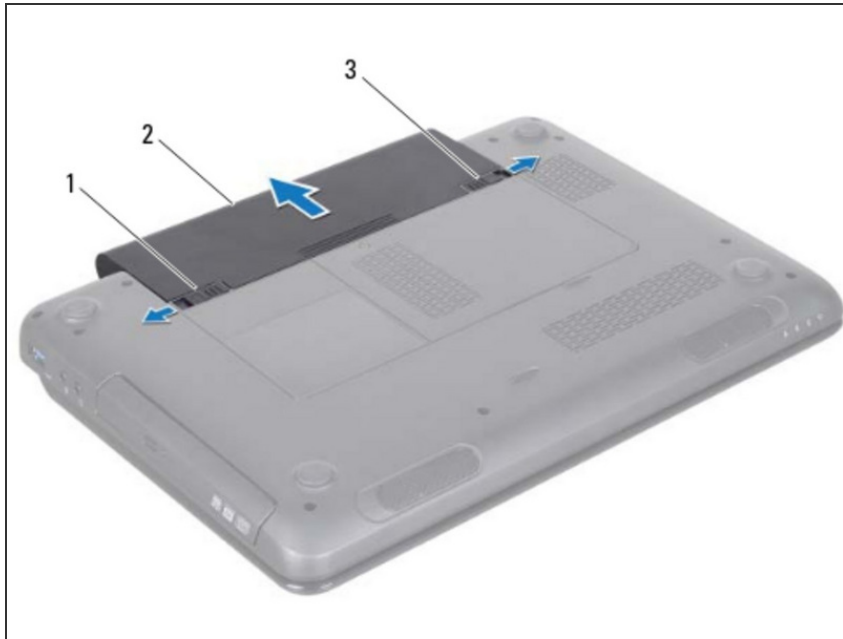


**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in ["Before You Begin"](#).

**⚠ CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Shut down the computer and turn it over.

## Step 2 — Sliding the Battery Latch

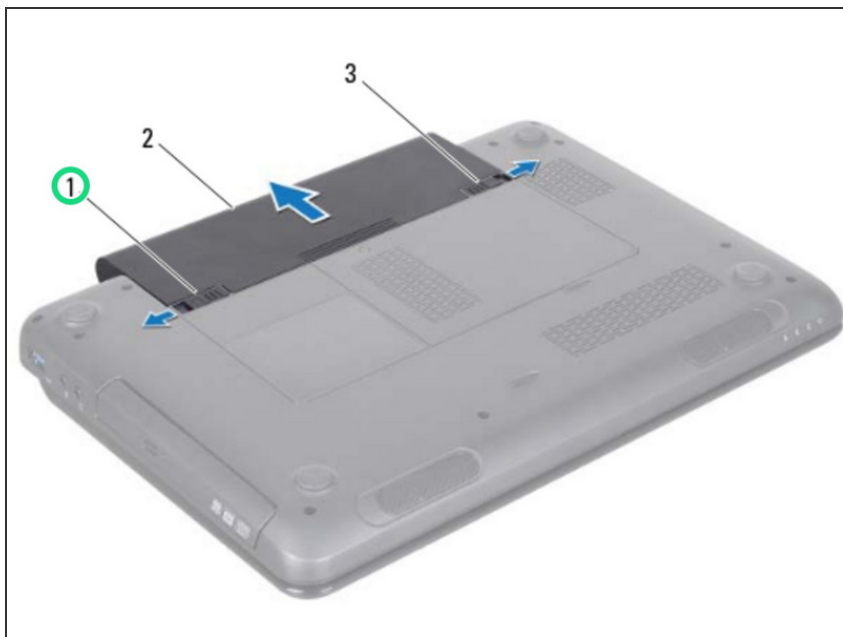


- Slide the battery release latch to the unlock position.

### Step 3 — Sliding the Battery

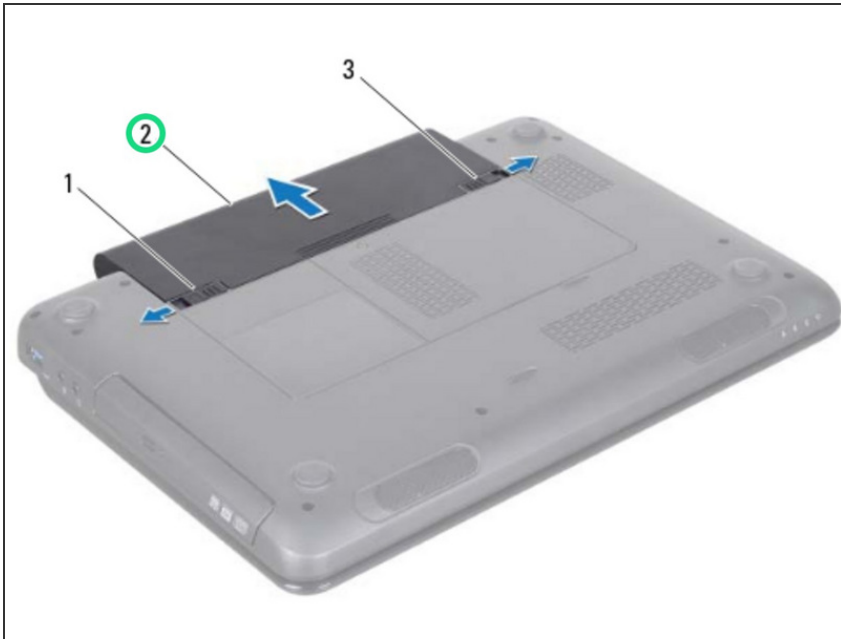


- Slide and lift the battery out of the battery bay.

### Step 4 — Sliding the Battery

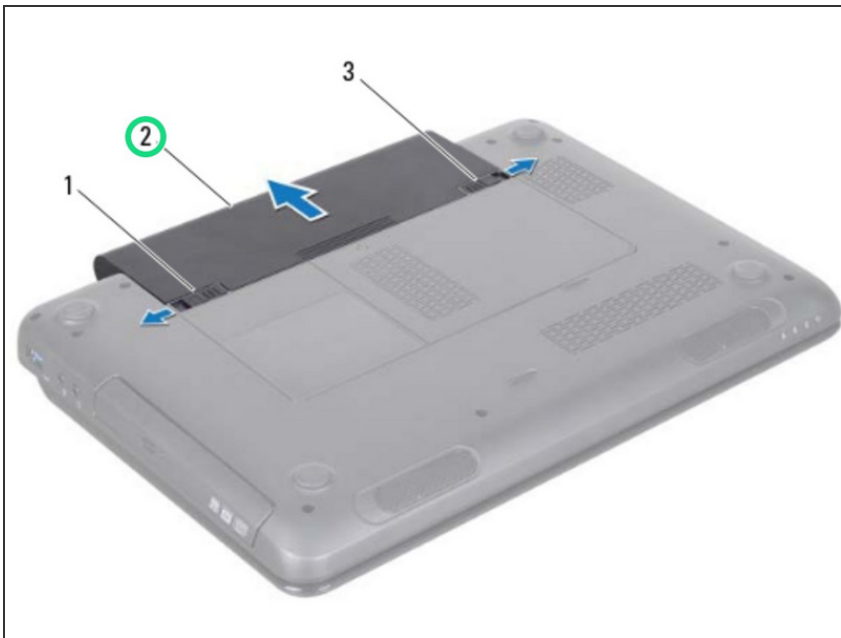

- Slide the **NEW** battery into the battery bay until it clicks into place.

## Step 5 — Sliding the Battery Latch

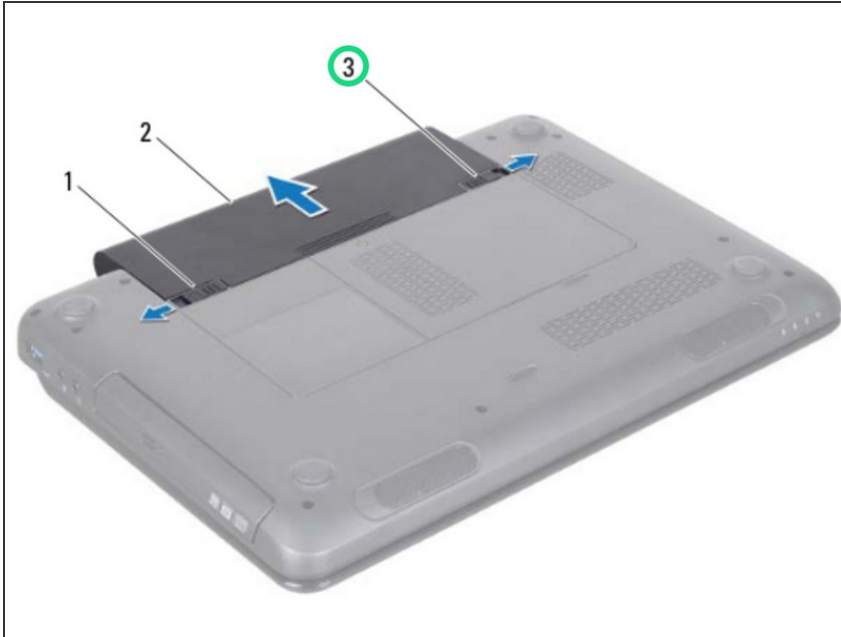

- Slide the battery lock latch to the lock position.

This document was last generated on 2018-07-18 09:57:49 AM.