




# Thermaltake Theron Plus Button Fix

If the buttons on your mouse do not seem to click properly, you may need to fix them. This guide will show an easy fix for defective buttons.

Written By: Steven Kontra

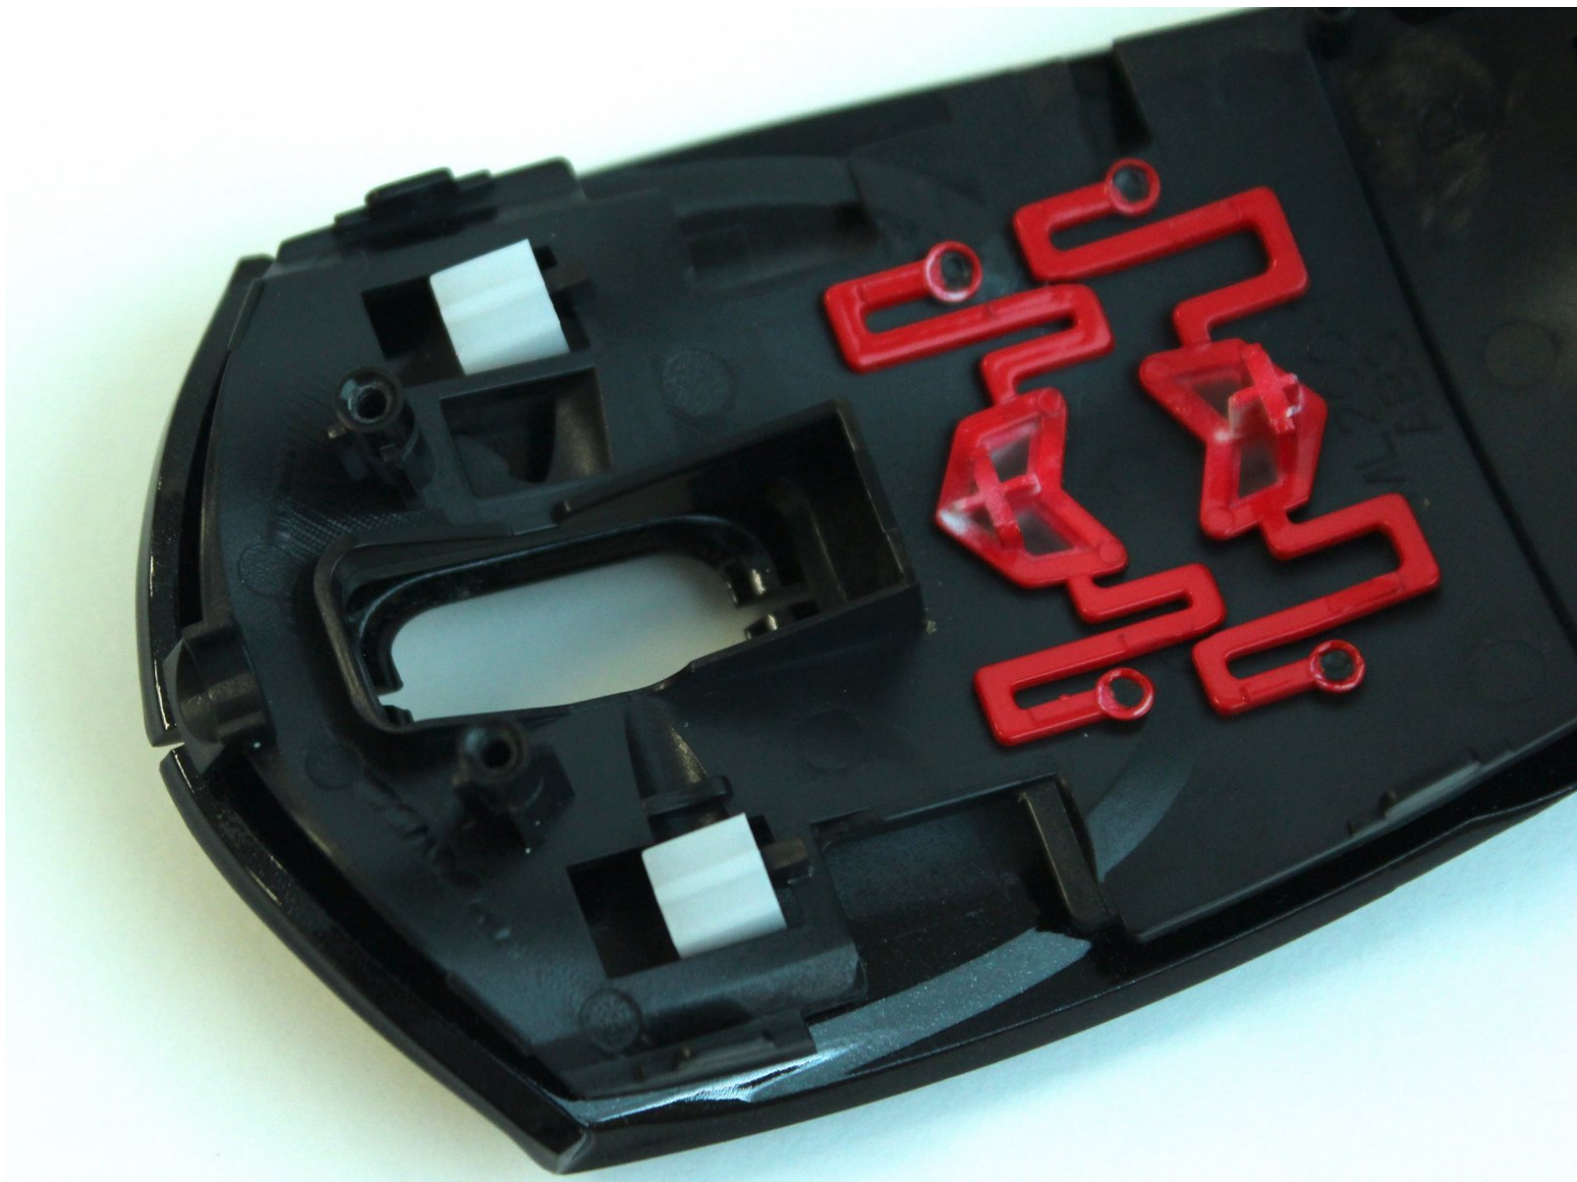

## INTRODUCTION

This guide will provide step by step instructions to show how to fix a button that is no longer clicking properly.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)

### PARTS:

- [Scotch tape](#) (1)
-

## Step 1 — Top cover



- Remove the plastic cover and pack of weights.
- Remove the two 1.0 mm foam covers with tweezers.
- Peel away the plastic screw cover with tweezers.

## Step 2



- Remove the four 1.0 mm screws with a Ph #1 screwdriver.
- Gently remove the top of the mouse.

### Step 3 — Thermaltake Theron Plus Button Fix



- Flip the cover of the mouse over.
- Fold a piece of tape over on itself. This should make both sides sticky.
- Cover both buttons with tape to increase the surface area of each click.

To reassemble your device, follow these instructions in reverse order.