



Kenmore 110 Series Washing Machine Lid Switch Replacement

Replace a faulty lid switch on your Kenmore 110 series washing machine.

Written By: Robert Trout



INTRODUCTION

Use this guide to replace a faulty lid switch on your Kenmore 110 series washing machine.

TOOLS:

- [Adjustable Wrench](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Socket Wrench](#) (1)
- [5/16" Socket](#) (1)

PARTS:

- [Replacement Lid Switch & Harness For 394923 Kenmore](#) (1)

Step 1 — Lid Switch



- ⚠ To avoid risk of electric shock, unplug the washing machine.
- Using a 5/16" socket wrench or an adjustable wrench, remove the three screws from the top rear of the washer.
- Lifting from the rear, remove the top panel.
- Set the top panel on its rear face, with its underside facing you.
- ⓘ The top panel will still be connected to the washer by wires and hoses. It will help if you have a flat raised surface to set the top panel on.

Step 2



- Using a 5/16" socket wrench or hand wrench, remove the two screws from the component cover.
- Gripping from the bottom, pull the component cover out of the washer.

Step 3



- Carefully unplug the two wires connected to the lid switch.
- Remove the two Phillips screws securing the bracket.
- Remove the green ground wire.
- With a screwdriver, remove the single screw connecting the lid switch to the bracket.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 01:54:04 AM.