



Benq MX720 Blower Fan Replacement

Replacing the blower fan or Fan 3 in the hidden system menu including partial teardown.

Written By: Yang Xia

Step 1 — Benq MX720 Blower Fan Replacement



- To access the hidden menu turn on projector.
- Press Menu
- Press Source and Enter at same time
- You should see blank boxes appear at top of screen, use the left and right button to select them. Use the down button to enter, and the menu/exit button to exit.
- For my projector Fan 3 was causing the overheating and shutdown with 155 errors. To find out which fan that is I found a service manual for the Benq W1070 at <https://www.scribd.com/doc/208363905/Ben...>
- On page 130 it listed Fan 3 as the blower fan in the middle of the projector. Fan 1 is out front beside the lamp. Fan 2 is in back beside menu buttons. Fan 4 is on the side beside the lens system.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-20 09:20:58 PM.