




Kenmore 110 Series Washing Machine Water Level Sensor Replacement

Replace a faulty water level sensor in your Kenmore 110 Series Washing Machine.

Written By: Robert Trout

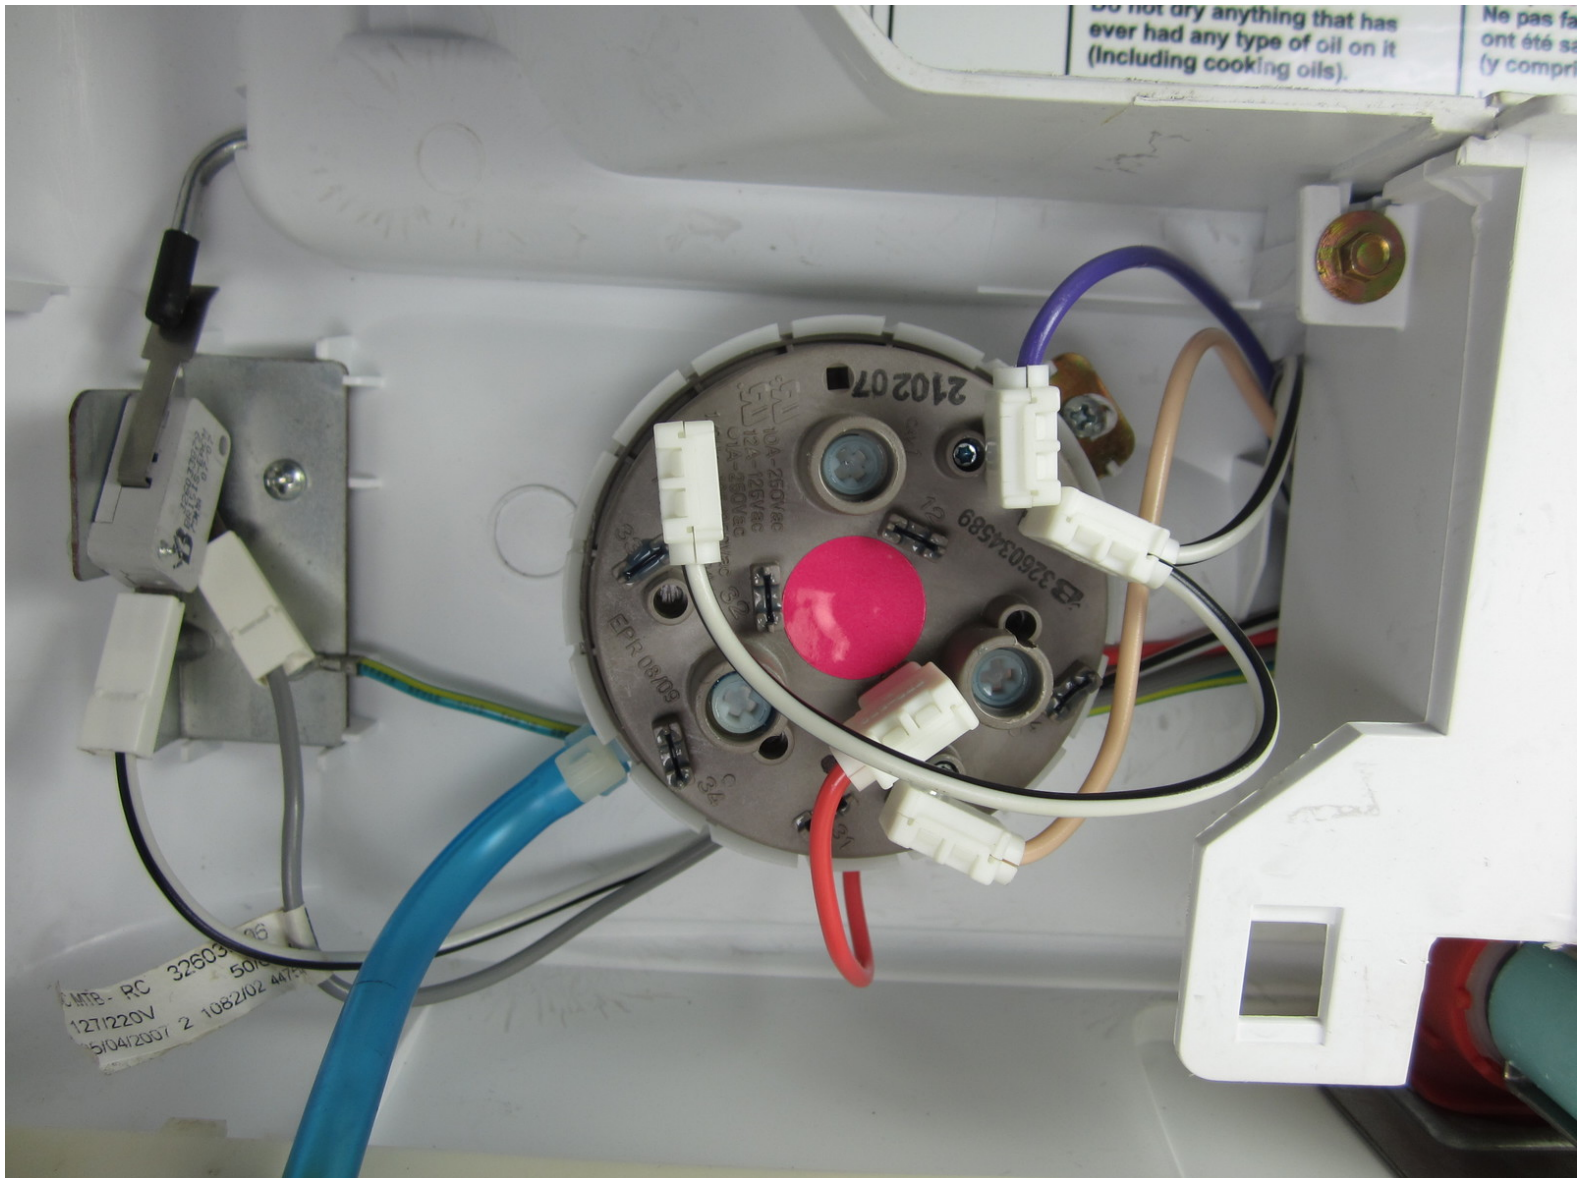

INTRODUCTION

Use this guide to replace a faulty water level sensor.

TOOLS:

- [Adjustable Wrench](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [Socket Wrench](#) (1)
 - [5/16" Socket](#) (1)
-

Step 1 — Water Level Sensor



⚠ Unplug the washing machine!

- Using a 5/16" socket wrench or an adjustable wrench, remove the three screws from the top rear of the washer.
- Lifting from the rear, remove the top panel.
- i** The top panel will still be connected by wires and hoses. It will help if you have a flat raised surface to set the top panel on.

Step 2



- Using a 5/16" socket wrench or a hand wrench, remove the two screws from the component cover.
- From the bottom, pull out and remove the component cover.

Step 3



- Remove wires from water level sensor.
- With a Phillips screwdriver remove the mounting screw.
- Cut the zip tie and remove water level hose.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-29 04:35:34 PM.