



Dell Inspiron 14z-5423 Memory Modules Replacement

Written By: Terrence15



INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Modules.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Close the Display



⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#). After working inside your computer, follow the instructions in ["After Working Inside Your Computer"](#).

- Close the display and turn the computer over.

Step 2 — Loosen the Screw



- Loosen the captive screw that secures the memory-module cover to the computer base.

Step 3 — Lifting the Cover



 
- Using your fingertips, lift and slide the memory-module cover out of the slots on the computer base.

Step 4 — Remove the Memory Module



- Remove the memory module from the memory-module connector.

Step 5 — Align the Notch

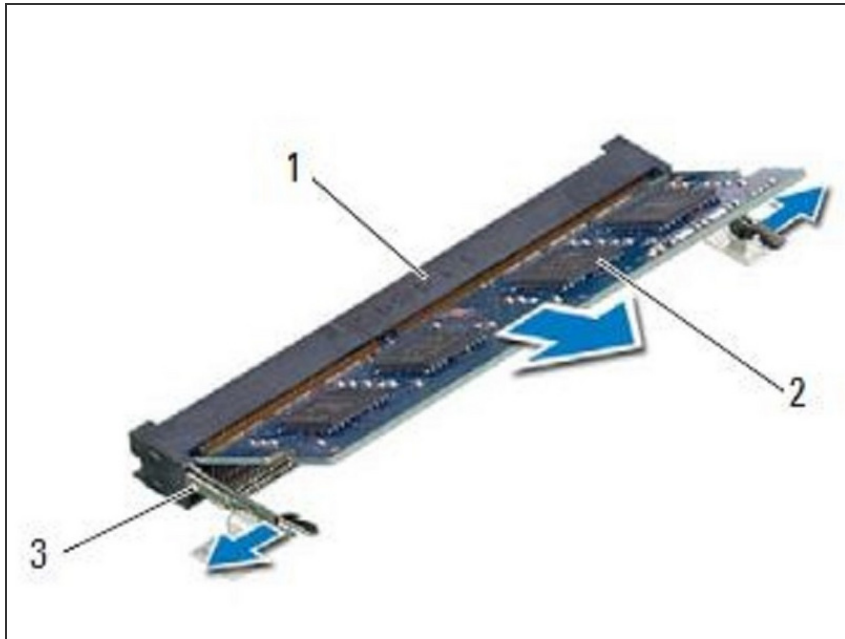


- Align the notch on the **NEW** memory module with the tab on the memory-module connector.

Step 6 — Sliding the Memory Module



- Slide the memory module firmly into the connector at a 45-degree angle and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.

 Step 7 — Slide the Tabs

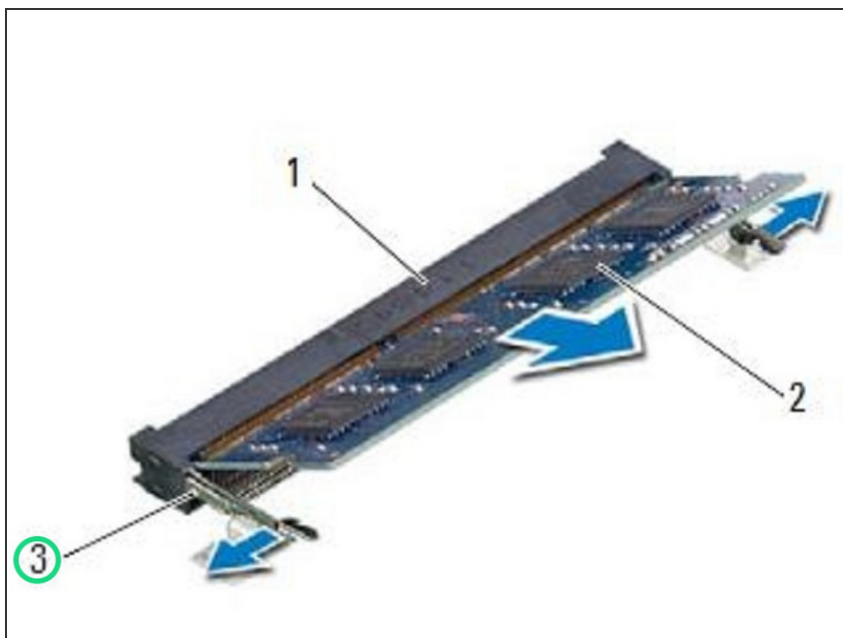

- Slide the tabs on the memory-module cover into the slots on the computer base and snap the memory-module cover into place.

Step 8 — Tighten the Screw



- Tighten the captive screw that secures the memory-module cover to the computer base.

This document was last generated on 2018-08-22 09:27:28 AM.