



Dell Inspiron 15 3568 Battery Replacement


Written By: Terrence15



INTRODUCTION

In this guide, we will show you how to remove and replace the Battery.


Step 1 — Close the Display

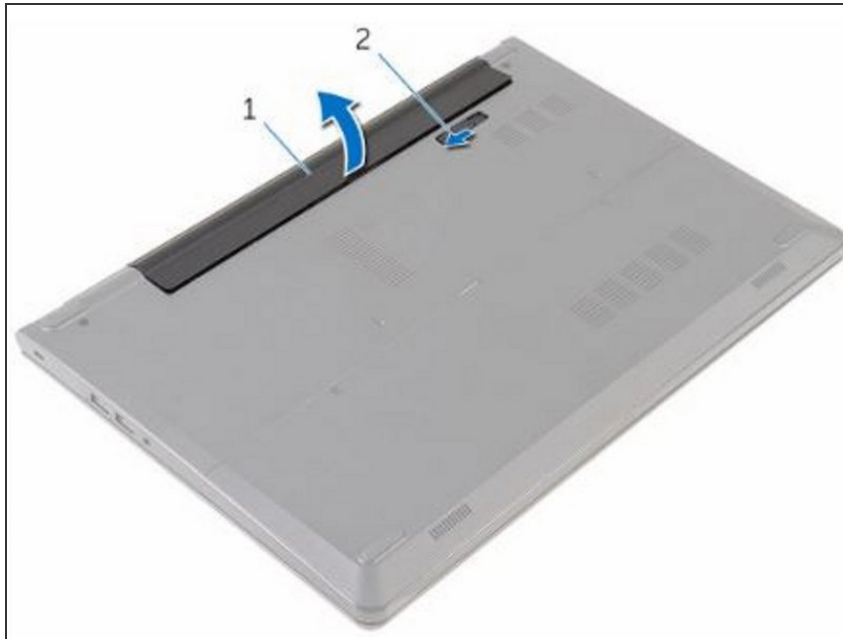

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Close the display and turn the computer over.

Step 2 — Sliding the Battery Latch

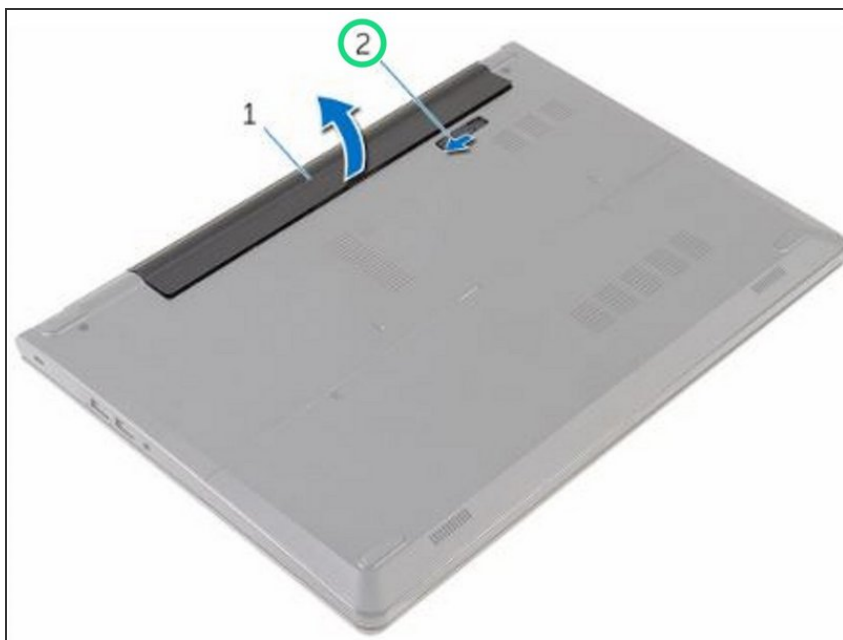


- Slide the battery-release latch to the unlock position.

Step 3 — Lifting the Battery

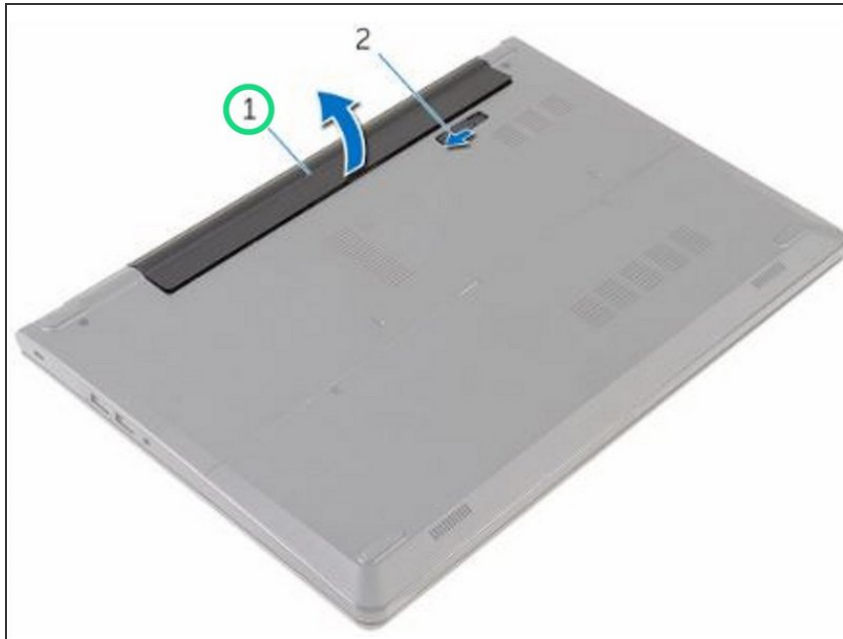


- Lift the battery at an angle and remove the battery from the battery bay.

Step 4 — Grounding the System Board

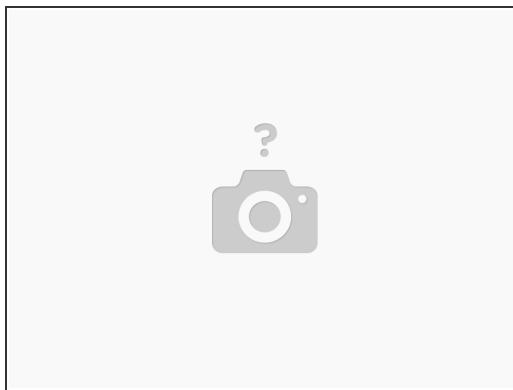

- Turn the computer over, open the display, and press the power button for five seconds to ground the system board.

Step 5 — Slide the Tabs

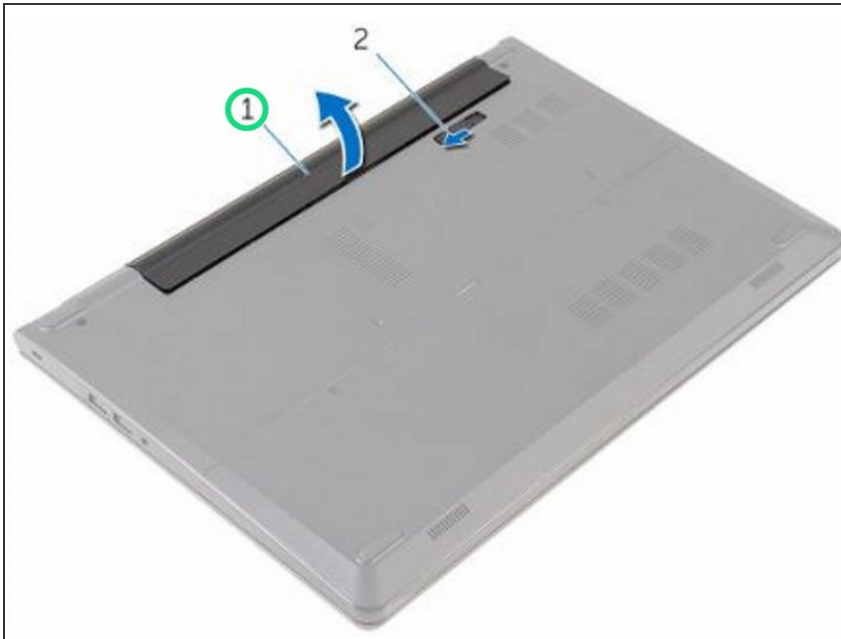

- Slide the tabs on the battery into the slots on the battery bay and snap the battery into place.

i NOTE: The battery-release latch returns to the lock position if the battery is installed properly.

This document was last generated on 2019-08-17 01:34:58 AM.