




Dell Inspiron 15 5565 Battery Replacement

Written By: Teren Wallace

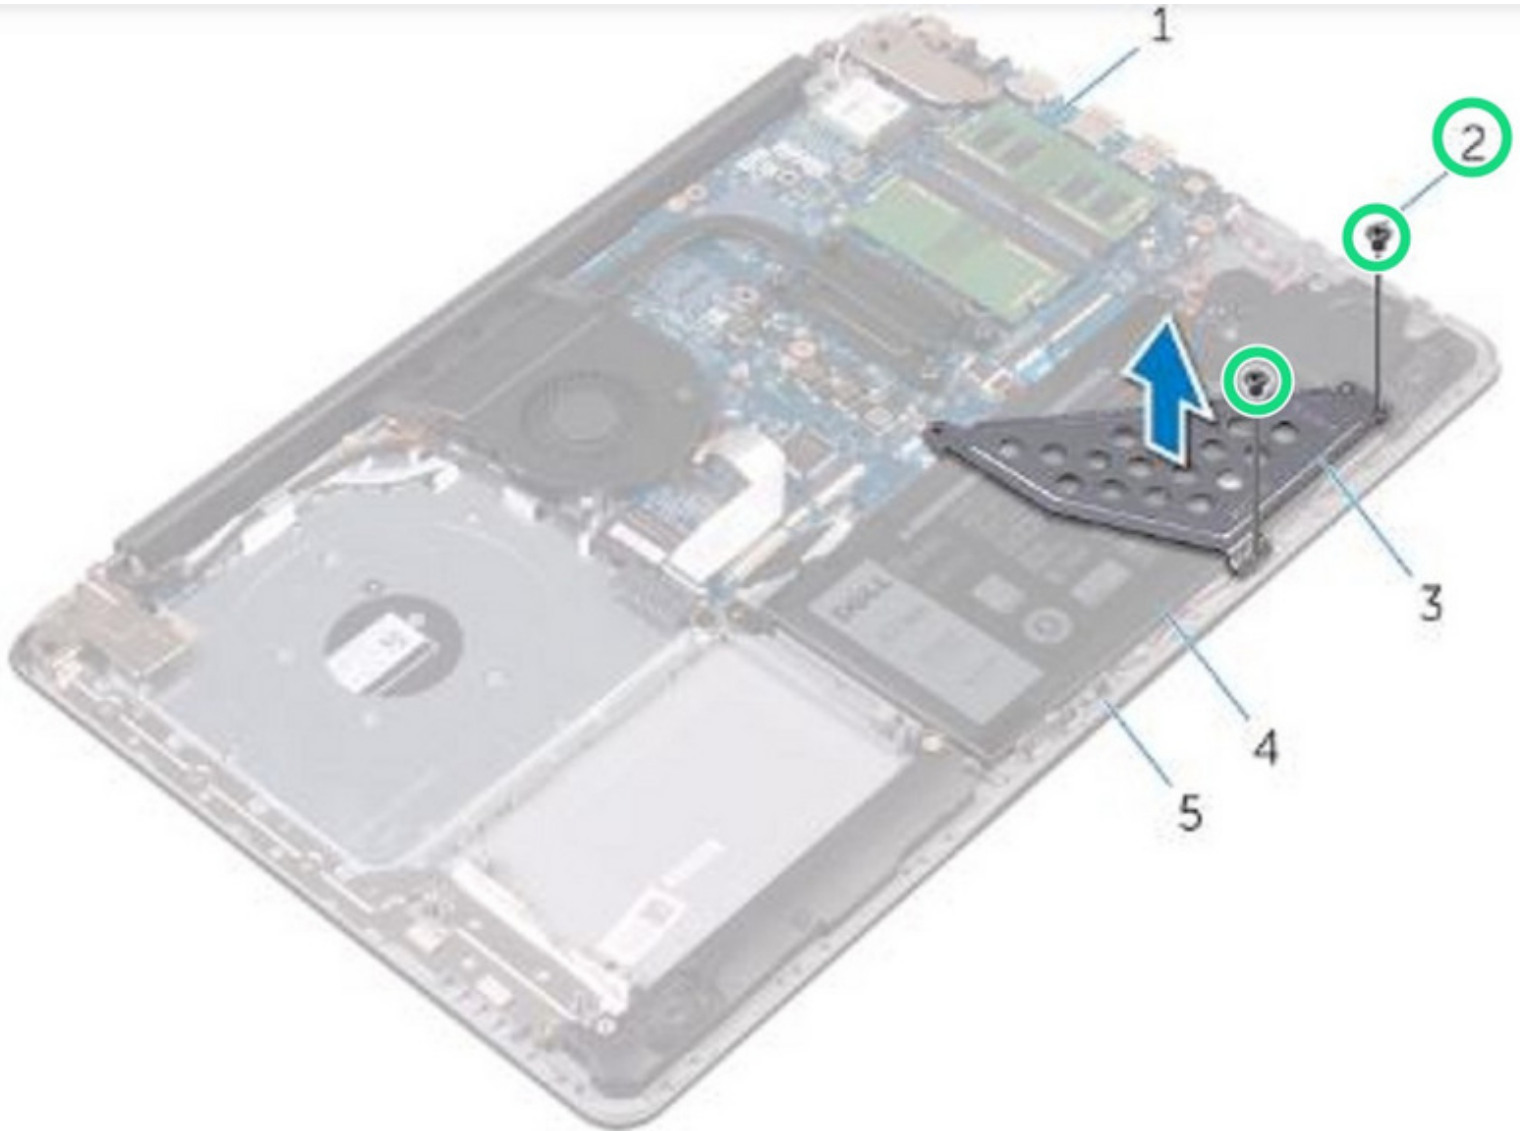


INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Remove the Screws

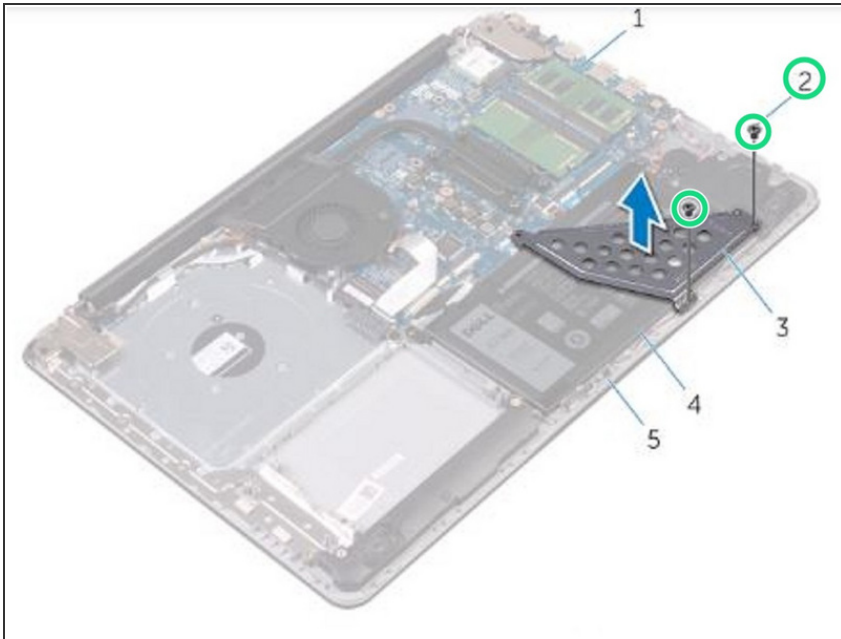

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Remove the screws that secure the battery bracket to the system board and palm rest and keyboard assembly.

Step 2 — Removing the Battery Bracket

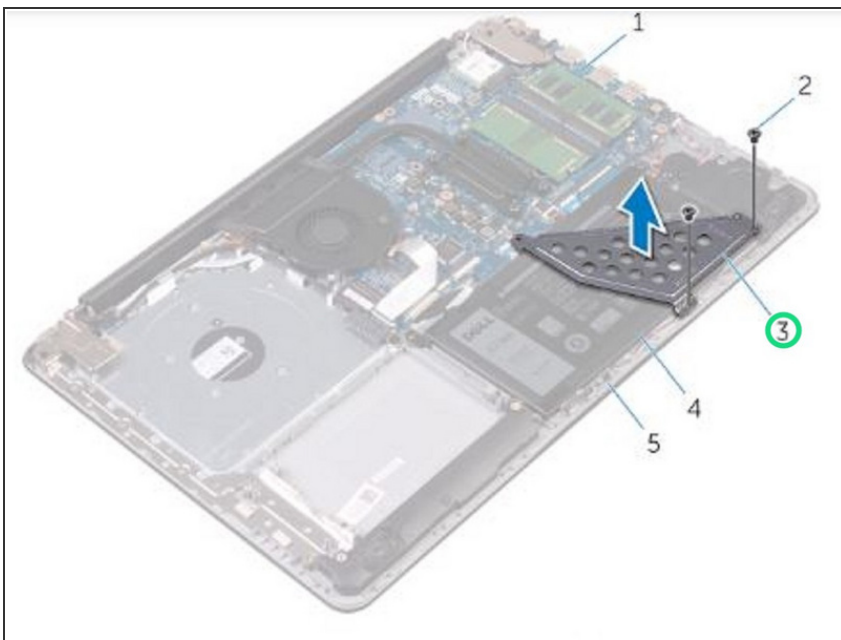


- Lift and remove the battery bracket.

Step 3 — Remove the Screw

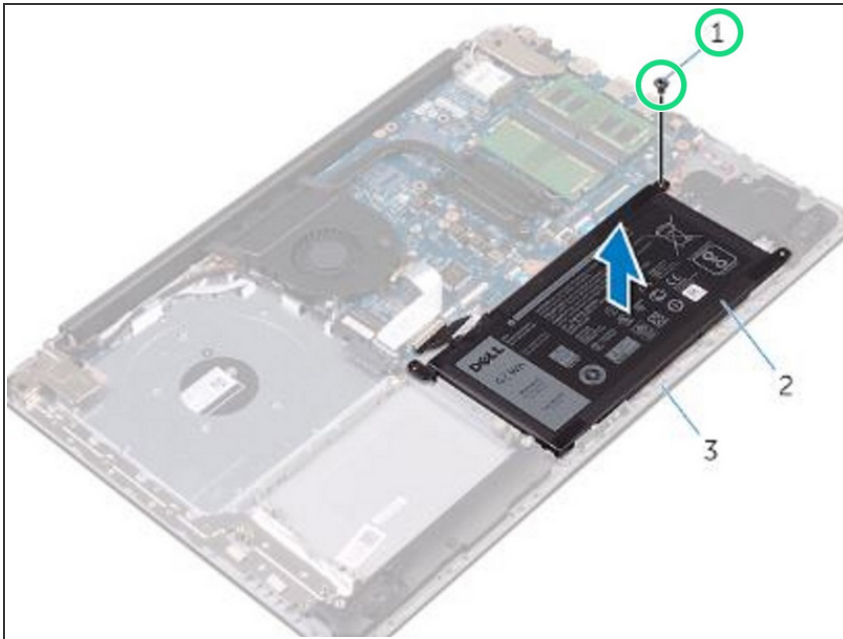


- Remove the screw that secures the battery to the palm rest and keyboard assembly.
- ⓘ NOTE: Note the location of the screw that secures the battery to the palm rest and keyboard assembly.

Step 4 — Lifting the Battery

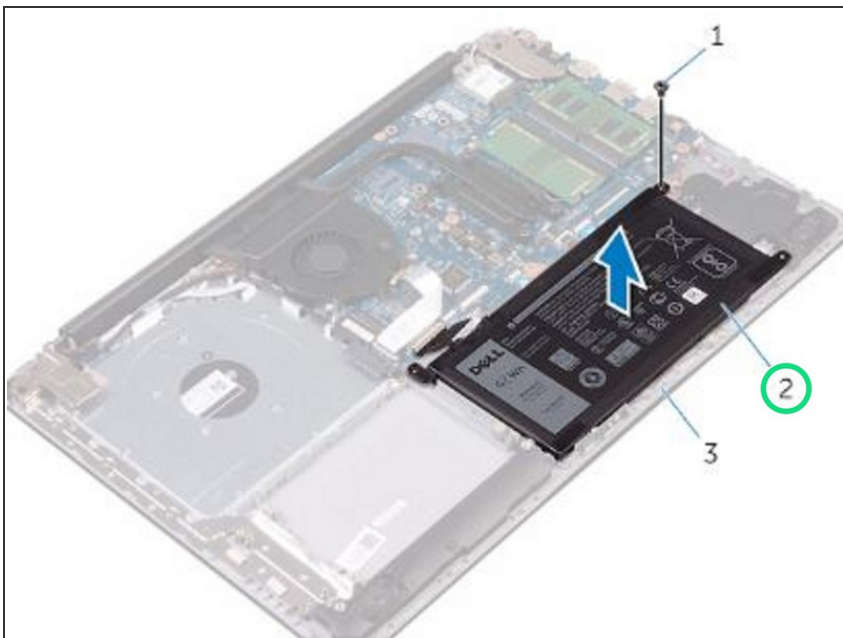


- Lift the battery off the palm rest and keyboard assembly.

Step 5 — Align the Screw Holes

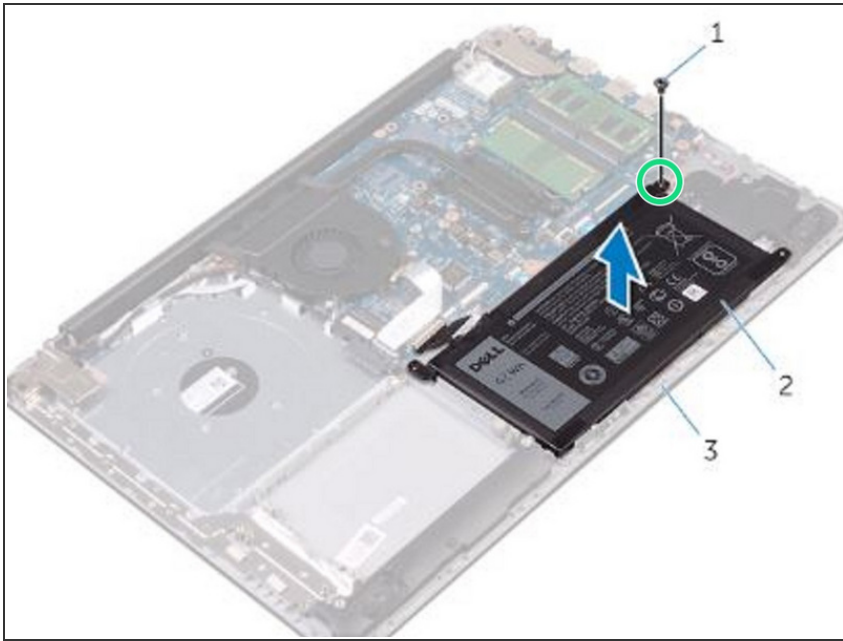


- Align the screw holes on the **NEW** battery with the screw holes on the palm rest and keyboard assembly.

Step 6 — Replace the Screw

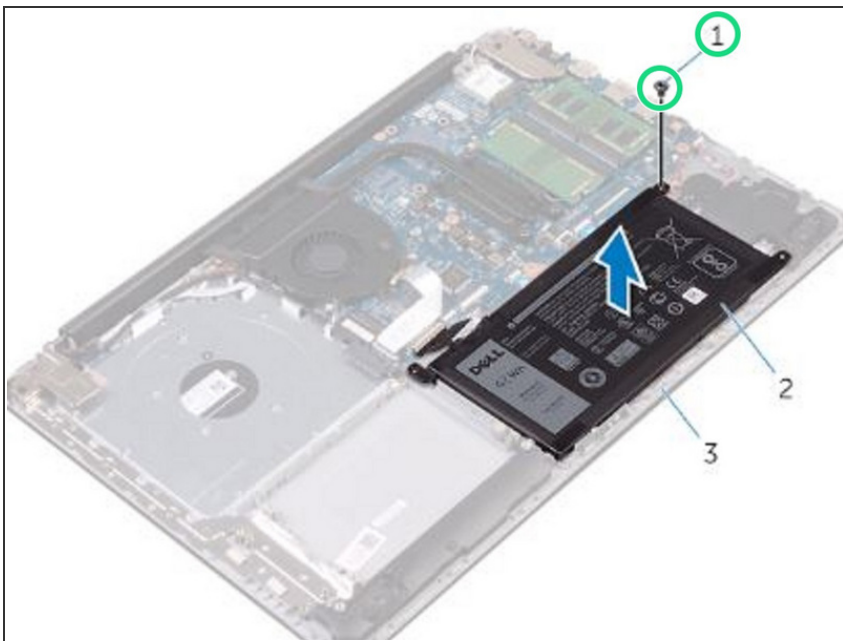


- Replace the screw that secures the battery to the palm rest and keyboard assembly.

Step 7 — Align the Screw Holes

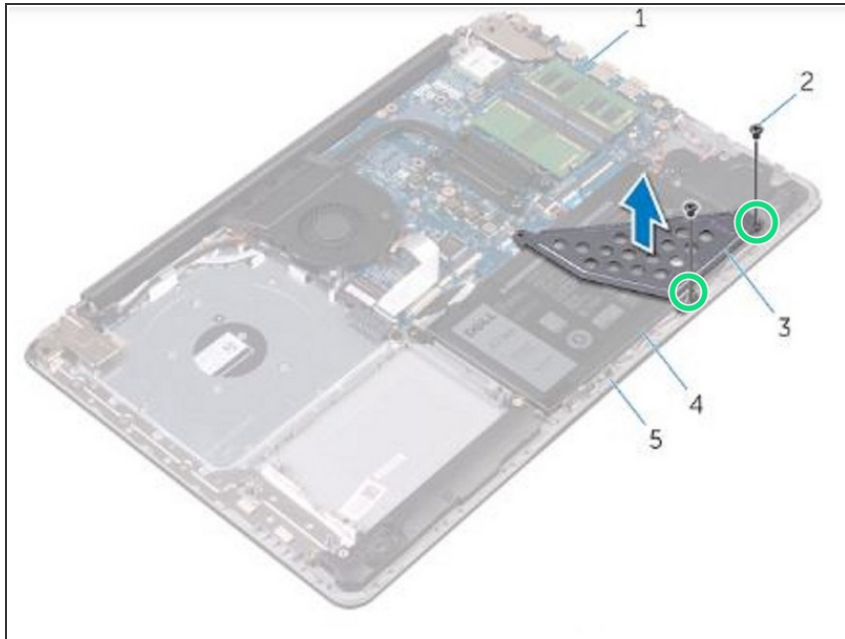

- Align the screw holes on the battery bracket with the screw holes on the system board and palm rest and keyboard assembly.

Step 8 — Replace the Screws

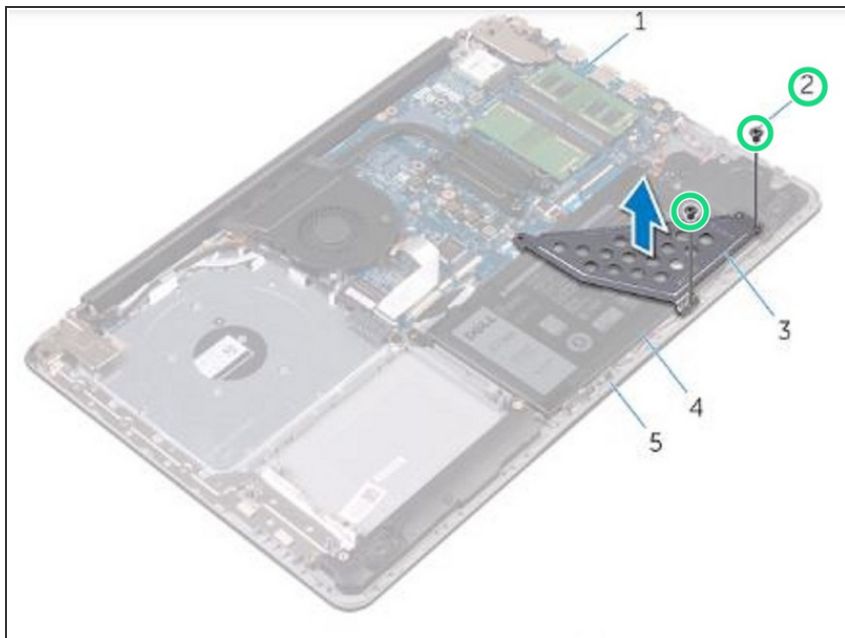

- Replace the screws that secure the battery bracket to the system board and palm rest and keyboard assembly.