




# Dell Inspiron 15-5558 Memory Modules Replacement

How to replace the RAM on a Dell Inspiron 15-5558.


Written By: Terrence15

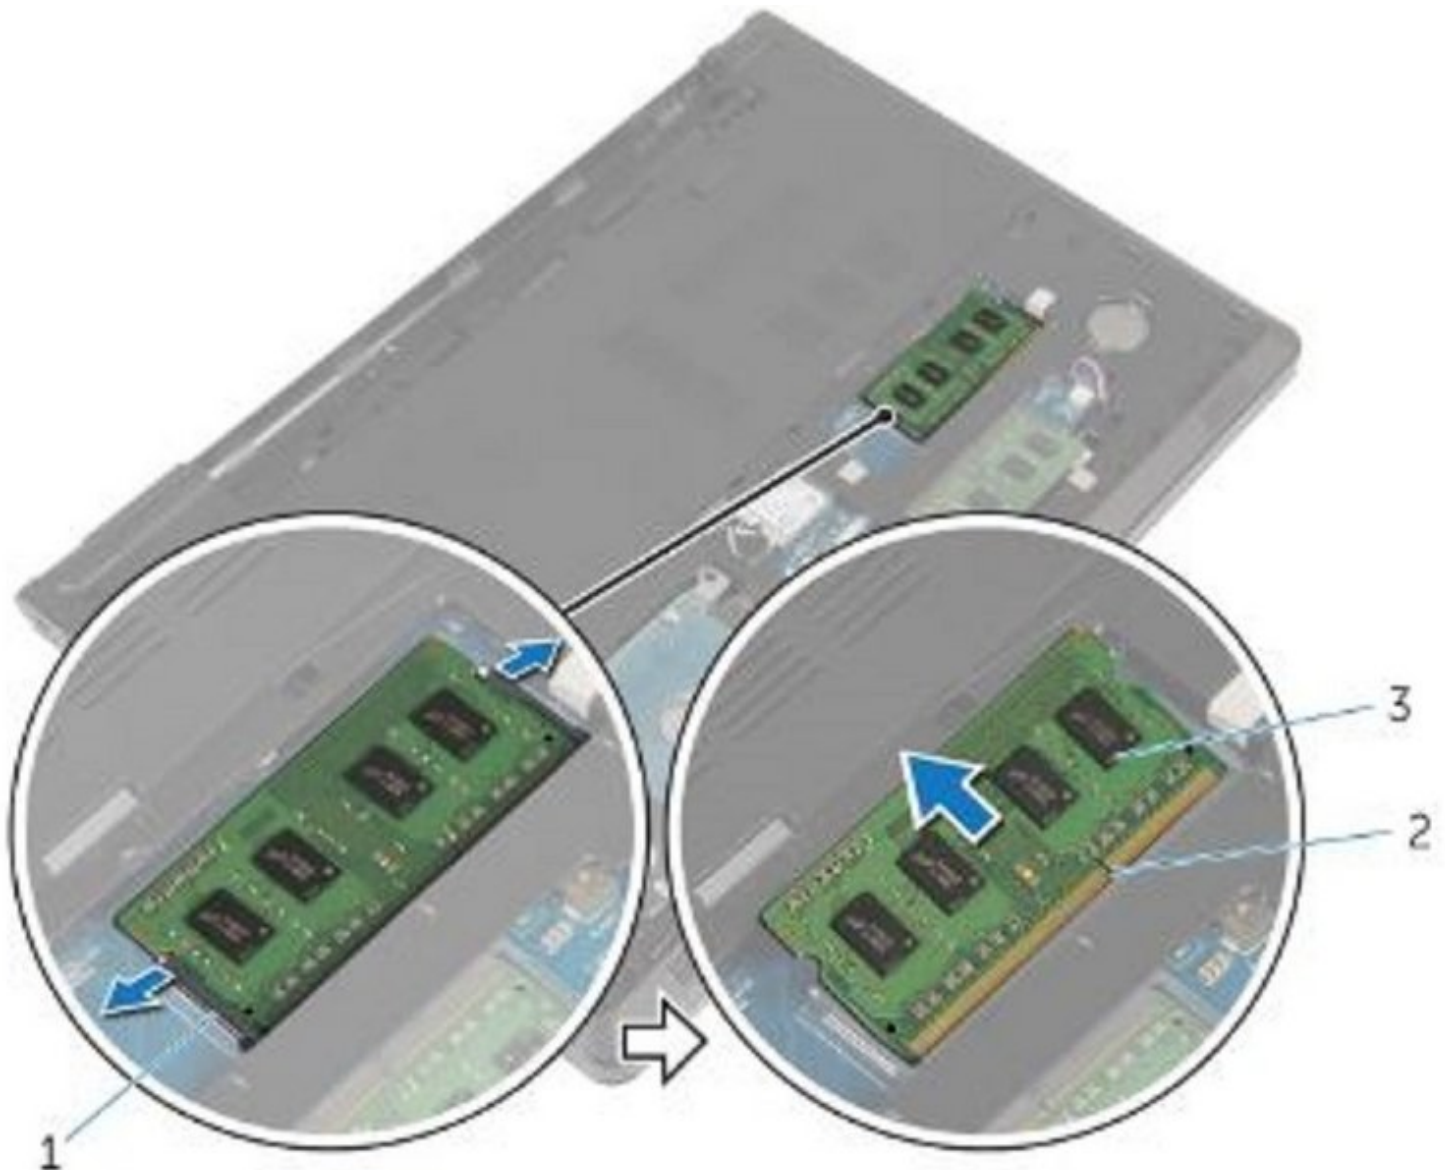

## **INTRODUCTION**

In this guide, we will be showing you how to remove and replace the Memory Modules.


## Step 1 — Popping up the Memory Module

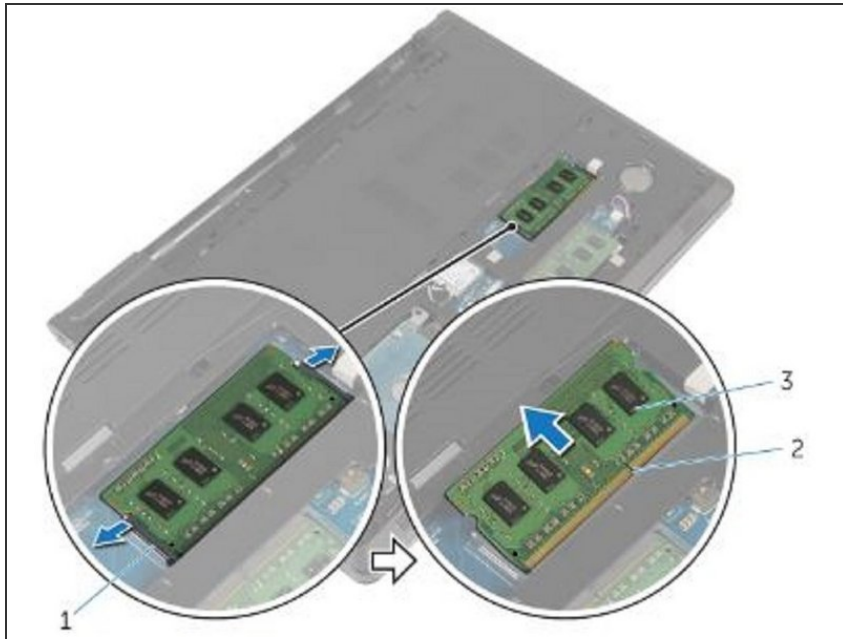

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).

- Use your fingertips to carefully spread apart the securing clips on each end of the memory-module slot until the memory module pops up.

## Step 2 — Remove the Memory Module

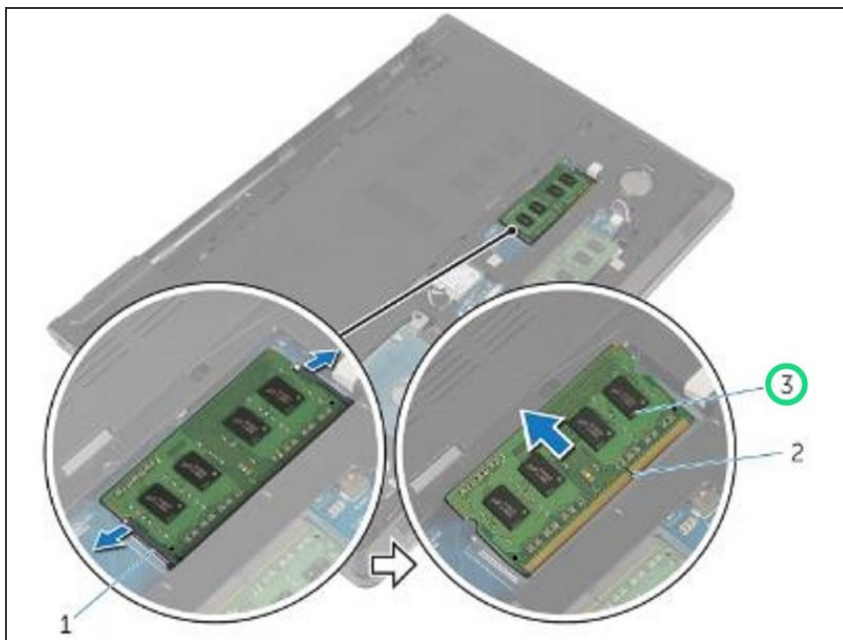


- Remove the memory module from the memory-module slot.

### Step 3 — Align the Notch



- Align the notch on the **NEW** memory module with the tab on the memory-module slot.

### Step 4 — Remove the Memory Module

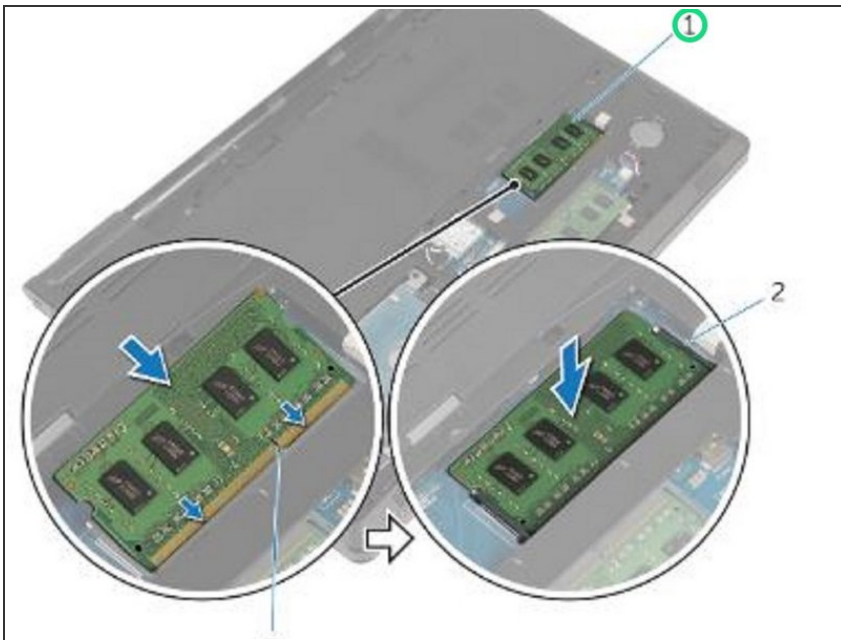

- Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.
- i** NOTE: If you do not hear the click, remove the memory module and reinstall it.