




Dell Inspiron 15 M5030 Battery Replacement


Written By: Terrence15

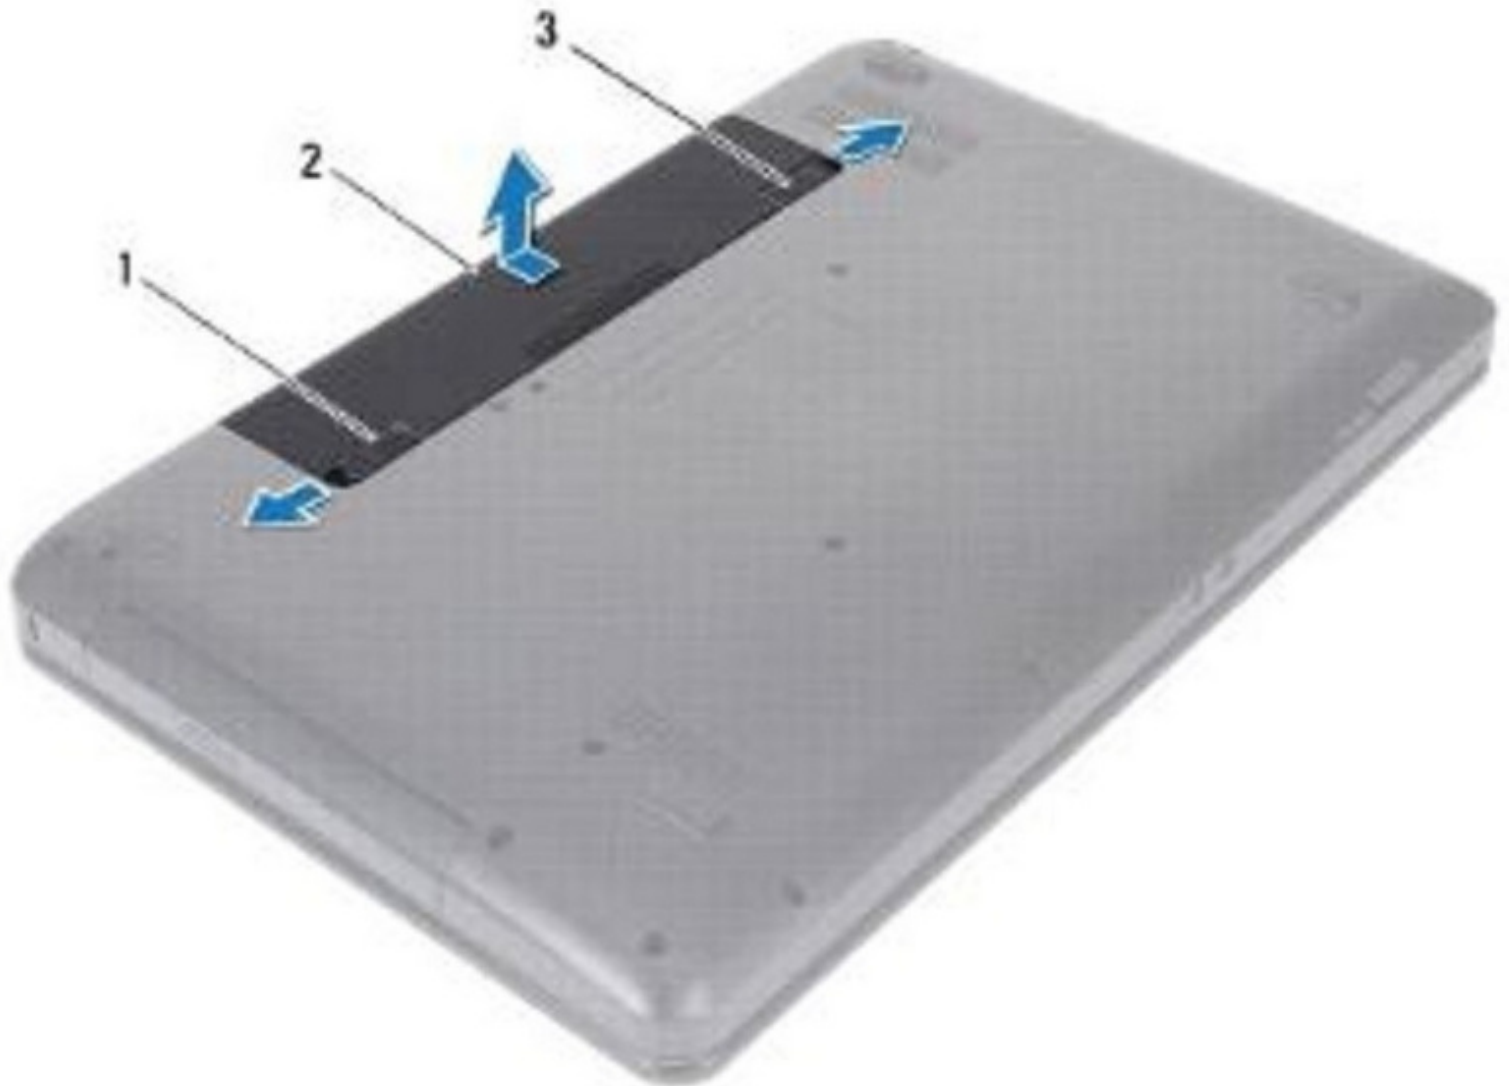

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

Step 1 — Turn over the Computer

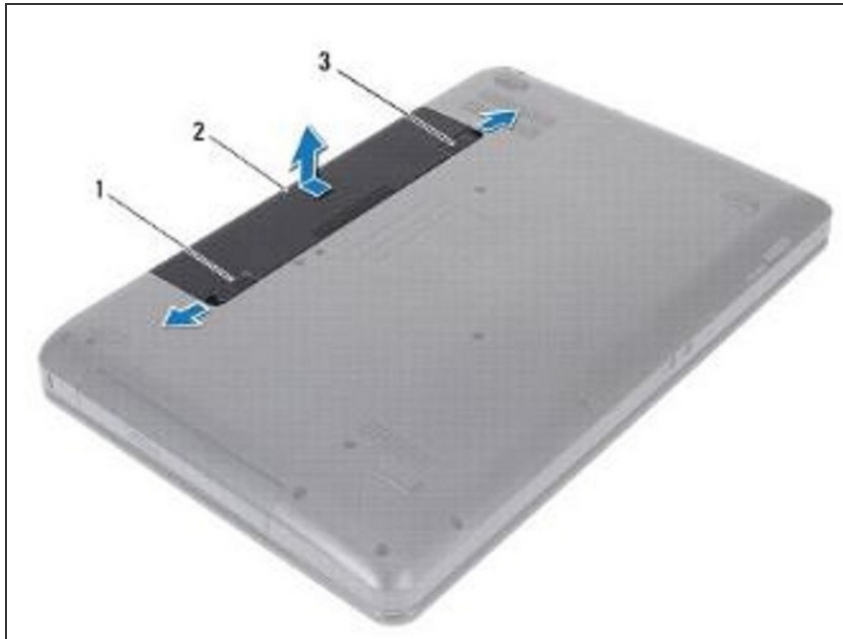


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in [Before You Begin](#).

⚠ CAUTION: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Shut down the computer and turn it over.

Step 2 — Sliding the Lock Latch

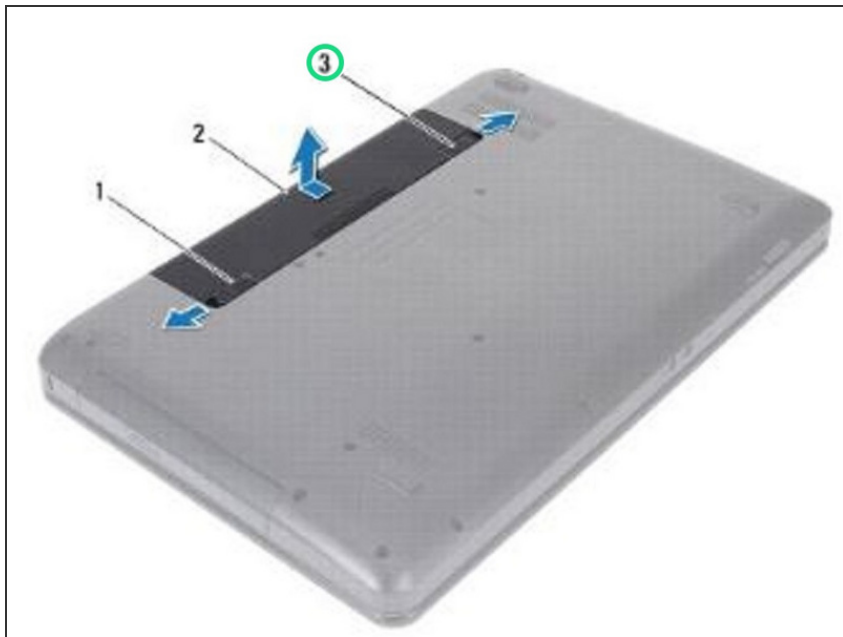


- Slide the battery lock latch to the unlock position.

Step 3 — Sliding the Battery Latch

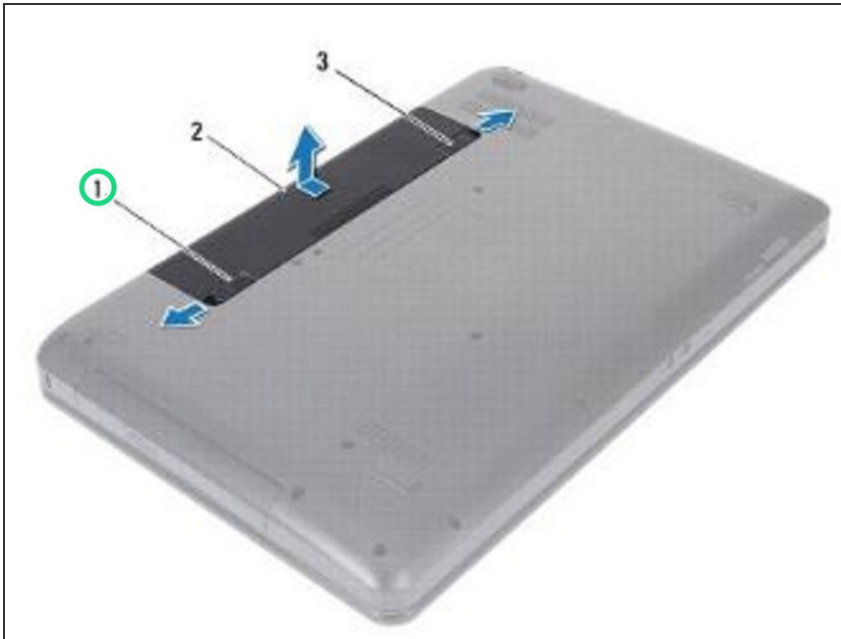


- Slide the battery release latch to the side.

Step 4 — Lifting the Battery

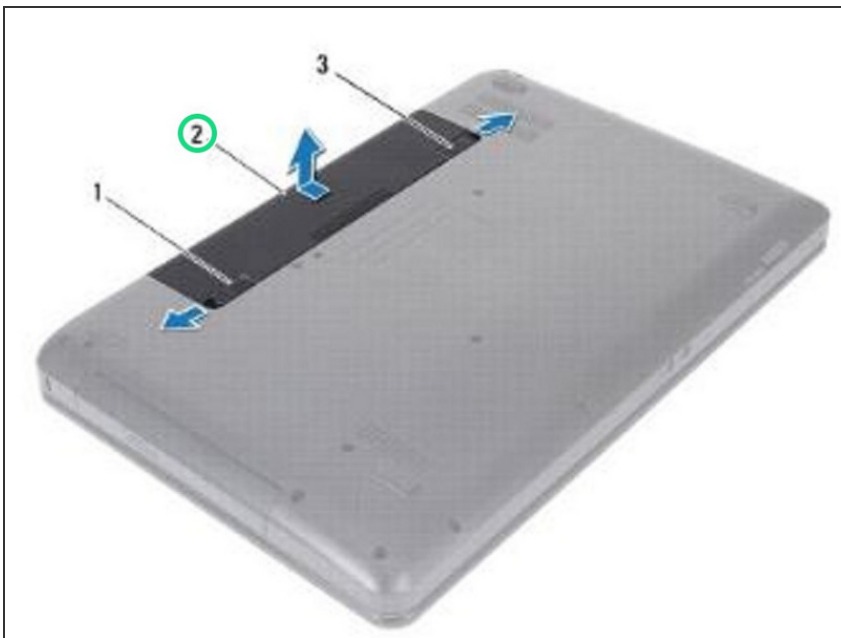


- Slide and lift the battery out of the battery bay.

Step 5 — Align the Tabs

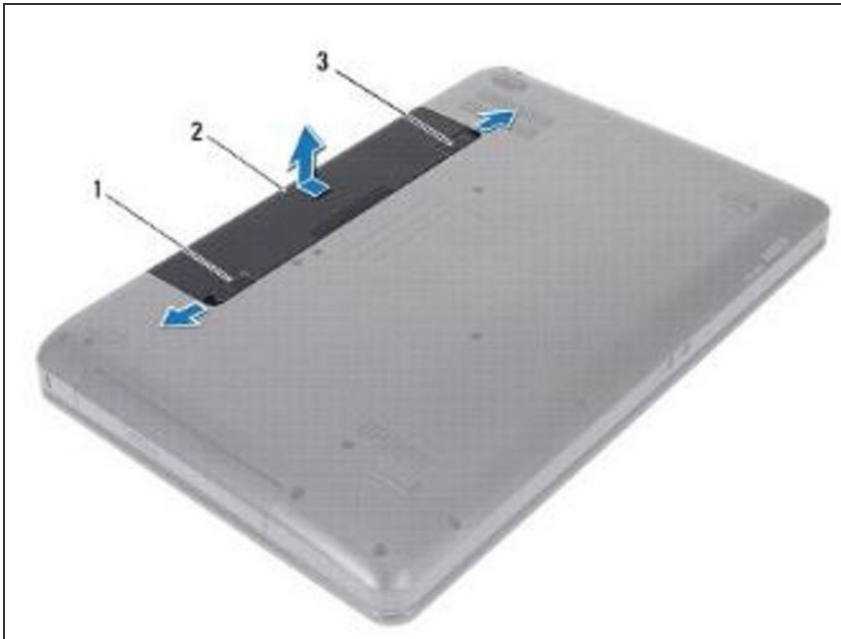


- Align the tabs on the **NEW** battery with the slots on the battery bay.

Step 6 — Sliding the Battery

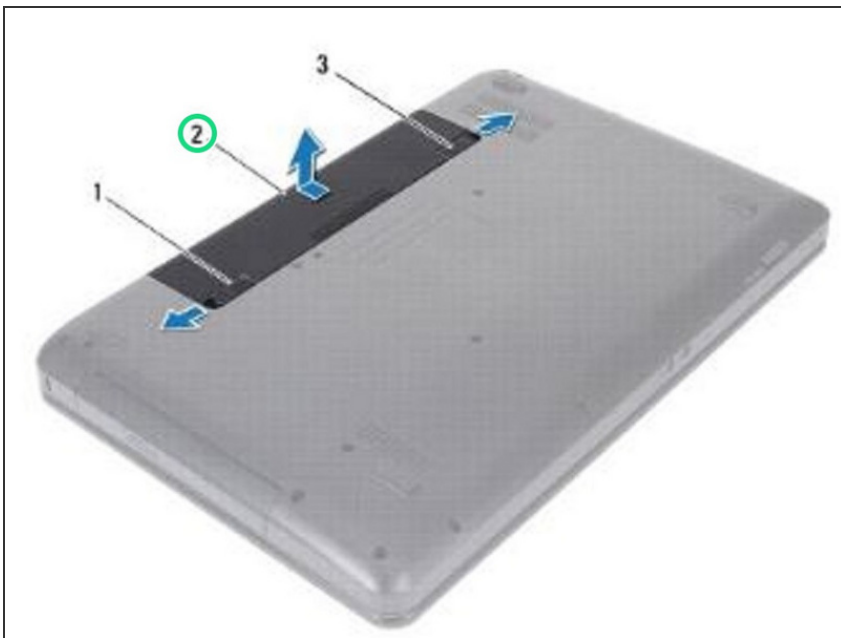

- Slide the battery into the battery bay until it clicks into place.

Step 7 — Sliding the Battery Lock Latch

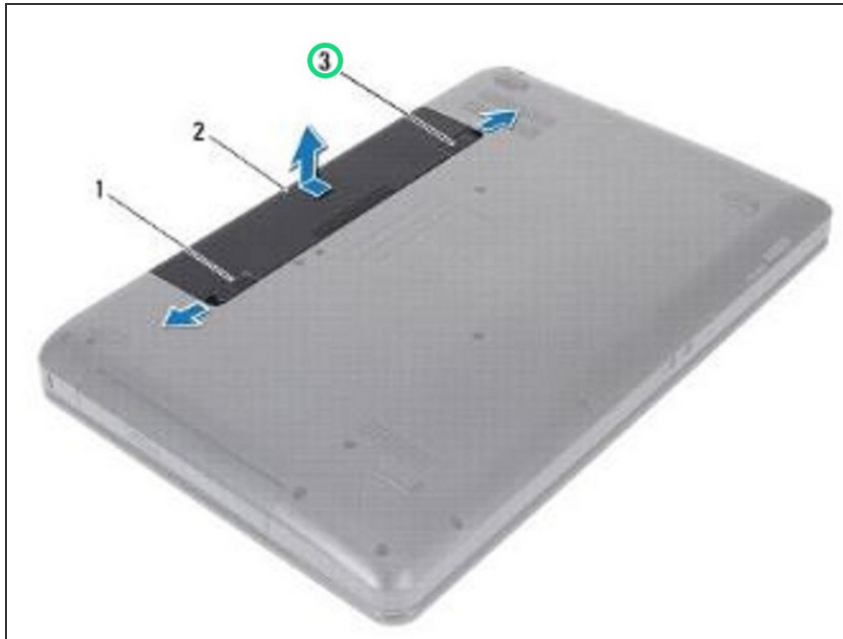

- Slide the battery lock latch to the lock position.

This document was last generated on 2018-08-30 01:15:08 AM.