




Dell Inspiron 1526 Hard Drive Replacement

Written By: Terrence15

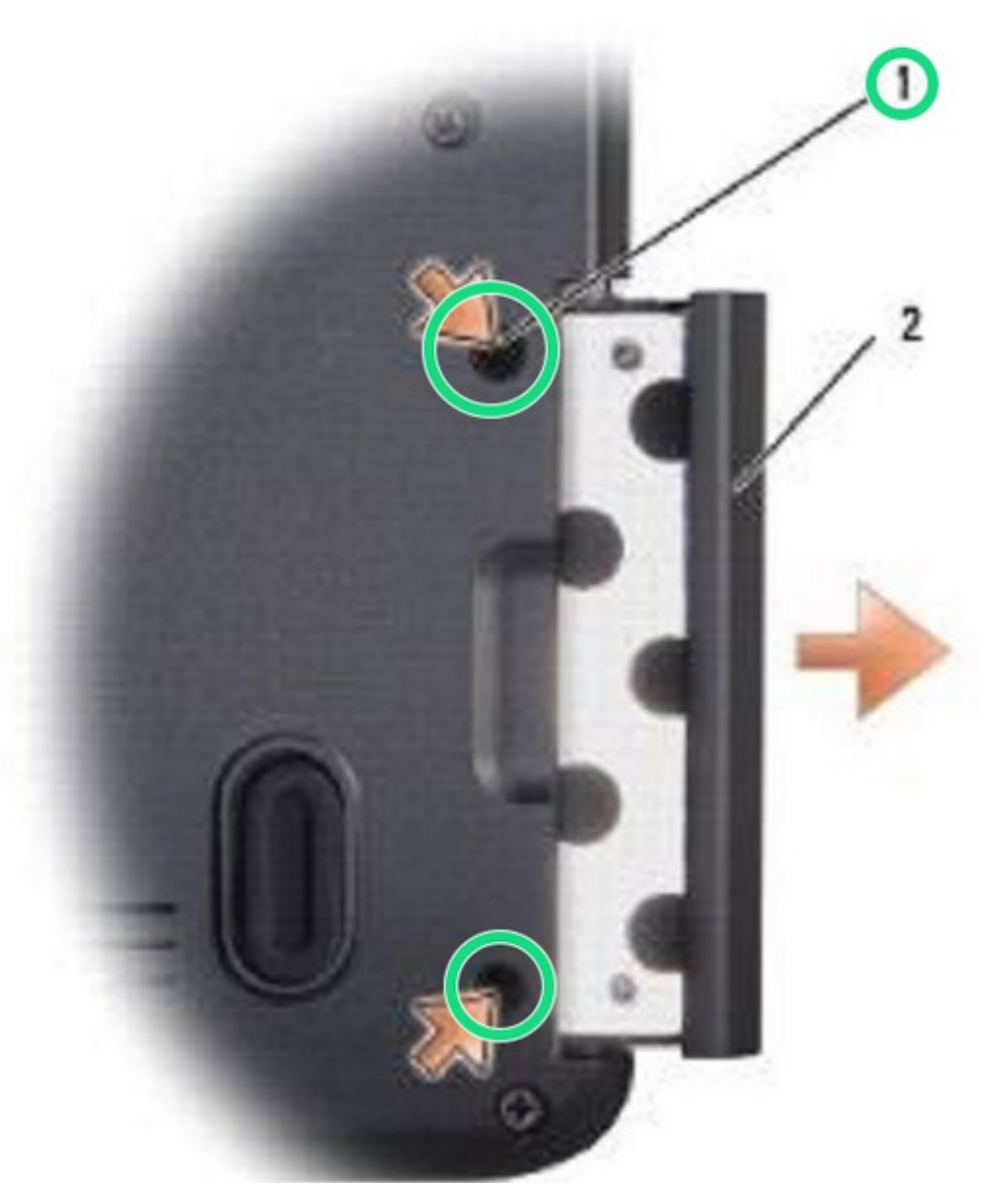


INTRODUCTION


In this guide, we will be showing you how to remove and replace the Hard Drive.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Remove the Screws

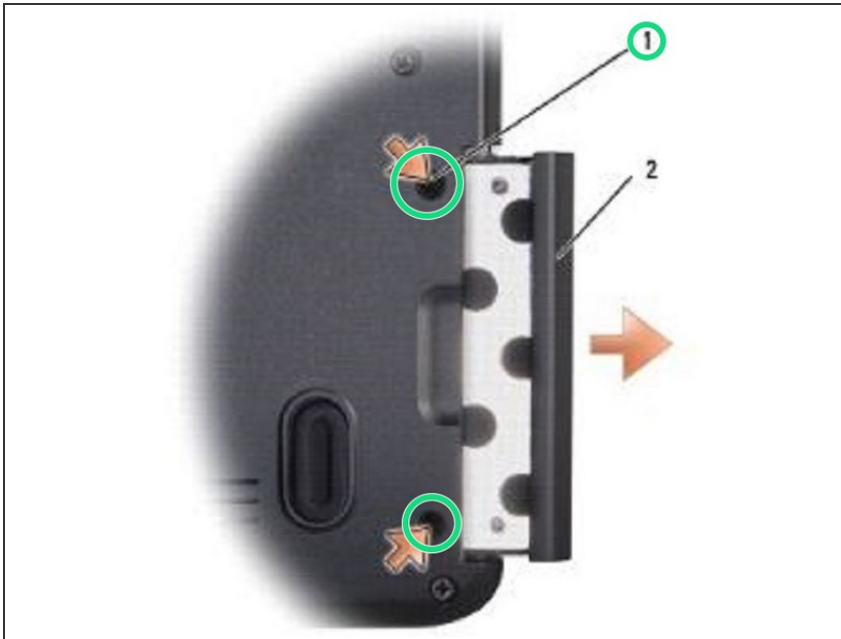

 Follow the procedures in [Before You Begin](#).



- Turn the computer over and remove the two hard drive screws.

Step 2 — Sliding the Hard Drive





- Slide the hard drive out of the computer.

Step 3 — Remove the Screws

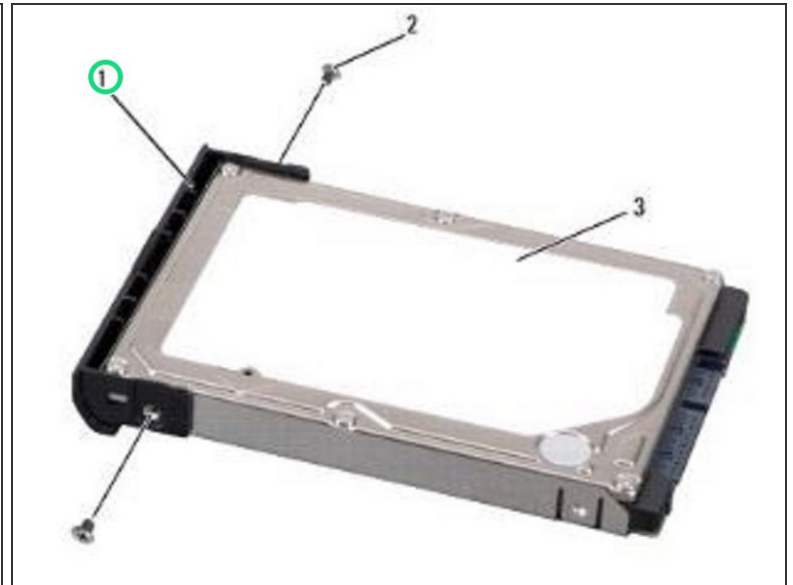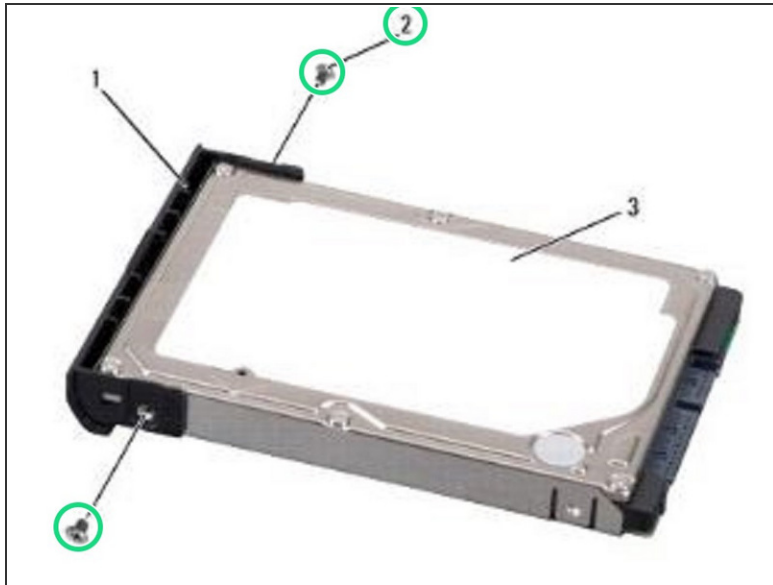

- Remove the two screws (one from each side of the hard drive cover), then pull to separate the cover from the hard drive.

Step 4 — Replace the Hard Drive Cover

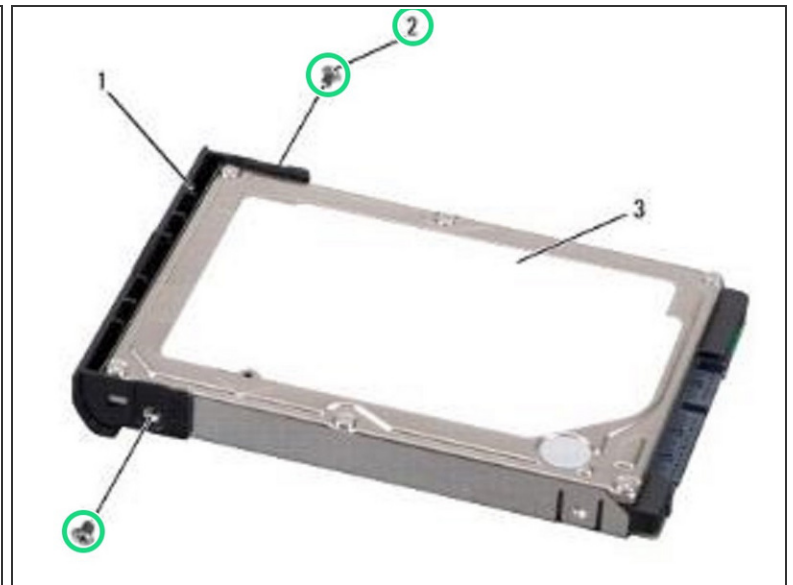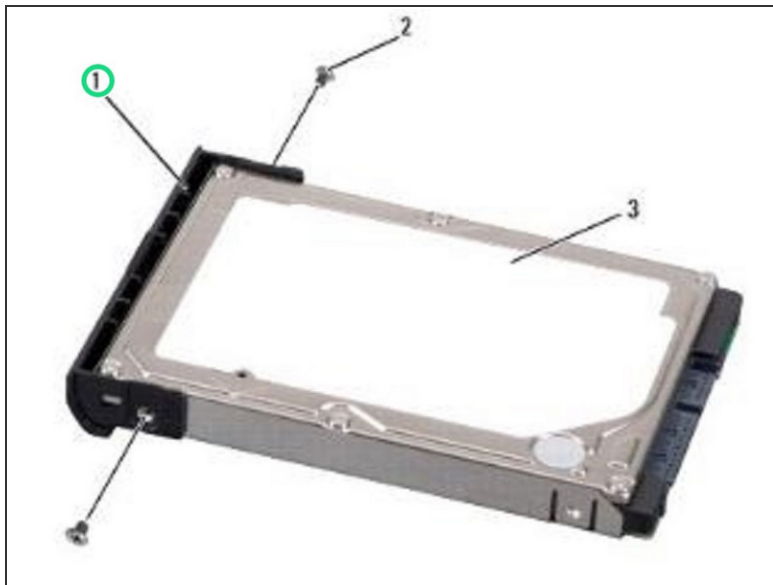


- Replace the hard drive cover and tighten the two screws to secure the cover to the **NEW** hard drive.

Step 5 — Sliding the Hard Drive



- ✦ **NOTICE:** Use firm and even pressure to slide the hard drive into place. Excessive force may result in damage to the connector.
- Slide the hard drive into the hard drive bay until the drive is fully seated.

Step 6 — Replace the Screws

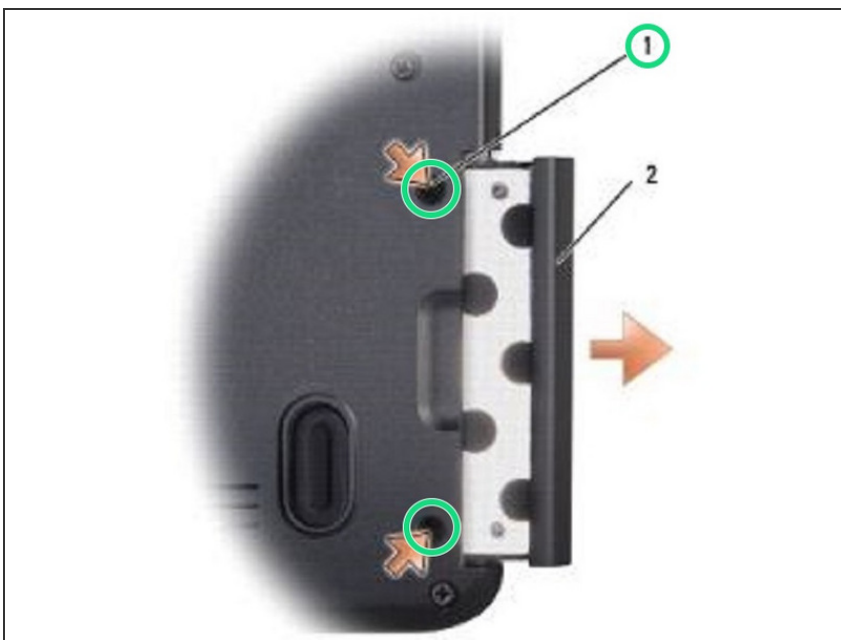

- Replace the two screws to secure the hard drive.