




Dell Inspiron 1546 Battery Replacement

How to replace a broken or malfunctioning Dell Inspiron 1546 battery.


Written By: Terrence15

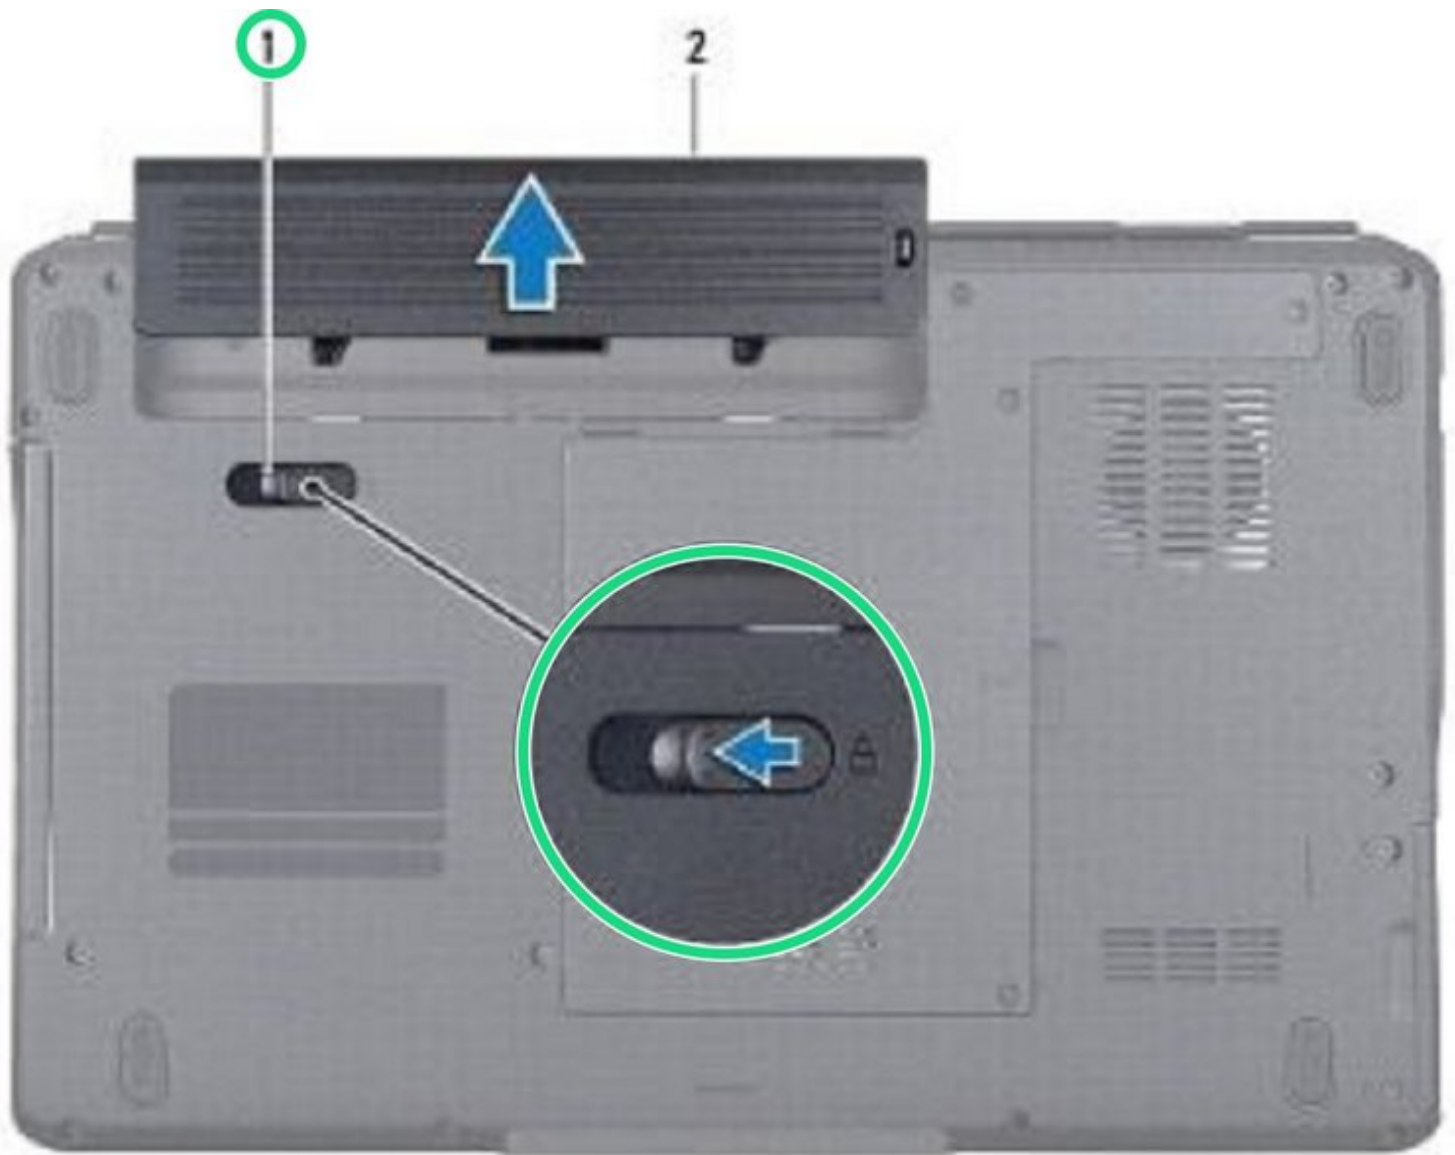

INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

Step 1 — Sliding the Battery Latch

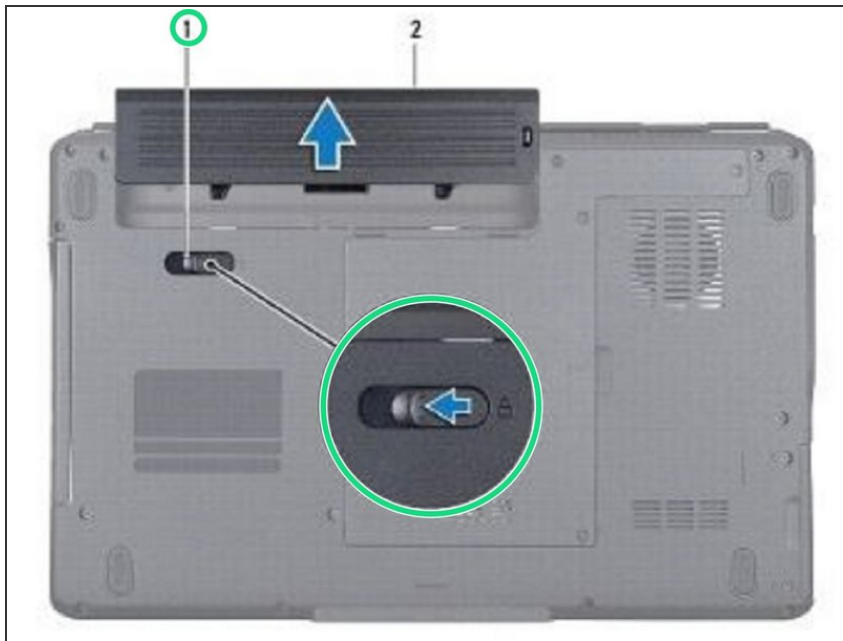


⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in [Before You Begin](#).

⚠ CAUTION: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).


- Turn the computer over.
- Slide the battery release latch to the unlock position until it clicks into place.

Step 2 — Sliding the Battery

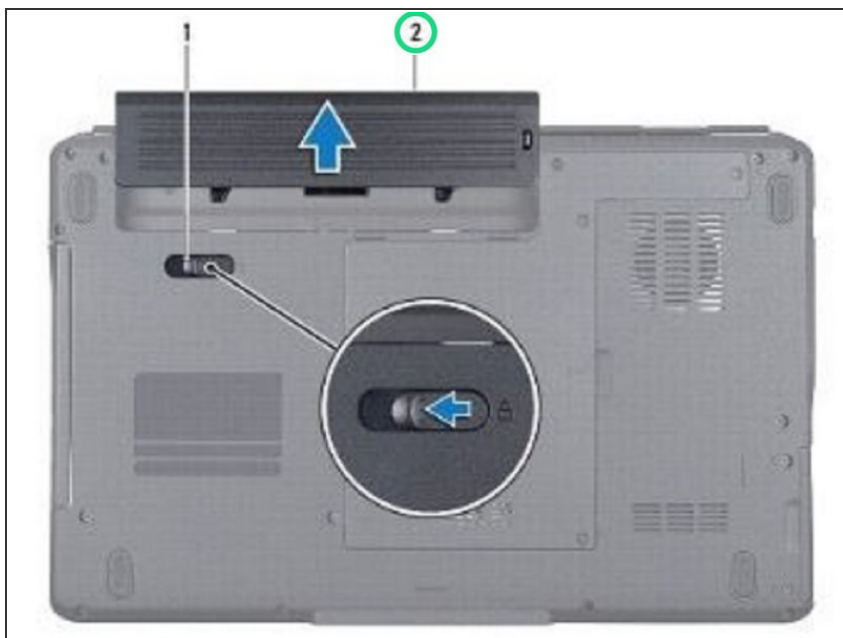

- Slide the battery out of the battery bay.

Step 3 — Slide the Battery

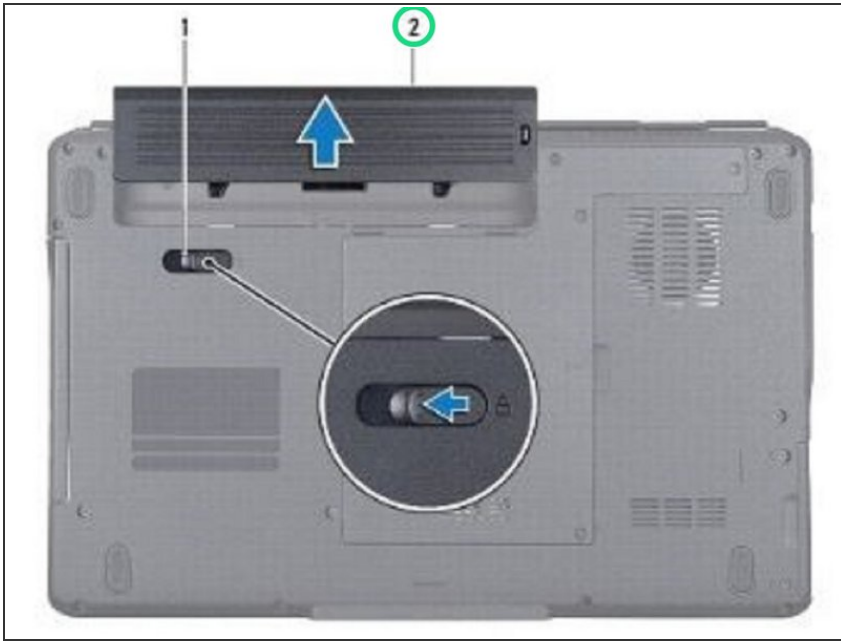

- Slide the **NEW** battery into the battery bay until it clicks into place.

This document was last generated on 2019-05-24 06:19:29 PM.